

SERVICE DATAPHILIPS RADIOPLAYERMODEL 104K

Model 104K is electrically identical with Model 119. Mechanically there are some variations to Model 119.

Refer to Model 119 Service Data Sheet for information under the following headings:-

Circuit Diagram	Alignment
Voltage Analysis	Mains Voltage Adjustment
Parts Lists for:	Specifications
Capacitors	Dial Glass Removal
Resistors	Removal of Inclinator Dial Assy.
Coils	Dial Lamp Replacement

For Dial Cord Layout refer to Model 114 Service Data sheet.

For Components not shown on Circuit Diagram, refer to Model 119 Service Data sheet, except:-

T/C-on/off Switch Assembly	CZ.200.214
T/C Clicker Assembly	CR.450.012
W/C Switch Assembly	CZ.200.029
W/C Clicker Assembly	CR.450.017
Tuning Spindle	CS.351.409

REMOVAL OF CHASSIS FROM CABINET

Remove power plug from socket. Remove the four control knobs, speaker and dial lamps plugs from their respective sockets and release the dial cursor assembly from the dial cord. Remove the four chassis mounting bolts and withdraw the chassis from the cabinet.

The chassis may be replaced by a reversal of the above procedure.