

KRIESLER AUSTRALASIA PTY. LIMITED

12-30 Cawarra Road, Caringbah. P.O. Box 107, Caringbah. Telephone 5-2044

RADIO DATA SHEET No. 101

Model 11-101 is a 5-valve Broadcast Band stereophonic radiogram housed in a timber cabinet, with 13" legs.

RECORD CHANGER

BSR Model UA 25

STYLUS

ST3
Sapphire

SPEAKERS

7 x 5 MSP
750A15 15Ω

P.U. CARTRIDGE

BSR CI ceramic

PRESSURE

6-8 gms.

MAINS SUPPLY.

200 to 250 volts, 50 c.p.s.
(240 V primary tapped at 220 V).

For operation on 40 c.p.s. supply, change power transformer, motor and drive pulley assembly to suitable types.



MODEL 11-101.

AERIAL. In difficult reception areas, or where the directivity of the inbuilt ferrite-rod aerial limits the orientation of the receiver, improved signal pick-up may be achieved by connecting an external aerial to the red lead at the rear of the receiver cabinet.

EARTH. If the mains earth is not a satisfactory radio earth, a separate earth may be connected to the black lead at the rear of the receiver cabinet.

DIMENSIONS. Length 34 $\frac{1}{2}$ ", Depth 15", Height 11 $\frac{1}{2}$ ", (plus legs). Packed weight, 67 lb.

TUNING RANGE. 525 to 1635 Kc/s. I.F. 455 Kc/s.


ALIGNMENT. Conventional.

CHASSIS ACCESS. Remove one No. 6PK screw from back of cabinet near the top centre of radio compartment. Raise the hinged section of cabinet top at rear of station dial scale. Remove one $\frac{3}{16}$ " Whit. screw securing each end of rear upper lip of chassis. Invert chassis as desired, resting it on wood rails running across inside of cabinet. Note that the pick-up lead and the speaker leads may be unplugged when so desired.

DIAL LAMP REPLACEMENT. Remove all control knobs. Invert chassis. Remove the countersunk screw at the centre of each end of the plate securing the chassis to the dial scale assembly. Remove the No. 4PK screw at the centre of each (long) side of the chassis plate. The chassis and dial scale assembly may now be separated for access to dial lamps. Note that by holding securely the dial lamp light diffuser in its correct position, the dial lamp socket may be withdrawn from its mounting hole and the lamp replaced without the necessity for separating the chassis plate from the dial scale assembly.

SPECIAL NOTE RECORD CHANGER. On all occasions of transporting this receiver the record changer transit screws should be tightened to prevent damage to the unit. On installation, the transit screws must be loosened and the record changer deck levelled to ensure correct sound reproduction.

RECORD CHANGER REMOVAL. Remove appropriate section of cabinet back and having unplugged the power cord from the mains supply, disconnect all leads to the changer. With transit screws fully in, reach under the changer and turn the clips on the ends of the transit screws so that they lie vertically. Lift the changer vertically out of its compartment.

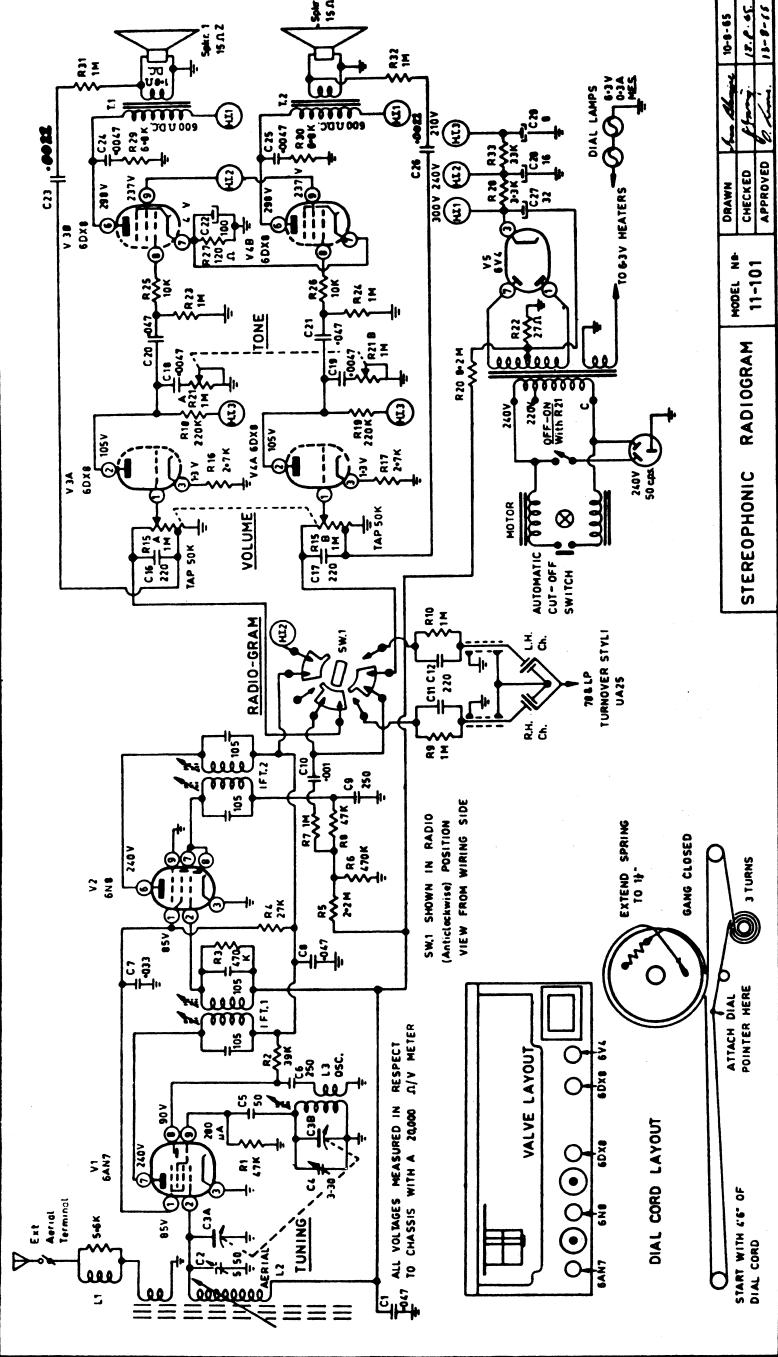

ELECTRICAL PARTS LIST

Number	DESCRIPTION	Number	DESCRIPTION
C 8	.047	C 9	20% 400V Paper Ducon
C 10	.250	C 10	10% 500V Mica Ducon MS
C 11	.001	C 11	20% 600V Styro Ducon
C 12	.220	C 12	10% "
C 16	"	C 16	"
C 17	"	C 17	"
C 18	.0047	C 18	20% 600V Paper Ducon
C 19	"	C 19	"
C 20	.047	C 20	"
C 21	.00mFD	C 21	-10+50% 6.4V Electrolytic
C 22	"	C 22	Philips C426/ARC a
C 23	.0022	C 23	10% 600V Styro Ducon
C 24	.0047	C 24	20% 600V Paper Ducon
C 25	"	C 25	"
C 26	.0022	C 26	-10+50% 300VW
C 27	.32mFD	C 27	600V Styro Ducon
C 28	.16mFD	C 28	"
C 29	.8mFD	C 29	"
MISCELLANEOUS		MISCELLANEOUS	
V1	Valve	6AN7	Mixer
V2	"	N8	I.F. Amplifier
V3a, b	"	6DX8	1st Audio, output
V4a, b	"	6DX8	1st Audio, output
V5	"	6V4	Rectifier
BTS.	Speakers	7x5	15Ω MSP 750A15
BTS.	Transformer, Power	"	Kriesler 18-109
BTS.	Output	"	12K- 5Ω MSP H2407
BTS.	I.F.I. I.F.2	"	Kriesler 24-18
BTA.	Loop Assembly, Aerial	"	Kriesler 14-4082
BTB.	Oscillator Coil	"	Kriesler 14-3804
BTA.	Aerial Matching Coil	"	Kriesler 34-5875
TPB248	Power Connector	"	Beale Pritchard N140
TPB248	Lead Connectors	"	Hoelle, male, H1125
TPB458	Dial Lamps	"	Lamp Holders
TPB458	6.3V -3A Edison Screw	"	EFCCO No. 4