

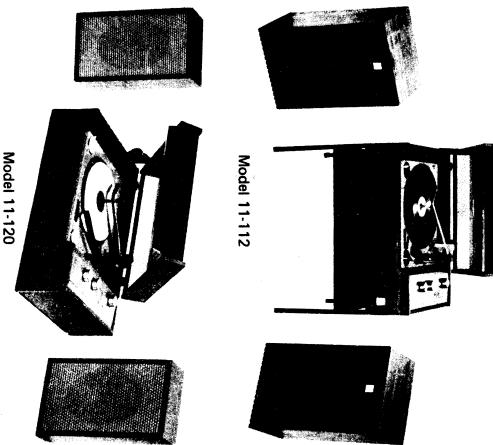
**KRIESLER**  
AUSTRALASIA PTY. LIMITED

120

**RADIO DATA, MODELS 11-112, 11-120****DESCRIPTION**

These models, which are identical except for speaker complement and Record Playing equipment, are solid state Record Players, operated from 240V 50Hz mains.

**NOTE:** The Record Changer Start Control applies power to the changer motor and to the amplifier and the latter, being fully solid state, functions immediately. At the end of the (last) record the Start Control returns from MAN or ON/REJ to OFF in the normal way and this action cuts off power to the amplifier and the motor.

**RECORD PLAYER:****MODEL 11-112**

CARTRIDGE: BSR UA15 - ID OR BSR UA 35  
STYLUS: TYPE ST4 HIGH CAPACITANCE CERAMIC.

SPEAKERS: MODEL 11-112 2x 9" x 6" MAGNAVOX 963T, 8Ω.  
MODEL 11-120 2x 9" x 6" MAGNAVOX 6", 6 PIX, 8Ω.

CAUTION: If adding extra extension speakers, do NOT use a make-shift speaker impedance totalling less than 6Ω otherwise transistor damage may result.

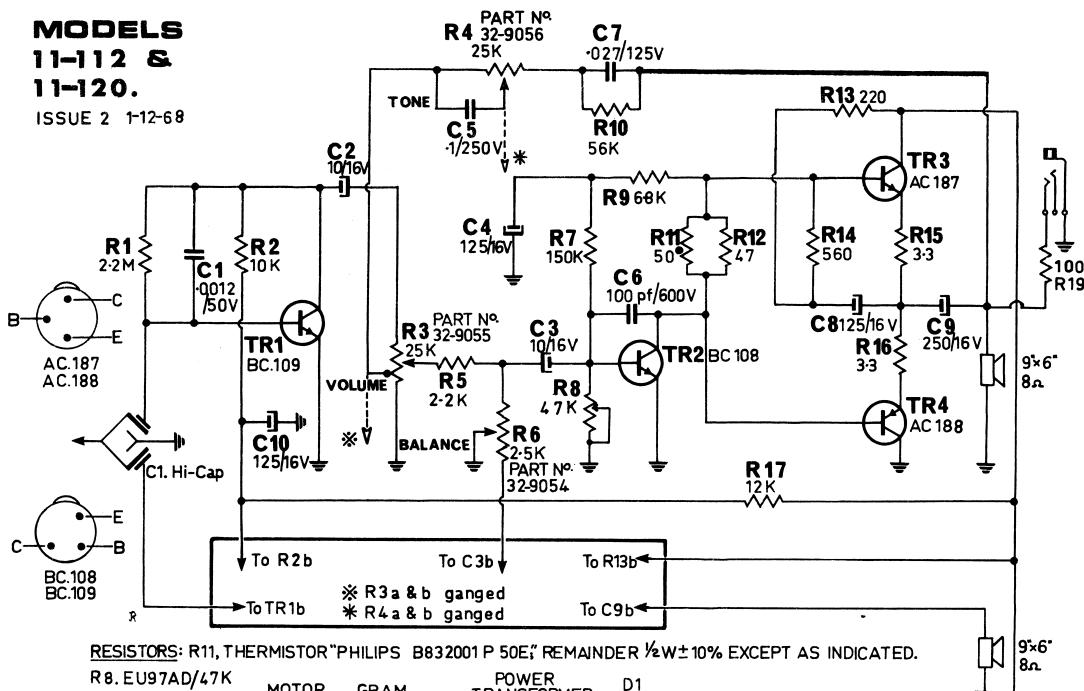
MAIN'S SUPPLY: Nominal 240V 50Hz. If operating from a nominal 250V supply, add a 100Ω 5W. AUDIO POWER OUTPUT: 2.5W per channel. Music Power, RMS Power 1.9W at 1KHz, distortion 10% if both channels are driven simultaneously to full output.

**CHASSIS REMOVAL:** Remove two self-evident screws securing the amplifier escutcheon to the inside wall of the record changer well. Lift out amplifier, unplugging connection to power supply unit if desired.

**CHANGER REMOVAL:** Remove four self-evident screws securing the motor board on which the turntable is mounted. Lift out motor board and changer complete, disconnecting appropriate leads as desired.

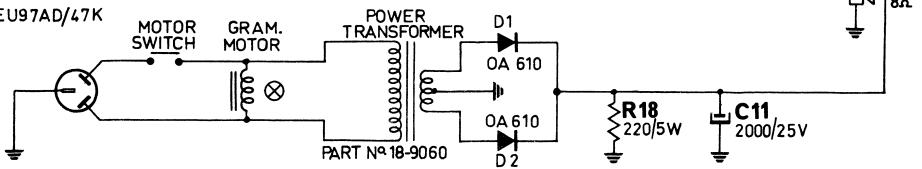
**MODELS  
11-112 &  
11-120.**

ISSUE 2 1-12-68



**RESISTORS:** R11, THERMISTOR "PHILIPS B832001 P 50E"; REMAINDER  $\frac{1}{2}W \pm 10\%$  EXCEPT AS INDICATED.

R8. EU97AD/47K

**PARTS LIST: Electrical.**

**Resistors:** See circuit diagram.  
**Capacitors:** See circuit diagram.

**PARTS LIST. Mechanical  
11-112 11-120.**

|                    |               |
|--------------------|---------------|
| Dial Backing Plate | 16-9046       |
| Escutcheon         | 16-9048       |
| Plug Cover         | 20-8318       |
| Cover Panel        | 20-9061       |
| Knob, Control      | 90-9363       |
| Speaker Plug       | 691-10-1      |
| Speaker Socket     | 733-23-3      |
| Captive Nut        | SNU-1561-17-0 |
| Earphone Jack      | MOJ BISR      |

|                     |          |
|---------------------|----------|
| L.D. Trim           | 16-9059  |
| L.D. Stay Assy.     | 90-8322B |
| Cabinet             | 30-9053  |
| Metal Cal-Tone Arm  | 16-9757  |
| Lid Cover           | 20-9074  |
| Foot                | 20-7106  |
| Rubber Buffer Brown | 40-74    |

|                   |         |
|-------------------|---------|
| 11-120            |         |
| Speaker Enclosure | 30-9066 |
| Shelf             | 30-9068 |
| Table             | 46-9065 |

|                   |         |
|-------------------|---------|
| 11-112            |         |
| Speaker Enclosure | 30-9052 |