
## KRIESLER AUSTRALASIA PTY. LIMITED

43 ALICE ST. NEWTOWN.

Phone: LA. 0400

Series "A" Radio Handbook

11-86 PORTABLE STEREOPHONIC
RADIOGRAM

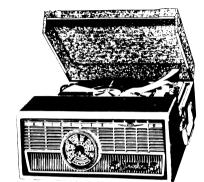

DESCRIPTION; Model 11-86 is a five valve

Broadcast Portable Radiogram with twin, matched stereo amplifiers and speaker systems housed in a single-unit vinyl covered plywood cabinet. It is fitted with a B.S.R. Type RP4 record player and a 'turnover' crystal pick-up cartridge Type TC8S.

A Reversible dial scale caters for all Australian States.

STYLI. Monaural 78's....S35 Standard

Stereo & L.P.....S35 Stereo

DIMENSIONS. Width 14', Depth 16%', Height 6%'. NETT WEIGHT 20% lbs.

MAINS SUPPLY. 200 to 260 Volts, 50 cps. (240V primary tapped at 220V)

AERIAL. An inbuilt plate aerial provides adequate signal reception for areas within a reasonable distance from radio stations. An extension aerial, when required, may be connected to the screw on the base of the cabinet.

EARTH. Since three core power flex is used, no separate earth is required.

RECORD PLAYER AND CHASSIS REMOVAL INSTRUCTIONS.

RADIO CHASSIS. Remove the two gold-plated screws on the rear cover of radio compartment. Remove extension aerial screw on base of cabinet. Pull chassis out of cabinet to the limit of the lead lengths. Disconnect lead to internal plate aerial, mains lead to record player motor, and pick-up plug. The chassis may now be removed up to the length of the power cord. For complete removal, the record player must be removed and cord clamp lifted to allow power plug to pass through cabinet.

RECORD PLAYER. With stylus in neutral position, P.U.arm secured on its rest and record player secured by transit screws, remove the four screws that hold the motor board to the cabinet. Lift out record player to the limit of the leads, disconnect leads and remove completely.

TO REPLACE. Reverse above procedure.

## EXTENSION SPEAKER.

PARTS LIST.

An extension speaker unit is available as an optional extra to obtain additional sterec dimension when the radiogram is operated in large rooms or as an extension speaker in other rooms with complete electrical safety.

This extension unit, Part No. 90-2534, plugs into the socket on the left side of the cabinet and disconnects the left-hand internal speaker. A plug and 15 ft. of cable is supplied with the unit.

<u>WARNING.</u> To protect records, it is advisable to remove them from the turntable after playing.


## KRIESLER AUSTRALASIA PTY. LIMITED K25 & 26.

43 ALICE ST. NEWTOWN.

Phone: LA. 0400.

Series "A" Radio Handbook

11-87 PORTABLE RADIOGRAM.

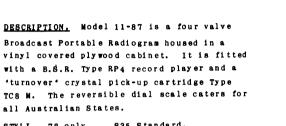

STYLI. 78 only ....835 Standard. 33 & 45 ....835 L.P.



<u>DIMENSIONS.</u> Width 14 °, Depth 16 % ', Height 6 % '. NETT WEIGHT. 20 lbs. MAINS SUPPLY. 200 to 260 Volts, 50 cps. (240V primary tapped at 220V)

AERIAL. An inbuilt plate aerial provides adequate signal reception for areas within a reasonable distance from radio stations. An extension aerial, when required, may be connected to the screw on the base of the cabinet.

EARTH. Since three core power flex is used, no separate earth is required. RECORD PLAYER AND CHASSIS REMOVAL INSTRUCTIONS.

RADIO CHASSIS. Remove the two gold-plated screws on the rear cover of radio compartment.

Remove extension aerial screw on base of cabinet. Pull chassis out of cabinet to the limit of the lead lengths. Disconnect lead to internal plate aerial, mains lead to record player motor, and pick-up plug. The chassis may now be removed up to the length of the power cord. For complete removal, the record player must be removed and cord clamp lifted to allow power plug to pass through cabinet.

RECORD PLAYER. With stylus in neutral position, P.U. arm secured on its rest and record player secured by transit screws, remove the four screws that hold the motor board to the cabinet. Lift out record player to the limit of the leads, disconnect leads and remove completely.

TO REPLACE. Reverse above procedure.

PARTS LIST.

## EXTENSION SPEAKER.

An extension speaker unit is available as an optional extra. This extension unit, Part No. 90-2534, plugs into the socket on the left hand side of the cabinet. A plug and 15 ft. of cable is supplied with the unit.

WARNING. To protect records, it is advisable to remove them from the turntable after playing.

