


682-4371

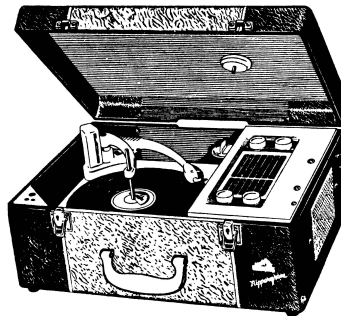

## MODEL DATA SHEET

for

**"HIS MASTER'S VOICE"****AUTOMATIC NIPPERGRAM****MODEL 35-62**

This model is a 5-valve, A.C. dual-wave 3-speed portable auto-radiogram.

**POWER SUPPLY:**

200-250 volts at 50 c.p.s.

**CONSUMPTION:**

50 watts.

**DIMENSIONS:**

	<i>Unpacked</i>	<i>Packed</i>
Width .....	19 $\frac{3}{4}$ "	21"
Height .....	8 $\frac{3}{4}$ "	9 $\frac{1}{2}$ "
Depth .....	15"	17"

**WEIGHT:**

Gross .....	34 lbs.
Nett .....	29 lbs.

**RECEIVER CHASSIS:**

For servicing information, refer to Service Manual,  
Part No. 682-4321, for chassis type 35.

**RECORD CHANGER:**


Collaro type 54. For servicing information, refer  
Collaro service sheet, Part No. 682-3311.

**SPEAKER:**

7" x 5" permagnetic, 4 ohms impedance at 400 c.p.s.

**SPARE PARTS** (other than those shown in chassis manual):

Cabinet, 2-tone Green .....	189-0402
Cabinet, 2-tone Blue .....	189-0442
Cabinet, Maroon .....	189-0412
Cabinet, Maroon and Beige .....	189-0452
Speaker .....	831-0059
Record Changer, type 54 (less cartridge) .....	558-0611
Cartridge, Pick-up (complete with styli) .....	211-0191
Cartridge, Pick-up (less styli) .....	211-0201
Stylus, standard (HS8) .....	611-0281
Stylus, microgroove (HM6) .....	611-0291
Capacitor C24, 250 pF $\pm 10\%$ .....	273-0311
Capacitor C25, 0.002 mF $\pm 10\%$ .....	273-0171
Resistor R16, R17, 27,000 ohm $\pm 10\%$ .....	740-0171

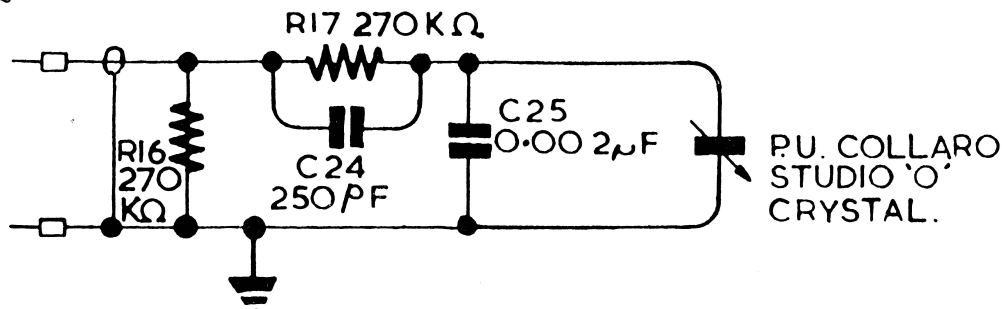**EQUALISER:**

(See overleaf for Dismantling Instructions).

#### DISMANTLING INSTRUCTIONS:

- (1) Disconnect power plug from mains.
- (2) Slacken off the 2 speaker-securing screws by 3 or 4 turns. These screws are located on the right-hand end of the cabinet, one at each end of the speaker grille.
- (3) Remove the 2 woodscrews securing aerial and earth panel to the back of the cabinet and insert panel through hole into interior of cabinet.
- (4) Open lid and remove the 2 lower screws securing chassis to vertical dividing partition.
- (5) Remove the 2 woodscrews from the right-hand edge of the dial panel. These screws are identified by the cup-washers fitted under their heads. The 2 centre screws almost in line with these woodscrews should not be removed.
- (6) The receiver panel with chassis and speaker attached can now be lifted vertically from the cabinet and the mains and pick-up plugs disconnected from the chassis.
- (7) To remove record-changer, unscrew the 2 transit swivel brackets from the inside of the record-changer compartment, unfasten the clip securing the pick-up and mains leads to the cabinet, then lift player unit clear.