

682-5101




MODEL DATA SHEET

for

"HIS MASTER'S VOICE"

AUTOMATIC NIPPERGRAM

MODEL 35-63

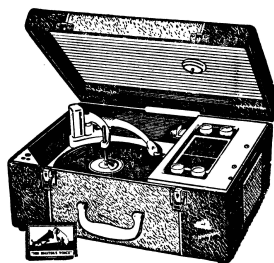

This model is a 5-valve, A.C. dual-wave 3-speed portable auto-radiogram.

POWER SUPPLY:

200-250 volts at 50 c.p.s.

CONSUMPTION:

50 watts.

DIMENSIONS:

	<i>Unpacked</i>	<i>Packed</i>
Width	19 $\frac{3}{4}$ "	21"
Height	8 $\frac{3}{4}$ "	9 $\frac{1}{2}$ "
Depth	15"	17"

WEIGHT:

Gross	34 lbs.
Nett	29 lbs.

RECEIVER CHASSIS:

For servicing information, refer to Service Manual,
Part No. 682-4321, for chassis type 35.

RECORD CHANGER:

B.S.R. type UA8. For servicing information,
refer B.S.R. service sheet, Part No. 682-5071.


SPEAKER:

7" x 5" permagnetic, 4 ohms impedance at 400 c.p.s.

SPARE PARTS (other than those shown in chassis manual):

Cabinet, Red	189-0771
Cabinet, 2-tone Green	189-0751
Cabinet, 2-tone Blue	189-0781
Cabinet, Maroon	189-0761
Cabinet, Maroon and Beige	189-0791
Speaker	831-0059
Record Changer	558-0681
Cartridge, Pick-up (complete with styli)	211-0191
Cartridge, Pick-up (less styli)	211-0201
Stylus, standard (HS8)	611-0281
Stylus, microgroove (HM6)	611-0291
Capacitor C24, 250 pF $\pm 10\%$	273-0311
Capacitor C25, 0.002 mF $\pm 10\%$	273-0171
Resistor R16, R17, 270,000 ohm $\pm 10\%$	740-0171

EQUALISER:

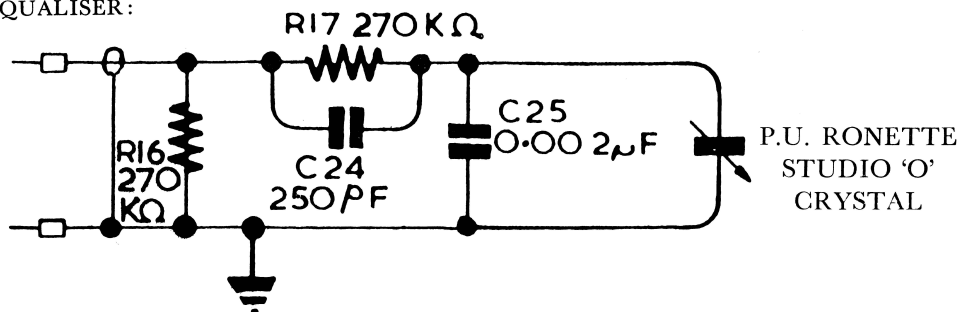

(See overleaf for Dismantling Instructions).

DISMANTLING INSTRUCTIONS

- (1) Disconnect power plug from mains.
- (2) Slacken off the 2 speaker-securing screws by 3 or 4 turns. These screws are located on the right-hand end of the cabinet, one at each end of the speaker grille.
- (3) Remove the 2 woodscrews securing aerial and earth panel to the back of the cabinet and insert panel through hole into interior of cabinet.
- (4) Open lid and remove the 2 lower screws securing chassis to vertical dividing partitions.
- (5) Remove the 2 woodscrews from the right-hand edge of the dial panel. These screws are identified by the cup-washers fitted under their heads. The 2 centre screws almost in line with these woodscrews should not be removed.
- (6) The receiver panel with chassis and speaker attached can now be lifted vertically from the cabinet and the mains and pick-up plugs disconnected from the chassis.
- (7) To remove record-changer, remove the 8 screws from the edges of the motor board, unfasten the clip securing the pick-up and mains leads to the cabinet, then lift player and motor board clear, rear edge first, to avoid fouling handle fixing nuts.