


RADIO RECORDER 350

SERVICE MANUAL

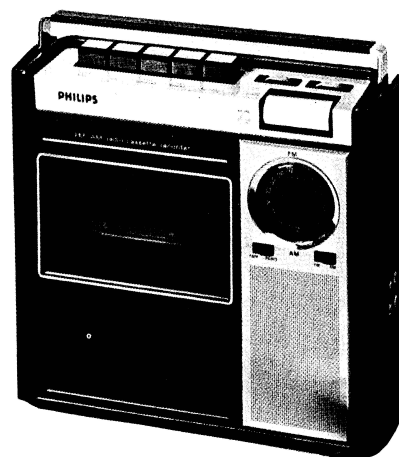

Model 350 differs from model 1570 in colour and styling only.

Reference should be made to the service manual for model 1570 for all electrical and mechanical parts other than those listed in this data, and for all relevant functional, assembly and repair information.

PARTS LIST DIFFERENCES

RECORDER PARTS LIST

Item	Description	Code Number
1	Cassette Case Holder	4802 443 67002
53	Push-button switch assy. (with knobs)	054 303 0262
88	Insert (top face of push-button)	134 304 0310

MECHANICAL PARTS LIST

Description	Code Number
Accessory pouch	616 303 0230
Battery cover assembly	4802 423 47002
Cabinet back assembly	4802 422 37002
Cabinet back metcal.	135 304 0400
Cabinet front assembly	4802 423 57002
Connection panel moulding	115 308 0111
Handle	033 305 0270
Knob, tone and volume (2x)	121 310 0270
Knob, tuning	121 309 0280

PHILIPS

PHILIPS INDUSTRIES LIMITED
Branches in all States



JUNE, 1973