





Schematic has been corrected to show B+ supply for indicator tubes V11 and V12 coming from the +112vdc bus, right end of R47 as indicated in assembly instructions (page36), rather than from +140vdc at the left end of R46.