


Operating Instructions

JB - 1G

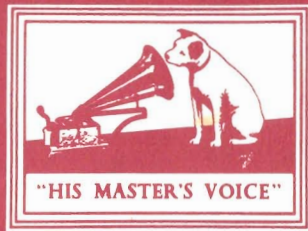

"HIS MASTER'S VOICE"

Transistor Portable Receiver

HOW TO OPERATE

There are two controls with roller type knurled knobs. These are Tuning, and combined ON/OFF Switch and Volume.

To switch on, turn the "VOL. OFF" knob upwards until a click is heard; further rotation increases the volume. To switch OFF, reverse the procedure.

To tune a radio station, turn the Tuning knob until the desired station is indicated by the pointer on the appropriate scale. Then tune until the station is heard clearly.

The receiver is provided with a built-in ferrite rod aerial. This type of aerial has directional properties, and the reception of weak transmissions can often be improved by rotating the instrument for optimum results.

The directional properties of this type of

aerial may also be employed to eliminate or reduce electrical interference. To do this, the instrument should be rotated to a position where the interference is reduced to a minimum and then, leaving it in this position, the desired station should be tuned-in.

EARPIECE

A socket is provided on the left-hand side of the receiver into which the plug of the earpiece may be inserted, for personal listening. The speaker is disconnected when the earpiece is in use.

BATTERY

With this receiver, the battery consumption is increased with an increase in volume level. In order to obtain long battery life, only sufficient volume should be used to give pleasant listening.

A worn-out battery should not be left in the receiver for any length of time, as it may leak and cause serious damage.

To remove the battery, unscrew the captive screw at the back, until it is disengaged. The back of the cabinet may be prised off with a coin, in the slot provided at the bottom. The old battery should be replaced with a new one, Eveready Type 2362. After replacing receiver in leather case, check that receiver has not been accidentally switched "On".

WARNING

To avoid discharging the battery, with its consequent inconvenience, be sure to turn the "VOL. OFF" switch to the "OFF" position immediately after use. The red arc on the control is visible only when the battery is switched on and serves as a warning indicator.

CARRYING CASE

The surface of the carrying case may be cleaned, if this becomes necessary, by sponging with warm water, to which a little soap has been added. It should then be polished with a soft, dry cloth.

MAINTENANCE

Should you require any further assistance or advise, or should your receiver need maintenance or adjustment, communicate with the supplier from whom you purchased the receiver. The facilities of our Service Dept. are at the disposal of your retailer should any assistance be necessary.

"H.M.V." Service Division, located in the Capital City of the State in which you reside, may be able to render assistance under warranty if your regular retailer is unable to do so.

Warranty

Claims under this Warranty should, in the first instance, be made to your "HIS MASTER'S VOICE" Retailer, who should be able to locate the trouble and often apply a quick remedy.

He will also be able to advise you if the fault is due to some part of the installation outside the instrument itself, and not covered by the Warranty.

Your retailer is entitled to make a charge for carriage and packing costs.

If your instrument is located more than three miles beyond a Retailer's business premises a mileage charge may also be made.

TERMS OF WARRANTY

In the event of any defect becoming apparent in this instrument due to either FAULTY MATERIAL or WORKMANSHIP within a period of 90 days from date of delivery, such defect will be rectified, without cost to you for either labour or material, at the premises of the Accredited Retailer FROM WHOM THE INSTRUMENT WAS PURCHASED.

CONDITIONS

- (1) The Warranty is applicable only to the original purchaser who has purchased from an Accredited "HIS MASTER'S VOICE" Retailer at the Company's published retail selling price and any claim must give particulars of the serial number and type, and the date of purchase.
- (2) The Warranty does not cover (a) batteries or accumulators, which are usually guaranteed by their respective makers; (b) damage resulting from incorrect installation or use other than in accordance with the operating instructions issued by the Company; (c) consequential damage.

- (3) The Warranty will be rendered invalid if the instrument is misused or if any unauthorised alteration, modification or substitution of any part of it be made or if the serial number be defaced or altered.
- (4) Should it be necessary to return the instrument, or any part, to the Company or distributor, cost of transportation both ways to and from the Company or distributor must be carriage paid to the destination, the Company or distributor accepting no responsibility for damage in transit.
- (5) If the instrument or any part is returned for any cause not covered by this Warranty, all costs involved, including a charge for inspection and handling, must be paid.
- (6) IF ANY SERVICE UNDER THIS WARRANTY IS GIVEN BY THE COMPANY OR DISTRIBUTOR AT THE USER'S HOME A CHARGE WILL BE MADE FOR TRAVELLING EXPENSES AND LABOUR.
- (7) No Retailer has any authority to vary the terms of this Warranty.

TRANSISTOR WARRANTY

The transistors used in this instrument are guaranteed by the transistor manufacturer for a period of three calendar months from the date of purchase of the instrument. This Warranty is given only in respect of faulty workmanship and material and does not cover misuse or consequential damage.

Claims under the transistor warranty will only be considered if the transistor is returned, with details of the Model No. and Serial No. of the instrument from which it was removed, to the Company or Distributor through the Accredited Retailer from whom the instrument was purchased.

NOT TRANSFERABLE

PART No. 683-5992

E.M.I. (AUSTRALIA) LIMITED (INCORPORATED IN N.S.W.) **6 PARRAMATTA RD., HOMEBUSH, N.S.W., 2140**