



ECLIPSE RADIO PTY. LTD.

(A DIVISION OF ELECTRONIC INDUSTRIES LTD.)

11-21 STURT STREET, SOUTH MELBOURNE

TECHNICAL BULLETIN

Bulletin : BKP-3

File : Receiver, Portable

Date : 28/3/47

SUBJECT:--INSTRUCTIONS FOR OPERATION . . OF MODEL "BKP" 5 TUBE PORTABLE
RECEIVER FROM INTERNAL OR EXTERNAL BATTERIES.

The Model "BKP" is designed so that it can be operated either from the Batteries which are contained in the cabinet, or from a set of batteries which may be connected to the receiver and situated outside the cabinet.

Operation From Internal Batteries : The 6 pin plug assembly (A107/635) with the knotted cord attached is inserted into the 6 pin socket through the hole in the left-hand end of the cabinet and covered by a rubber insert when operating from internal batteries. On this plug the rear of contact pins numbers 1 and 2 are bridged with tinned copper wire and soldered, also pins number 4 and 5 are bridged and soldered. The receiver is in this condition when delivered from the factory.

Operation from External Batteries: If it is desired to operate the receiver from external batteries, a lead and plug assembly (PA406) may be obtained from the factory. This assembly has, on one end, three small plugs which are to be plugged into the corresponding sockets of the external batteries. The other end of the lead to which is connected a 6 pin plug, is to be inserted into the 6 pin socket on the left hand end of the receiver.

To gain access to this socket, the rubber insert and the 6-pin plug for internal battery operation must be removed.