


NATIONAL R/G MODEL DG-897 H

SCHEMATIC DIAGRAM

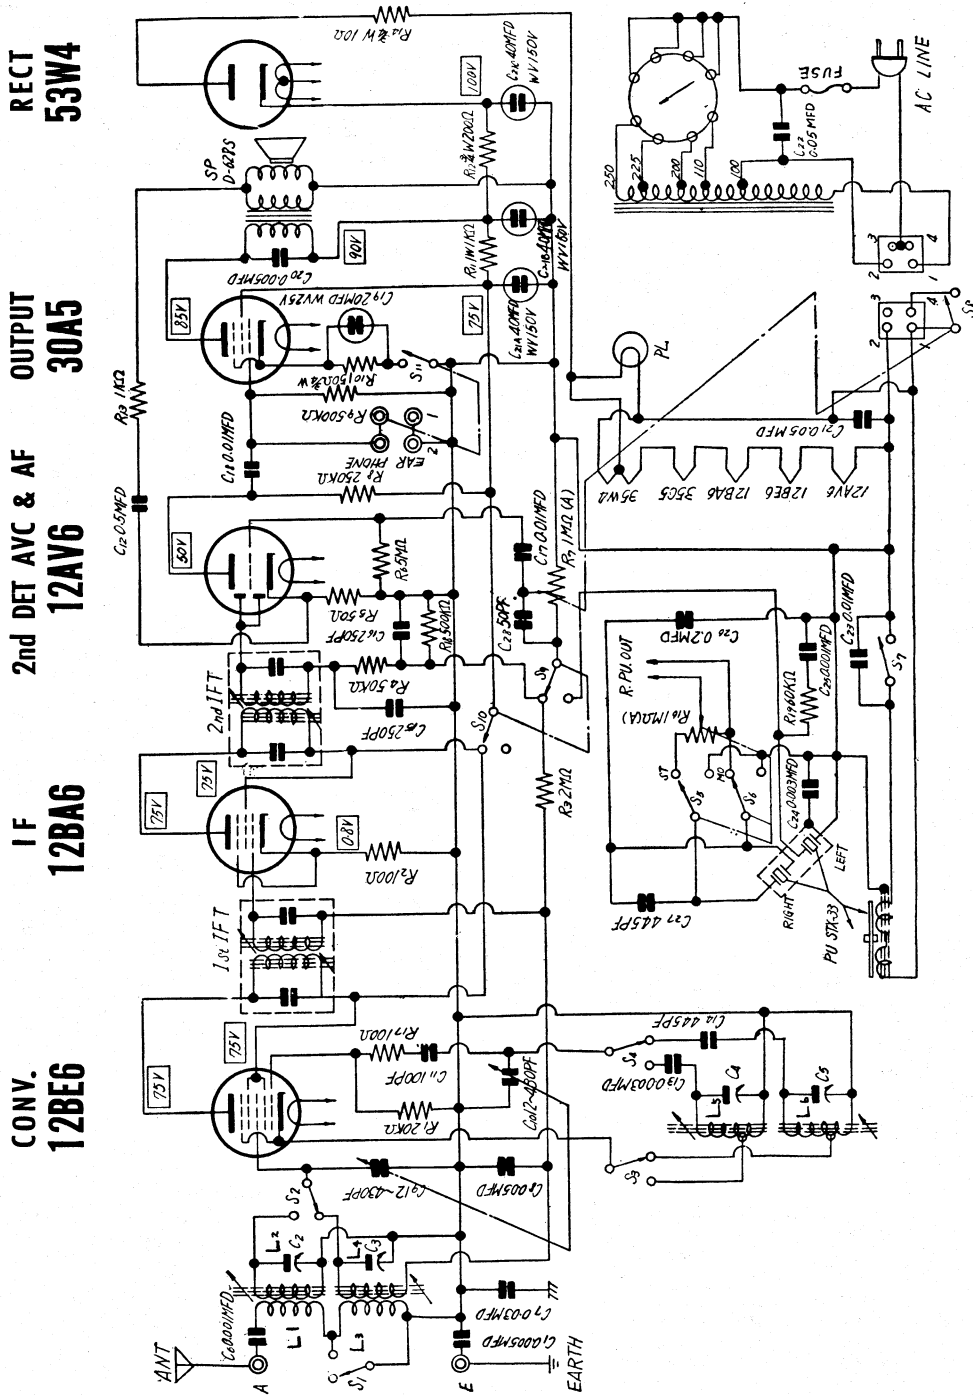

Notes:

1. Band selection switch (S₁, S₂, S₃, S₄) is now at "MW" position, and is changed to "SW" in the opposite direction.
2. Switch (S₉, S₁₀) is now at radio position, and can be changed to "PHONO" in the opposite direction.