


HG-720 SCHEMATIC DIAGREM


 
NATIONAL MODEL. HG-720.

N90.

2SA103CA 0A70Y 2SA103CA 2SA102BA 0A70X 2SB173B 2SB175B 2SB172A×2

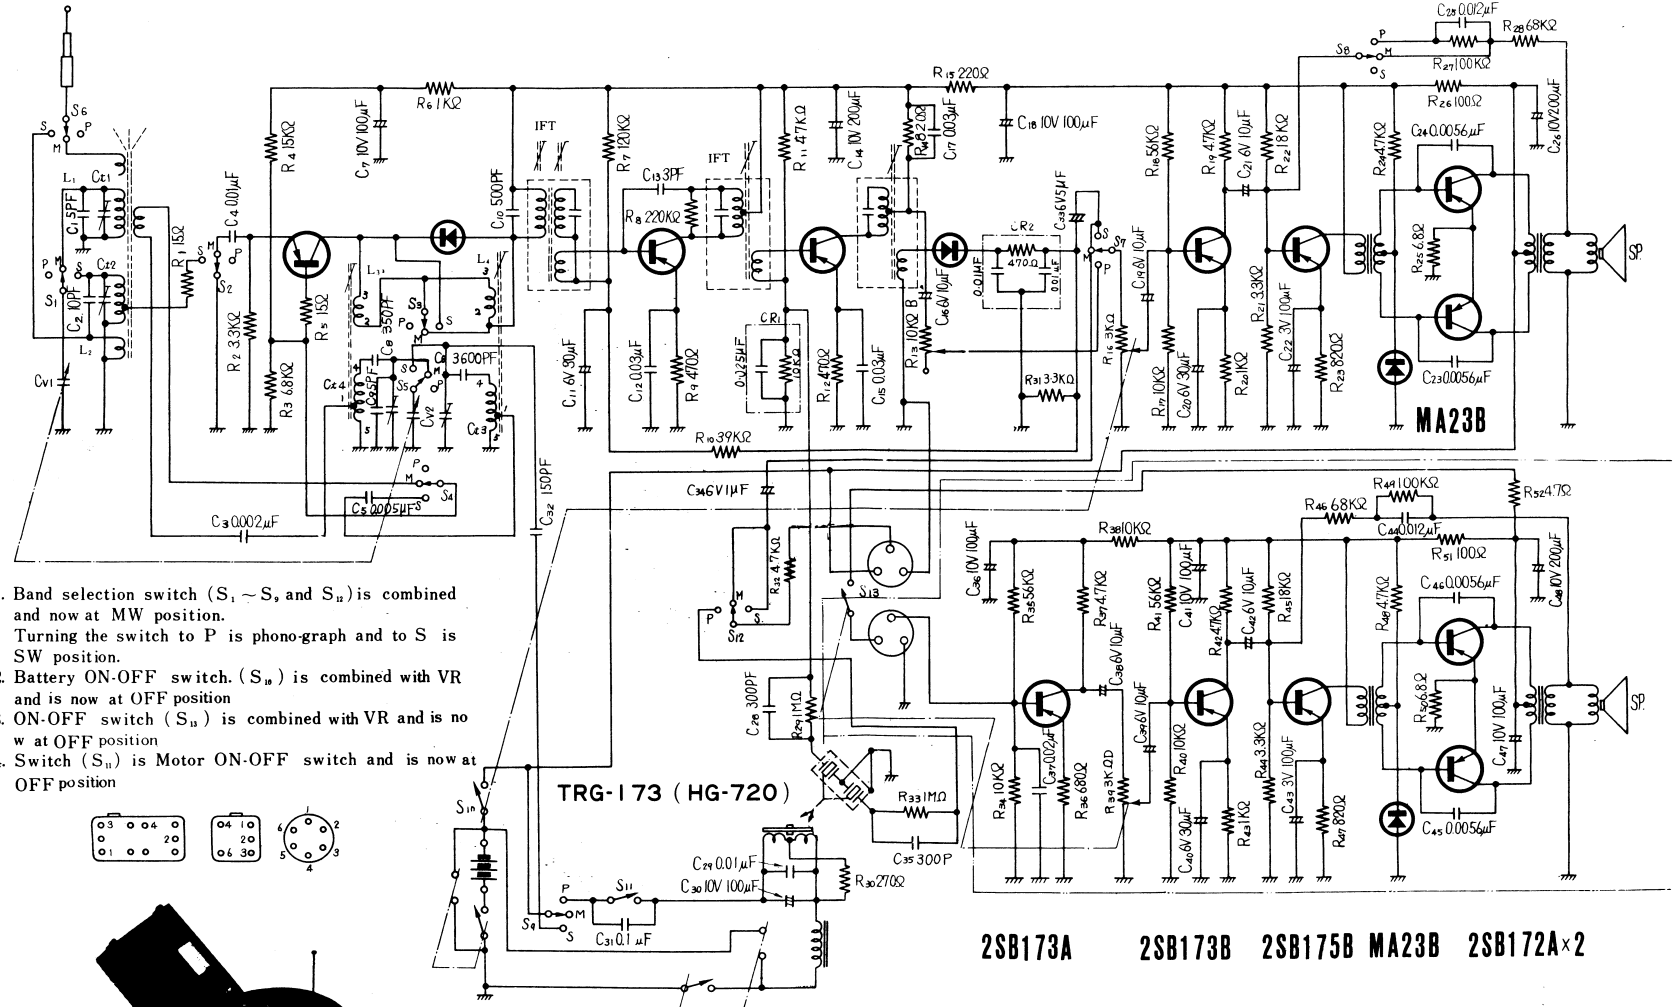

1. Band selection switch (S₁, S₂, and S₁₁) is combined and now at MW position. Turning the switch to P is phono-graph and to S is SW position.
2. Battery ON-OFF switch (S₁₀) is combined with VR and is now at OFF position
3. ON-OFF switch (S₁₁) is combined with VR and is now at OFF position
4. Switch (S₁₁) is Motor ON-OFF switch and is now at OFF position

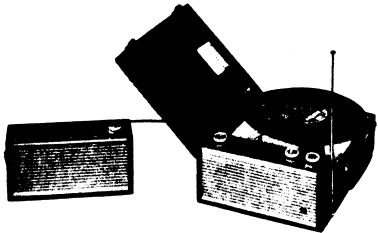

2SB173A 2SB173B 2SB175B MA23B 2SB172A×2

