
LEADER TEST INSTRUMENTS

SCHEMATHEEK Beh. T. Huitermans

Postbus 4228

MODEL LSG-10

SIGNAL GENERATOR

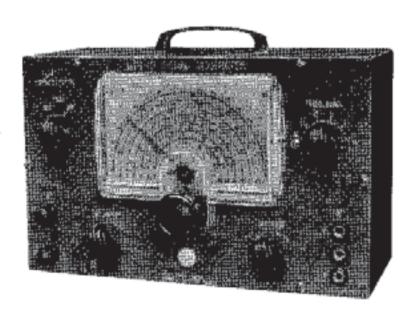

OHMATSU ELECTRIC CO., LTD.

850, TSUNASHIMA-CHO, KOHOKU-KU, YOKOHAMA, JAPAN.





MODEL LSG-10 SIGNAL GENERATOR

The **LSG-10** is a compact and hanby high quality instrument for the radio service benchss, amateur constructor, and for instruction. It is light in weight, occupies small space, and is built for maximum service.

SPECIFICATIONS :	Frequency	Range	120	KC	10	260 MC	
	a nd	A	120	КÇ	of	320 KC	
		В	320	KC	to :	1000 KC	
		С	1.0	MC	ło	3.2 MC	
		D	3.2	МÇ	to	11 MC	
		Е	11	МC	to	38 MC	
		F	37	MC	to	130 MC	
	Calibrated	Harmonics	120	МÇ	to	260 MC	
R. F. Output	Over 100,000 microvolts						
R. F. Control	Variable with 2 taps						
Modulation Freq.	Approximately 400 cps						
A. F. Output	2 to 3 volts						
A. F. Input	Approximately 4 volts						
Tube Complement	R. F. Osc-	Buffer	12BH7				
	A. F. Osc-	Amplifier	6AR5				
Power Source	volts,	50/60 cps	12 wat	ŧs			
Size & Weight	6½″×10	"×4"5"	6 lb c	ippr.			
	(250×16	0×115 mm 2	2.7 kg)				

DESCRIPTION: **A.** Radio-Frequency Section. A 12BH7 is used as a combined radio frequency oscillator and buffer. One triode section is used as a Colpitts oscillator and the other triode is used for a buffer to isolate the load from the frequency determining portion. The output voltage is continuously variable with two taps, High and Low.





B. Audio Section. A 6AR5 is used as a 400 cycle generator. The output can be used either as an internal modulator or an audio source for external use. When frequencies other than 400 cycles are to be used for modulation, the tube becomes an amplifier.

The frequency calibration can be depended upon to 2%, directly from the scale. However, when a higher degree of accuracy is desired, the generator must be calibrated using a heterodyne frequency meter or other source of accurate frequencies, and calibrated using the logging scale on the dial.

The generator is designed for on volts, 50/60 cps, and care should be taken that a DC source is not used.

OPERATION: Attach line plug to the volt AC power fine. Insert the plug of the center lead of the output cable into the "H" output jack and the shield plug into the "G" jack. The center lead and shield clips should be connected to the ANT and GND terminals respectively, of the receiver under test. Set the generator to the desired (requency by turning the center knob and "FREQ. BAND" switch. Set the "MOD" switch to "INT", and turn the AC switch (lower left) clockwise. A 400 cycle tone should be heard from the speaker of the receiver when the latter is tuned to the generator frequency. Suitable R. F. autput can be obtained by adjusting the "R. F. FINE" knob, and also by changing the output tap to "L". The input to the receiver from the generator should be as low as posssible to avoid overloading the tubes in the receiver. Excessive inputs cause two resonance points to appear and proper alignment or adjustments are impossible.

External modulating frequencies may be applied by turning the "MOD" knob to "EXT" and the audio input to the AF binding posts. For audio testing, the 400 cycle output is avilable at the same binding posts by turning the "MOD" swich to "INT", and the output may be varied by the AF IN/OUT control.



€} ©⊕ W RA FINE ww 8 SE OUT PUT Postbus 4228 5604 EE Eindhoven T. Hultermans ≨ ₩₩

SCHEMATIC WIRING DIAGRAM







This manual is provided free of charge from the "Boatanchor Manual Archive", as a service to the Boatanchor community. It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than **BAMA** for this manual, you paid someone who is making a profit from the free labor of others, without asking their permission

You may pass on copies of this manual to anyone who needs it.

But do it without charge.

Thousands of files are available without charge from **BAMA**. Visit us at: http://bama.sbc.edu

Real radio's have tubes! Keep them glowing!!

File credits:

T. Hultermans

