



- BAND SELECTOR SWITCH  
S3 IN POSITION**
1. DF
  2. BC
  3. BAND 1 (1.5 - 4 MC)
  4. BAND 2 (4 - 11 MC)
  5. BAND 3 (11 - 22 MC)