AIR CHIEF

CAR RADIO DIVISION, ELECTRONIC INDUSTRIES LTD.

ASTOR HOUSE: 161-173 STURT STREET, SOUTH MELBOURNE Phone: 69 0300

SERVICE DATA

MODEL PN-C12P and MN-C12P

PUSH BUTTON AND MANUALLY TUNED


11 TRANSISTOR 12 VOLT CAR RADIO RECEIVERS

Especially designed for Holden Model "HK"

WARNING: BATTERY CONNECTION OF INCORRECT POLARITY WILL DAMAGE THE RECEIVER.

BATTERY LEAD OF THESE RECEIVERS MUST BE CONNECTED TO THE POSITIVE TERMINAL OF SUPPLY

CONNECT NEGATIVE SUPPLY LEAD TO RECEIVER CHASSIS.

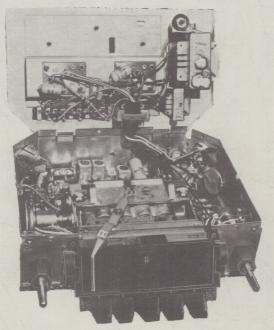

SETTING THE PUSH BUTTONS

- 1 Unlock the push buttons by pulling outward.
- 2 Tune a desired station with the manual tuning knob.
- 3 Press one of the push buttons fully in.
- Repeat the above procedure to set remaining four buttons.


INTERFERENCE REDUCTION SWITCH

Interference and static which originates in power lines, trams, welders, electrical storms, etc., may be reduced through the use of the Interference Reduction Switch.

To reduce the interference, make certain the radio is tuned accurately to the station, then turn the rear knob on the left of the dial anti-clockwise. As an indication of this position a blue bar is illuminated above the set "ON" indicator.

The switch should be returned to the clockwise position to obtain the best sound quality under good reception conditions. It should be noted that the switch over-rides the action of the tone control which is in-operative whilst the Interference Reduction Switch is in the anti-clockwise position.

Information contained herein must not be reproduced without prior written permission from Radio Corporation Pty. Ltd.

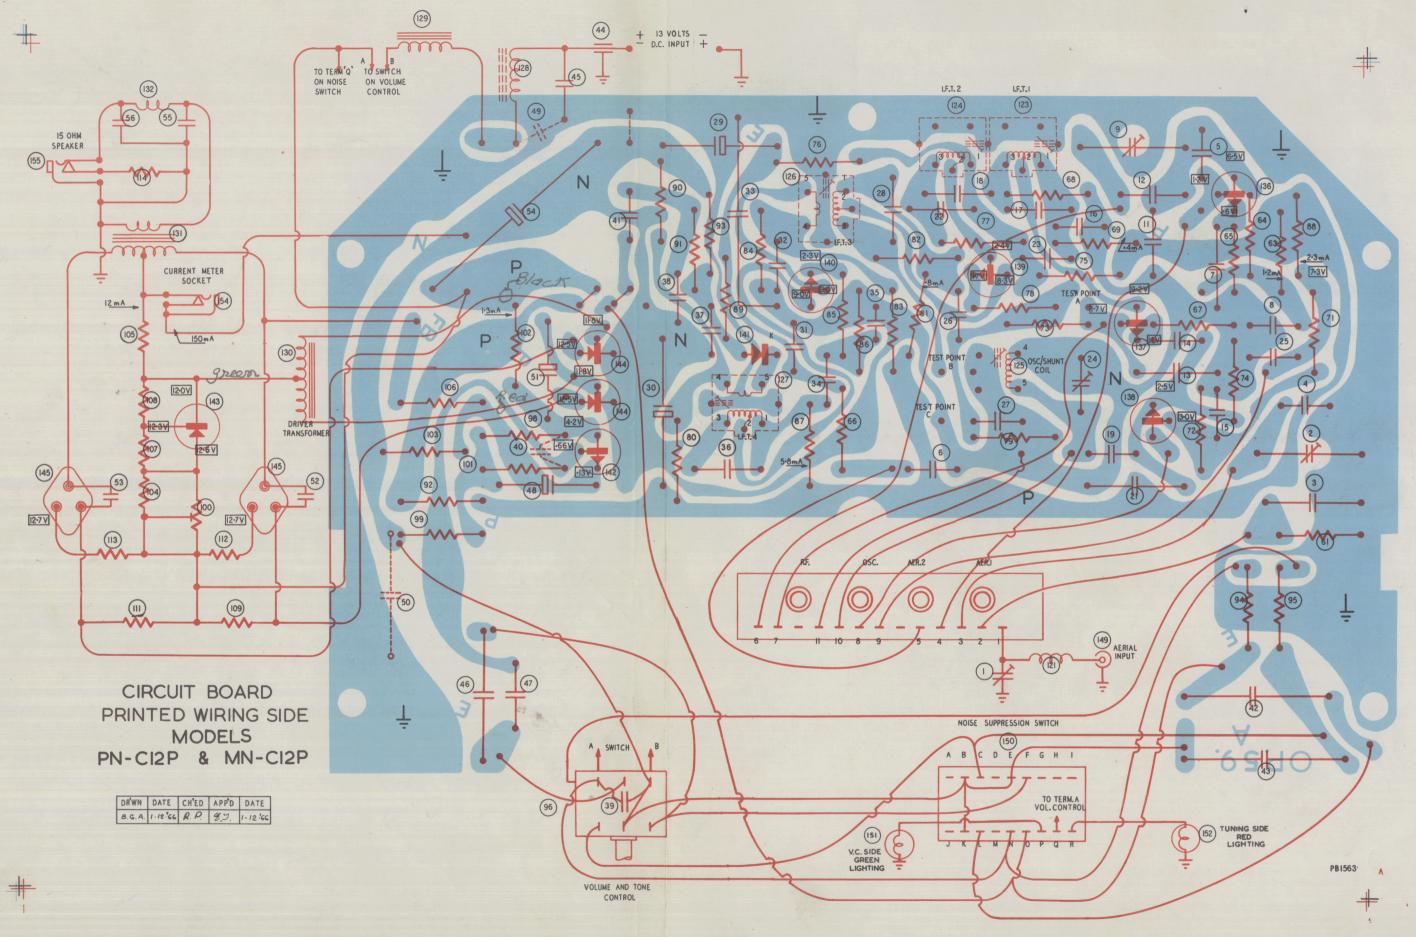

MECHANICAL

```
DESCRIPTION
PART NUMBER
                    Heat Sink (1) power transistors
Heat Sink (1) temp. comp. transistor
7111-036-01
7111-007-01
                    Heat Sink (1) temp. comp. transistors
Socket (2) power transistors
Gasket (2) mica, power transistor
Screw (4) 3/8" x No.6 Phillips Hd., power
7222-036-01
7120-049-01
7201-577-17
                    transistor
                    Bush (4) insulator, screws
Bracket (1) current measuring socket mount
7031-050-01
7027-622-01
                    Washer (1) flat bakelite, socket mount
Washer (1) formed insulator, socket mount
Insulator (2) glass, transistor, capacitor and
7261-227-04
7263-002-02
7120-026-01
                    diode mount
                    Pin (19) circuit board terminations.
Terminal Strip (1) 9 lug
7167-058-01
7231-143-01
7060-022-02
                    Contact (4) circuit board links
                    Shield (1) tuner terminals
Socket Body (3) lamps
7215-095-01
7222-115-01
                    Contact Eyelet (3) lamp
7086-095-01
7031-146-02
                    Spacer (2) lamp sockets
                    Clip (1) lamp socket
7055-532-01
                    Spacer (2) volume control and tuning
7150-901-03
                    spindle bushes
                    Washer (2) shakeproof, 3/8" int.
7262-024-02
7055-412-01
                    Contact (2) tuner frame to can top
                    Retainer (1) battery lead entry Bush (1) lead retainer
7185-021-02
7031-009-01
                    Spacer (1) choke mount
Speednut (2) trans. mount
7169-636-01
7152-751-01
7201-526-14
                    Screw (2) 3/8" x No.4 Phillips csk.hd., trans.
                    mount
                    Screw (12) 1/4" x No.6 Phillips csk.hd.,
7201-533-11
                     various
                    Screw (17) 1/4" x No.4 Phillips pan. hd.,
7204-576-15
                    various
                    Screw (2) 5/16" x No.8 BA csk.hd.,
7196-033-12
                     suppression switch
7086-118-02
                    Eyelet (2) suppression switch, spacer
                    Shield Plate (1) leads, top front of tuner
Spindles and Bush Assy. (1) complete, includes
7027-57-1-01
7224-377-04
                    tuning and switch spindles, pinion shaft and yoke assy, trunnion, mount bush and circlip. Pinion Shaft and Yoke Assy. (1)
7224-378-01
7407-001-01
                    Trunnion (1)
7031-066-01
                    Bush (1)
                    Circlip (1)
7055-366-05
7005-064-01
                     Background Assy.
                    Dust Shield
7169-677-01
7201-577-12
                    Screw (2) 1/4" x No.6 Pan Hd.. shield
7124-285-03
                    Knob (1) aerial trimmer
7124-366-01
                    Knob (5) push button
                    Dial Reading (1)
Light Filter (2) green
Screw (4) 1/4" x No.4 pan. hd. light filter
7070-088-21
7091-017-02
7201-576-12
                     and background
                     Lead - battery
4077-238-03
                     includes:
                                Lead 24" required
1169-052-04
                                Shroud (1)
7291-003-01
7244-003-01
                                Terminal (1)
```

OPERATION OF OUTPUT TRANSISTORS AS MATCHED PAIRS

The type AT1138 transistors are operated in matching pairs, replacements MUST be made accordingly and NOT as single units.

Matched pairs as used in this receiver are identified by a colour dot or stripe or a letter stamped on to the top of the transistor body. Various batch colours or letters are in use. Transistors which have different batch idents.must not be operated together. A matched pair of AT1138 transistors are supplied as: 2-AT1138 Part No. 4128-004-02.

REPLACEMENT OF OUTPUT TRANSISTORS

When refitting or replacing transistors check that the mount positions and faces are clean and free from dust, grit or metal particles.

Smear a thin film of silicone compound, Part No. 1036-001-09, on both sides of the mica and lead washers, also mount face of transistor and chassis.

Fit the insulating ferrules to the screw holes then fit mica washer, lead washer and transistor. Fasten each transistor securely with two $\frac{1}{2}$ " No.6 screws.

NOTE: Some batches of type AT1138 transistors have a thinner base flange than usual. Where these are fitted, the lead washer is deleted and the mount screws shortened to $\frac{3}{8}$ ". Part No. 7201-577-04 Screw (2) $\frac{3}{8}$ x No.6

OPERATION OF DRIVER TRANSISTORS AS MATCHED PAIRS

The type AX1130 are operated in matched pairs, replacements MUST be made accordingly and NOT as single units.

Matched pairs as used in this receiver are identified by a batch "letter" printed on the side of transistor housing. Transistors with different "letters" must not be operated together.

A matched pair of AX1130 transistors are supplied as: - 2-AX1130, Part No. 4128-102-01.

MEASUREMENT AND ADJUSTMENT OF OUTPUT TRANSISTORS COLLECTOR CURRENT

0-1 Amp. DC. Leads terminated with Jack Plug, Part No. EQUIPMENT Current Meter: 7171-015-02, positive terminal lead to tip contact.

Supply Source: 13.0V DC.

Connect supply leads, negative lead to receiver chassis. Connect speaker CONDITTIONS

to receiver socket adjacent to battery lead entry.

No signal applied to aerial socket. minimum position Volume control:

Connect meter to receiver socket located near speaker transformer


on top lid.


- Switch receiver "ON" and allow to stabilize for at least five minutes.
- Adjust the bias potentiometer (circuit No.100) to obtain a reading of 150mA.

NOTE: If the supply source is below 13.0V DC the meter readings are to be set as follows: 12.5V DC. input - 120mA meter indication 12.0V DC. input - 85mA meter indication

NOTE: No further adjustment of the bias should be necessary unless the output or driver transistors or associated componentry are replaced.

CONNECTION OF A FADER CONTROL FOR USE WITH FRONT AND REAR SPEAKERS

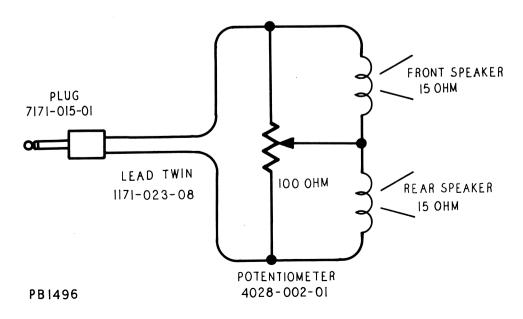

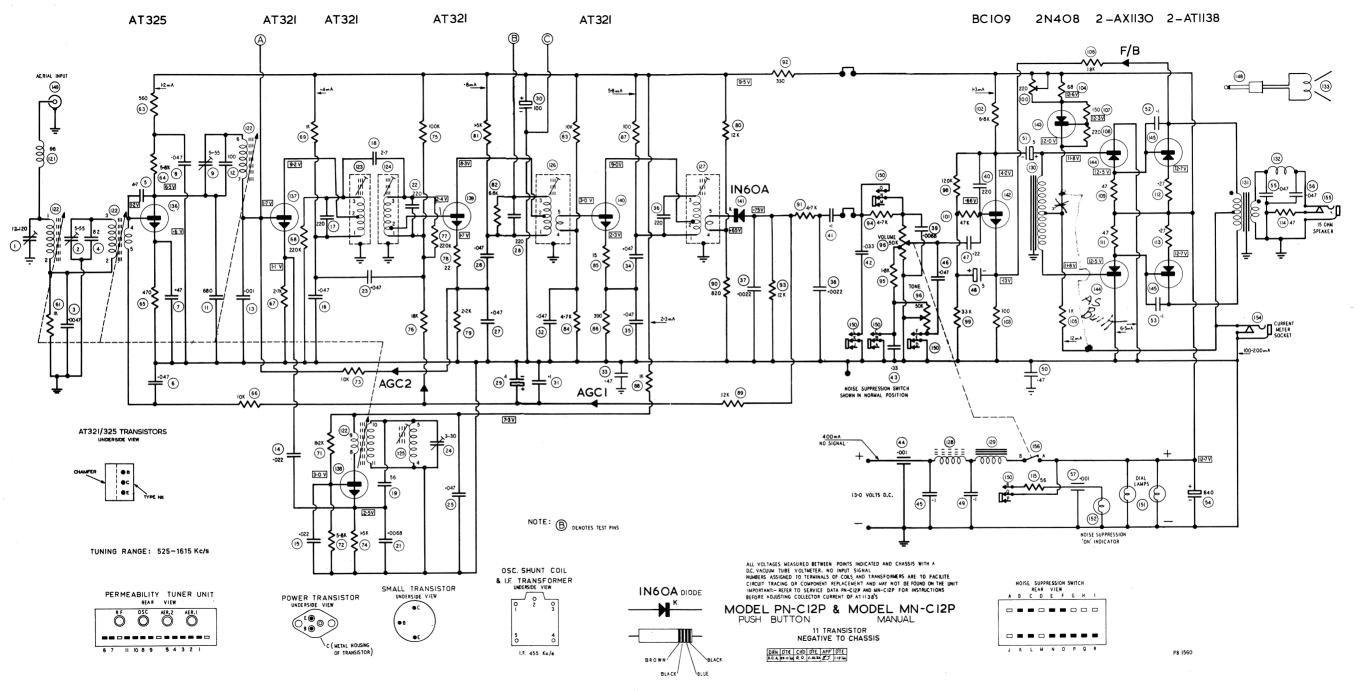

MISCELLANEOUS PART NUMBER

120				
121	Choke - 6.	8uH	4048-032-01	
122	Permeabili	Permeability Tuner Unit - complete,		
	PUSH BUTTO MANUAL		4050-047-05 4050-048-05	
	tuners st of the	Iron sleeve (3)	4065-037-01	
follo		Iron sleeve (1) oscillator	4065-038-01	
parts	•	Iron Core (4)	4065-039-02	
		Coil Assy.	4036-053-01	
	includes:			
		Aerial Coil	4036-057-01	
		Aerial Transformer	4043-033-01	
		R.F. Coil	4036-057-01	
		Ösc.transformer	4043-033-01	
123	No.1 I.F.	Transformer - Yellow/black	4044-032-01	
124	No.2 I.F.	Transformer - Yellow/green	4044-032-02	
125		or Shunt Coil	4036-044-02	
126	No.3 I.F.	Transformer - Yellow/blue	4044-032-03	
127		Transformer - Yellow/violet	4044-032-04	
128		Cerrite core	4048-033-01	
129	Choke - i	ron core	4048-025-05	
130	Driver Tr	ansformer	4042-125-01	
131	Speaker T	ransformer	4042-128-01	
132	Choke		4048-043-02	
133	Speaker -	9" x 6" Permag type C96L36/ 69/1	5 4056-004-18	
		- refer installation		
	instructi	ons for baffle details.		
134				
135				
136	Transisto	or - Type AT325 - RF Amp.	4128-120-01	
137	Transisto	or - Type AT321 - Mixer	4128-119-01	
138	Transisto	or - Type AT321 - Oscillator	4128-119-01	
139	Transisto	or - Type AT321 - IF Amp.	4128-119-01	
140	Transisto	or - Type AT321 - IF Amp.	4128-119-01	
141	Diode - t	type 1N60A - Detector	4127-032-01	
142	Transisto	or - Type BC109 - Audio Driver	4128-077-01	
143	Transisto	or - Type 2N408 - Temperature Compensation	4128-008-01	
144	Transisto matched p	or - Type 2-AX1130 - Audio Output, pair	4128-102-01	
145	Transisto matched p	or - Type 2-AT1138 - Audio Output, pair	4128-004-02	
146				
147				
148	Plug - sp	peaker lead	7171-015-01	
149	Aerial So	ocket	7222-037-01	
150	Noise Suj	opression Switch	4059-187-01	
151	Dial Lam	9 (2)	4068-003-04	
152	Indicator	Lamp (1)	4068-003-04	
153				
154		Current Meter	7222-033-01	
155	Socket -		7222-033-01	
156	ON/OFF S	witch, part of volume control		

BROADCAST ALIGNMENT

When iron cores or tuning unit coil assy. have been replaced or if station logging is outside limits.

Oper. No.	Generator Connection	Generator Frequency	Instructions		
1	Connect IF attenuator to test pin	s "B" and "C" (re	esistor to pin "C".)		
2	Turn perm. tuner against high free so that not less than $\frac{1}{8}$ " of shaft	quency end of tra protrudes out th	evel stop. Set all iron cores arough front panel of receiver.		
3	To aerial Lead-in Socket 65pF. dummy aerial in series.	1625 Kc/s	Adjust Osc. RF and both aerial trimmer capacitors for max. output.		
4	PUSH BUTTON RECEIVER: Partly push clutch before inserting gauge.	in one of the pu	ash button knobs to release		
	MANUAL RECEIVER: Disengage clutch at crown wheel by utilizing clutch Release Bracket, before inserting gauge.				
	In the side of tuning unit, opposite end to tuning spindle there are two slots; place the notched blade of gauge into the slot nearest rear of tuner. The 0.39" section of gauge is to be against the projection at front edge of slot. Spring fingers of gauge are to be at rear of tongue. Refer diagram.				
NOTE:	Do not strain or tilt core carria	Do not strain or tilt core carriage.			
	As Oper. 3	1000 Kc/s	With tuner set in position detailed, adjust Osc., RF and both Aerial iron cores for maximum output.		
5	As Oper. 3	600 Kc/s	Rock tuning control through signal, adjust Osc. shunt coil for Max. output.		
6	Turn tuning control to low freq. Tune signal generator to receiver between 510 and 528 Kc/s.				
7	Repeat operation 4.				
8	Align dial pointer.		-TONGUE		
	PB1495	0·39"			

SETTING OF DIAL POINTER

GAUGE -

Disconnect the IF attenuator.

Disconnect the generator cable from dummy aerial then connect $20 \, \, \mathrm{ft.}$, of aerial wire to the dummy aerial terminal.

Accurately tune the receiver to a station marked on the dial near 1000 Kc/s. Using a screwdriver, adjust by bending the pointer carriage arm so that the pointer coincides with the centre of the tuned station call sign.

Check dial logging and if necessary readjust pointer carriage arm.

CIR-					
NO.	IT VALUE	CAPACITORS DESCRIPTION	TOL ±	RATING V.DCW	PART NUMBER
1 2	12-120pF 5-55pF	Trimmer - compression Trimmer - compression	~ A	F-0	4000-026-02 4000-001-03
3 4	.0047uF 82pF	Polystyrene Polystyrene	5% 10%	50 100	4004-019-06 4004-020-01
5 6	4.7pF	Disc Ceramic - NPO	• 5pF	500	4008-042-02
6 7	.047uF	Disc Ceramic Disc Ceramic		25	4008-057-04 4008-059-02
8	.47uF .047uF	Disc Ceramic		3 25	4008-057-04
9	5-55pF	Trimmer - compression			4000-001-03
$\frac{10}{11}$	680pF	Polystyrene	10%	100	4004-016-02
12	100pF	Polystyrene	10%	100	4004-008-06
13	.001uF	Polystyrene	10%	50	4004-001-09
14 15	.022uF .022uF	Disc Ceramic Disc Ceramic		25 25	4008-010-04 4008-010-04
16	.047uF	Disc Ceramic		25	4008-057-04
17	220pF	Polystyrene	5%	100	4004-005-03
18	2.7pF	Disc Ceramic - NPO	.25pF	500	4008-013-01
19 20	56pF	Polystyrene	10%	100	4004-025-02
21	.0068uf	Polystyrene	10%	50	4004-013-04
	220pF	Polystyrene	5%	100	4004-005-03
23 24	.047uF 3-30pF	Disc Ceramic Trimmer - air		25	4008-057-04 4000-025-03
25	.047uF	Disc Ceramic		25	4008-057-04
26	.047uF	Disc Ceramic		25	4008-057-04
27	.047uF	Disc Ceramic	-01	25	4008-057-04
28 29	220pF 4uF	Polystyrene Electrolytic	5%	100 40	4004-005-03 4005-045-02
30	100uF	Electrolytic		12	4005-002-31
31	.luF	Disc Ceramic		25	4008-004-04
32	.047uF	Disc Ceramic	1.00	25	4008-057-04
33 34	.47uF .047uF	Polyester Disc Ceramic	10%	160 25	4009-003-09 4008-057-04
35	.047uF	Disc Ceramic		25	4008-057-04
36	220pF	Polystyrene	5%	100	4004-005-03
37	.0022uF .0022uF	Disc Ceramic Disc Ceramic	20% 20%	500 500	4008-049-07 4008-049-07
38 39	.0068uF	Polyester	10%	400	4009-004-01
40	220pF	Disc Ceramic	,	500	4008-009-02
41	.luF	Disc Ceramic	101	25	4008-004-04
42 43	.033uF .33uF	Polyester Polyester	10% 10%	160 160	4009-019-08 4009-005-14
44	.001uF	Ceramic Feed Thru	10/0	100	4008-040-08
45	.luF	Disc Ceramic		100	4008-004-05
46	.047uF	Polyester	10%	160	4009-001-15
47 48	. 22uF 5uF	Disc Ceramic Electrolytic		25 3	4008-053-01 4005-018-07
49	·1uF	Disc Ceramic		100	4008-004-05
50	.47uF	Disc Ceramic		25	4008-059-01
51	5uF	Electrolytic	100	12	4005-018-08
52 53	.luF .luF	Polyester Polyester	10% 10%	160 160	4009-008-01 4009-008-01
رر 54	640uF	Electrolytic	10/0	160	4005-046-01
55	.047uF	Disc Ceramic		25	4008-057-04
56	.047uF	Disc Ceramic		25	4008-057-04
57 58	.001uF	Ceramic Feed Thru			4008-040-08
59					

CIR- CUIT NO.	VALUE OHMS.	RESISTOR DESCRIPTION	Tol	RATING WATTS	PART NUMBER
60 61 62	1K	Carbon	10%	• 5	4022-008-01
62 63 64 65	560 5.6 K 470	Carbon Carbon Carbon	10% 10% 10%	• 5 • 5 • 5	4022-010-01 4022-022-02 4022-016-01
66 67 68	10K 2.7K 220K	Carbon Carbon Carbon	10% 10% 10%	• 5 • 5	4022-010-01 4022-004-01 4022-043-01 4022-063-01
69 70 71	1K 8.2K	Carbon Carbon	10%	•5 •5	4022-008-01 4022-027-02
72 73 74	5.6K 10K 1.5K	Carbon Carbon Carbon	10% 10% 10%	• 5 • 5 • 5	4022-022-02 4022-004-01 4022-007-01
75 76 77	100K 18K 220K	Carbon Carbon Carbon	10% 10% 10%	• 5 • 5 • 5	4022-013-02 4022-018-01 4022-063-01
78 79 80 81	22 2.2K 12K 1.5K	Carbon Carbon Carbon Carbon	10% 10% 10% 10%	•5 •5 •5	4022-033-01 4022-021-02 4022-029-01 4022-007-01
82 83 84 85	68K 10K 4.7K 15	Carbon Carbon Carbon Carbon	10% 10% 10% 10%	•5 •5 •5	4022-048-01 4022-004-01 4022-005-01 4022-053-01
86 87 88	390 100 1K	Carbon Carbon Carbon	10% 10% 10%	•5 •5 •5	4022-058-04 4022-062-01 4022-008-01
89 90 91 92	12K 820 4.7K 330	Carbon Carbon Carbon Carbon	10% 10% 10% 10%	•5 •5 •5	4022-029-01 4022-009-01 4022-005-01 4022-011-01
93 94 95	12K 4.7K 1.8K	Carbon Carbon Carbon	10% 10% 10%	• 5 • 5 • 5	4022-029-01 4022-005-01 4022-030-01
96		Volume and tone controls concentric shaft Potentiometer Front section 50K ohm.			
		Rear section 50K ohm.tapp SP.ST push-push switch at			4030-030-06
97 98 99 100	120K 33K 220	Carbon Carbon Potentiometer preset	10% 10% 10%	• 5 • 5	4022-031-01 4022-059-03 4025-034-02
101 102 103 104	47K 6.8K 100 68	Carbon Carbon Carbon Carbon	10% 10% 10% 10%	• 5 • 5 • 5	4022-051-03 4022-002-02 4022-062-01 4022-024-01
105 106 107 108	1K 18K 150 220	Carbon Carbon Carbon Carbon	10% 10% 10% 10%	•5 •5 •5	4022-008-01 4022-018-01 4022-052-01 4022-017-01
109 110 111	47 47	Carbon Vire Wound	10%	•5 •5	4022-041-01 4022-041-01
112 113 114 115	.27 .27 47	Wire Wound Wire Wound Carbon	10% 10% 10%	•5 •5 1	4024-007-02 4024-007-02 4022-041-03
116 117 118 119					