

Adjustment and Alignment

| | | | |
|------------------------------|----------------------------|-----------------------|---------------------------------|
| a) Frequency Coverage | | | |
| Lower Limit | Adjust | Upper Limit | Adjust |
| MW 520 Kc | L ₇ MW OSC Coil | 1,680 Kc | C ₂₋₄ MW OSC Trimmer |
| SW 3.8 Mc | L ₆ SW OSC Coil | 12.6 Mc | C ₂₋₃ SW OSC Trimmer |
| b) Tracking Alignment | | | |
| Checking Point | Adjust | Checking Point | Adjust |
| MW 620 Kc | L ₂ MW ANT Coil | 1,400 Kc | C ₂₋₂ MW ANT Trimmer |
| SW 3.8 Mc | L ₁ SW ANT Coil | 12.6 Mc | C ₂₋₁ SW ANT Trimmer |

To Remove the Chassis and Printed Circuit Board from the Cabinet

- Loosen the Back Cover Holding Screw and open the Back Cover.
- Remove three Screws (②), (③) & (⑤) in Fig. 1), one Nut (①) in Fig. 1) and a Back Cover Securing Post (④) in Fig. 1).
- Remove the Earphone Jack from the Cabinet.

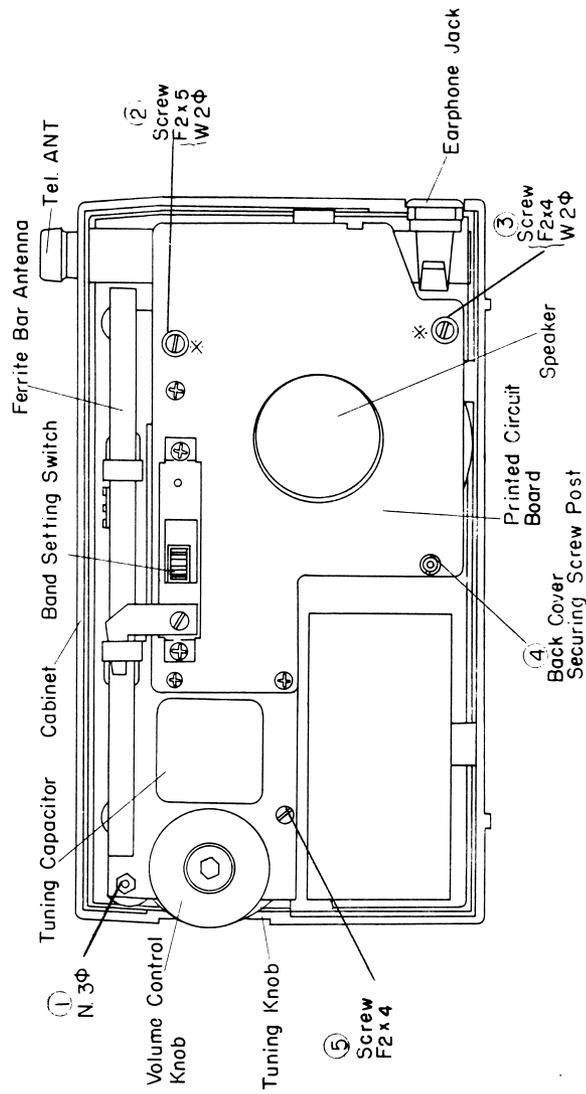


fig. 1

