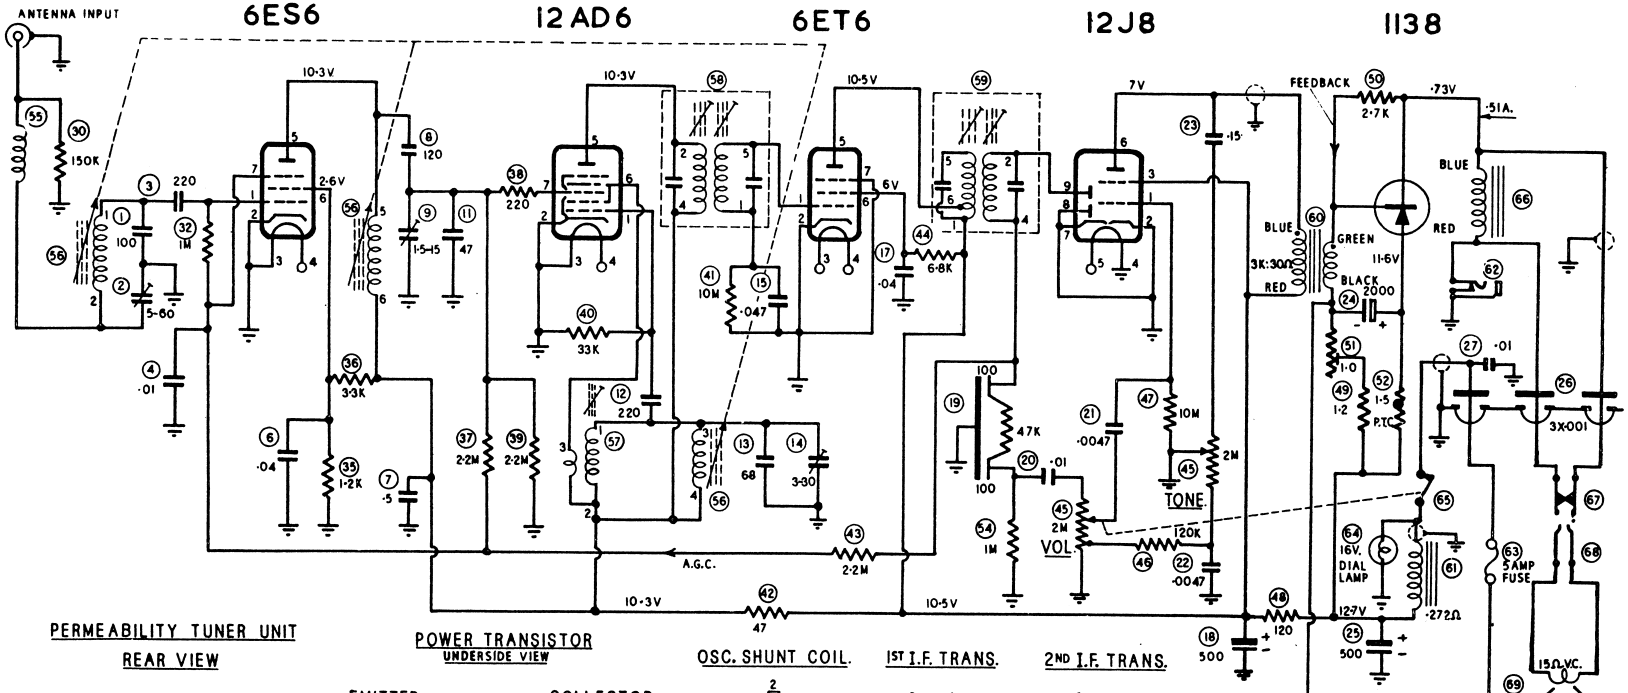

NUMBERS ASSIGNED TO TERMINALS OF COILS AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT BE FOUND ON THE UNIT.

ALL VOLTAGES MEASURED BETWEEN POINTS INDICATED AND CHASSIS WITH A D.C. VACUUM TUBE VOLTMETER. NO INPUT SIGNAL.

MODEL — JYS

PUSH BUTTON TUNING.

NEGATIVE TO CHASSIS

IMPORTANT: REFER TO SERVICE BULLETIN JYS-I FOR INSTRUCTIONS BEFORE ADJUSTING COLLECTOR CURRENT OF 1138.

PB1100

A35