



CAR RADIO INSTALLATION INSTRUCTIONS

PAMPHLET 78744
Page 1 of 2
Issue 1 (26-11-76)

Supplied by Amalgamated Wireless (Australasia) Ltd.

KIT No. : 81275/801

WHERE USED : FORD XC FALCON, ZH FAIRLANE

STEREO PLAYERS : PU-827, PU-828.


WARNING : These units are designed to operate from 12V d.c. negative earth supply only. Connection to an incorrect supply will damage the units and void the Warranty.

WARRANTY SERVICE : Fill in the details required on the Warranty Registration card, recording in particular the Serial Number.


Disconnect car battery earth lead.

1. SPEAKER MOUNTING.

- 1.1 Speakers may be mounted to suit customer's requirements. Alternatives available are 150 x 100 speakers behind the cowl side panels or 175 x 125 speakers mounted under rear parcel shelf. Box speakers on the rear shelf may also be used.
- 1.2 Fader mounting. If front and rear speakers are fitted Front/Rear Stereo Fader Kit 78079 should be installed. The fader may be mounted on the lower curved section under the instrument panel to the left of steering column. Check position carefully to avoid moulded webs and cable forms. Drill mounting hole, mount fader and connect up speakers as outlined in kit instructions.

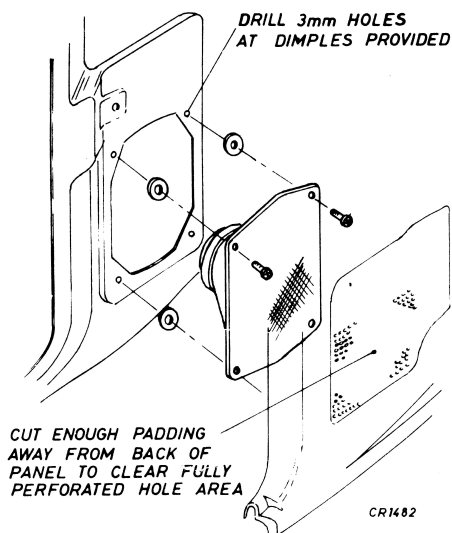

FRONT SPEAKER MOUNTING
FIG. 1

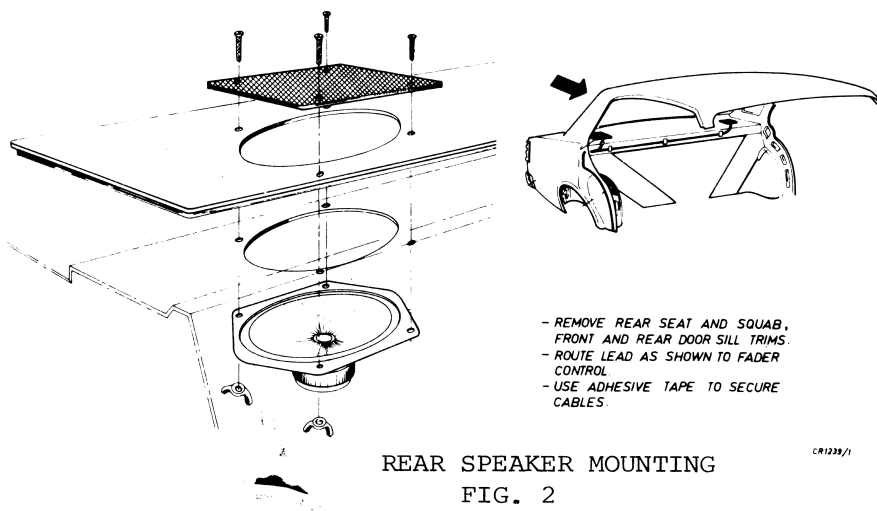

REAR SPEAKER MOUNTING
FIG. 2

2. STEREO MOUNTING.

- 2.1 Remove two retaining screws from steering column lower cover and remove cover. Remove three nuts from steering column bracket and lower the steering column.
- 2.2 Remove and retain two screws from the top of the trinket tray to right of the steering column. Free two moulded lugs in the base, remove and discard tray.
- 2.3 If a moulded platform is now exposed in the trinket tray opening this must be cut away to near the base of the opening.
- 2.4 From instrument panel lower edge remove the centre of the three screws and a fuse box retainer rail (if fitted). Move fuse box to its lowered position.

- 2.5 Remove escutcheon and its supports from the player.
Remove transit lock screw from top of unit. .
- 2.6 Locate brown two-pin socket in wiring loom behind the opening.
Connect the player power lead to the white (+12V) lead to this socket with an Electra Tap connector.
- 2.7 Connect speaker or fader leads to stereo unit.
- 2.8 Fully insert player into opening to allow front support trimplate to be mounted to the front panel. Then secure player to trimplate.
- 2.9 Secure rear of player with rear support bracket as shown.
- 2.10 Refit fuse panel carriage (cf 2.4).
Reconnect car battery.

