



CAR RADIO INSTALLATION INSTRUCTIONS



PAMPHLET 77374

Issue 2 (21-10-76)

Supplied by Amalgamated Wireless (Australasia) Ltd.

KIT No. : 78079
TYPE : FRONT/REAR STEREO FADER
INSTALLATION :

1. Determine position for fader control mounting and drill 10mm dia. mounting hole.
2. Mount fader using spacers as necessary to leave minimum amount of spindle bush protruding through mounting surface. Secure control with nut and ITL washer and fit control knob.
3. Mount speakers. Connect speaker cables to speakers with the trace lead used to identify the phase mark side of speaker (the terminal with + sign, red insulator or red dot on nearby housing).
4. Route cables to fader position and fit identifying tags (see 5 below). Bare leads to about 13mm.
5. A set of tags is supplied for easy identification of speaker leads both during installation and for any later servicing. Peel tags from backing sheet and wrap around cables to form flag tags on the appropriate leads.
6. With all leads identified, connect leads as shown in diagram.
7. Switch on power and check operation.

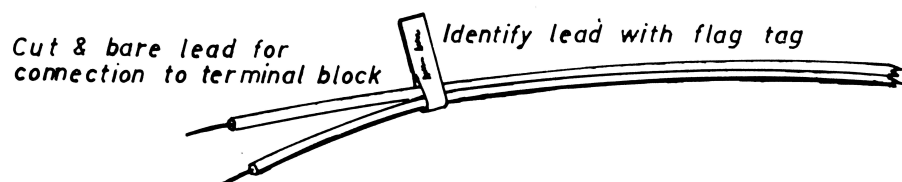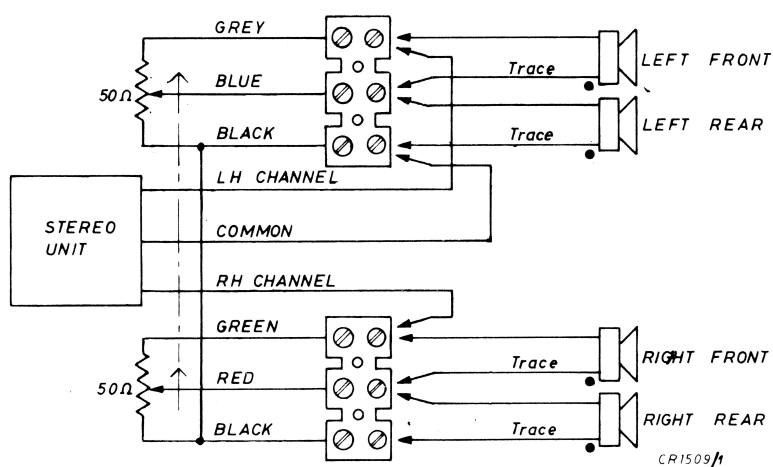

To speaker:
Connect trace lead to
phase mark on speaker.