


PLACE THIS EDGE ON FENDER
LINE AT HOOD.

XL-XM-XP.

THIS EDGE TO BE LINED UP
WITH EDGE OF COWL.

TEMPLATE FOR AERIAL MOUNTING
IN FORD FALCON.

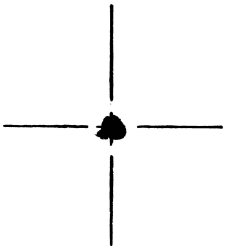

POSITION OF
AERIAL MOUNTING
HOLE

THIS EDGE TO BE LINED UP WITH EDGE
OF FENDER AT DOOR.