


MISCELLANEOUS COMPONENTS

No. on Dial Cord Layout Drawing	Description	Code No.	No. on Dial Cord Layout Drawing	Description	Code No.
6	Assembly, cursor	CR.480.664	—	Plug, male (gramo. unit power)	CZ.365.115
—	Assembly, lampholder, 2x	C/F733-5-4	—	Plug, 2-pin polarised (speaker, pick-up and bezel lamp)	C/F691-5-1
—	Assembly, lampholder bezel	CZ.367.920	5	Pulley, dial (large)	CS.359.613
3	Assembly, tuning spindle	CR.371.223	2	Pulley, dial (small), 2x	CS.359.612
—	Badge, Philips	CR.531.408	—	Scale, dial	CS.412.395
—	Bank, W/C switch (aerial)	CZ.200.060	—	Socket, female (gramo. unit power)	CZ.365.116
—	Bank, W/C switch (osc.)	CZ.200.061	—	Socket, 2-pin polarised (speaker, pick-up and bezel lamp)	C/F733-16-1
—	Bezel	CS.430.023	—	Socket, valve (noval), 7x	C/F733-2-14
—	Clip, spring (knob), 4x	CS.281.832	—	Spring, cursor	CS.212.016
—	Clip, spring (I.F.T. mtg.), 2x	A3.652.58	7	Spring, dial cord	CS.210.043
4	Cord, dial drive	69" of cord required			
1	Drum, dial	CS.360.006			
—	Knob, control, 4x	CR.523.714			

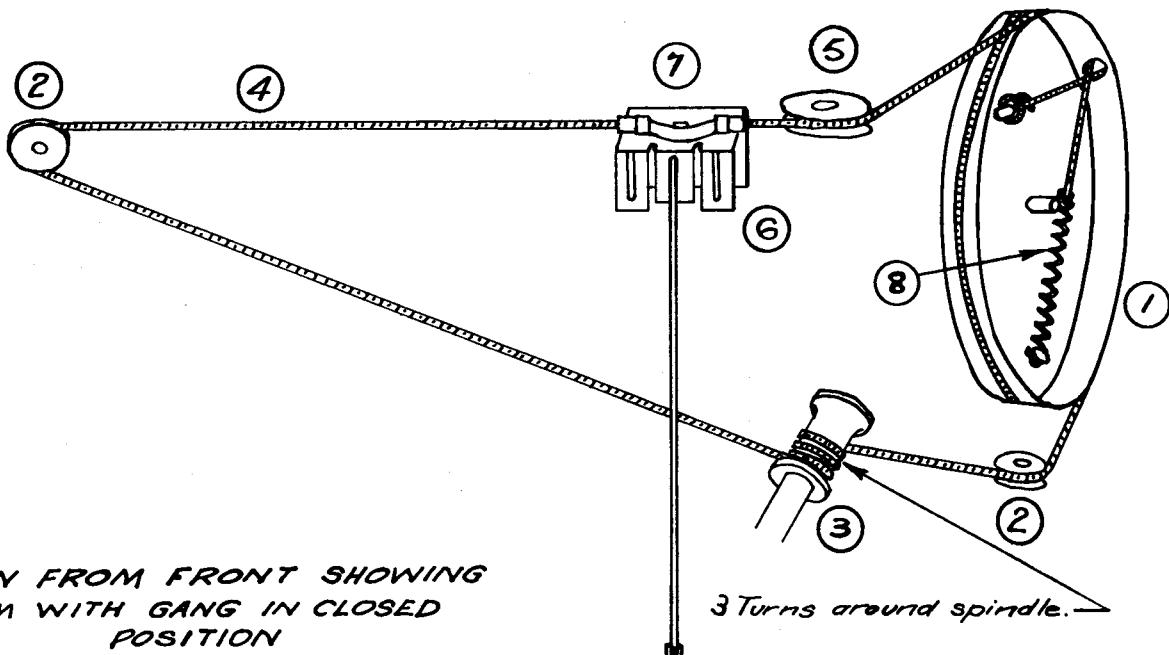


PHILIPS RADIOPLAYER

MODEL 179

SPECIFICATIONS

(Subject to alteration without notice)

Power Supply	200-250V, 40-50 c/s.
Tuning Ranges	530-1620 kc/s. 4.7-9.2 Mc/s. 9.1-18.4 Mc/s.
Intermediate Frequency	455 kc/s.
Cabinet	Radiogram.
Record Changer	Philips type AG1000.

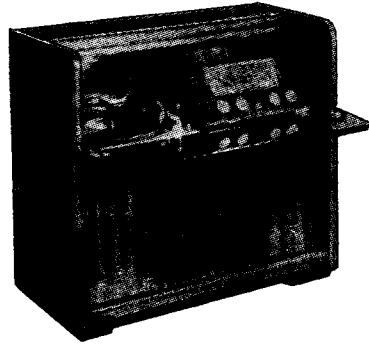

VALVE EQUIPMENT AND VOLTAGE ANALYSIS

Valve Function	Valve No.	Valve Type	Plate Volts	Screen Volts	Osc. P. Volts	Bias Volts
Frequency Converter	V1	6AN7	230	50	55	—
I.F. Amplifier	V2	6BH5	230	50	—	—
Demodulator, A.V.C. and 1st Audio	V3	6BD7	70	—	—	—
Phase Splitter	V4	6BD7	170	—	—	—
Push-Pull Power Amplifier	V5	6M5	265	230	—	7.5
Push-Pull Power Amplifier	V6	6M5	265	230	—	7.5
Rectifier	V7	6V4			Cathode — L18 C.T., 278V.	
Dial Lamps (2), Bezel Lamp	V11, 12, 13			6.3V, 0.32A tubular screw		
Voltage across R24, -3V; R15, 36V; R14 and 15, 40V.						

NOTE: These voltages are measured with an "1,000 ohms per volt" meter and may vary \pm 10% from the figures quoted. They are measured from the socket points indicated to chassis or across the resistors listed. The receiver should be in a "no signal" condition.

TO REMOVE CHASSIS FROM CABINET.

Remove the power plug from the mains outlet socket. Remove the four control knobs (a firm pull is all that is necessary). Remove the cabinet back. Remove the aerial and earth terminal panel and unclip the leads from the cabinet.

Remove the pick-up, speaker, gramo. unit power and bezel lamp plugs from their respective sockets. Remove the two screws at the top of the dial back plate and the two screws at the rear of the chassis. The chassis may now be withdrawn from the cabinet.

The replacement of the chassis is a reversal of the above procedure. Care should be taken to see that the front edge of the side chassis flange engages under the lip of the front mounting bracket.

MAINS VOLTAGE ADJUSTMENT.

The power transformer is provided with two mains voltage tappings on the primary winding—200/230 volts and 240/250 volts—for adjustment to the supply voltage at the point of installation. The receiver is adjusted at the factory to the 240/250 volts tapping.

DIAL CALIBRATION.

In the event of an equal calibration error over the entire dial scale, the dial cursor can easily be moved on the dial drive cord to correct the error.

ALIGNMENT.

During alignment, set volume control at maximum and tone control at central position. With the tuning capacitor fully closed, set the dial cursor on the 120 mark of the relocation scale.

I.F. channel alignment is carried out in the following sequence:—

Connect 100pF capacitor from plate of 6BH5 to chassis and peak secondary of 2nd I.F.T. (screw nearer 6BD7).

Transfer 100pF capacitor to 6BD7 diode to chassis position and peak primary of 2nd I.F.T. (screw nearer 6BH5).

Remove the detuning capacitor and peak secondary of 1st I.F.T. (screw nearer 6BH5).

Peak primary of 1st I.F.T. (screw nearer 6AN7).

Repeat operations on 1st I.F.T. only.

The trimmer layout drawing is shown as an inset on the circuit diagram drawing.

B/c band alignment frequencies are: 1,420 kc/s, 3XY (oscillator and aerial trimmers), and 600 kc/s, 7ZL (slug padding with gang rocking).

On the short wave bands the oscillator operates on a frequency above signal frequency so that of the two signals tunable on the receiver, the high frequency one is correct. In short wave alignment, SW2 band (4.7-9.2 Mc/s) should be done first before attempting alignment of SW1 band.


On SW2 band (4.7-9.2 Mc/s) alignment frequencies are: 4.825 Mc/s (114 on relocation scale), (oscillator coil slug) and 8.9 Mc/s (16 on relocation scale), (oscillator and aerial trimmers). Rock the tuning gang while adjusting the aerial trimmer.

SW1 band (9.1-18.4 Mc/s) alignment frequency is 17.8 Mc/s (small green triangle), (oscillator and aerial trimmers, rock gang while adjusting aerial trimmer). Calibration should be checked at 9.65 Mc/s (small green triangle).

Do not attempt to adjust the iron cores of the aerial coils.

Published by Philips Electrical Industries Pty. Ltd.

Sydney — Melbourne — Brisbane — Adelaide — Perth

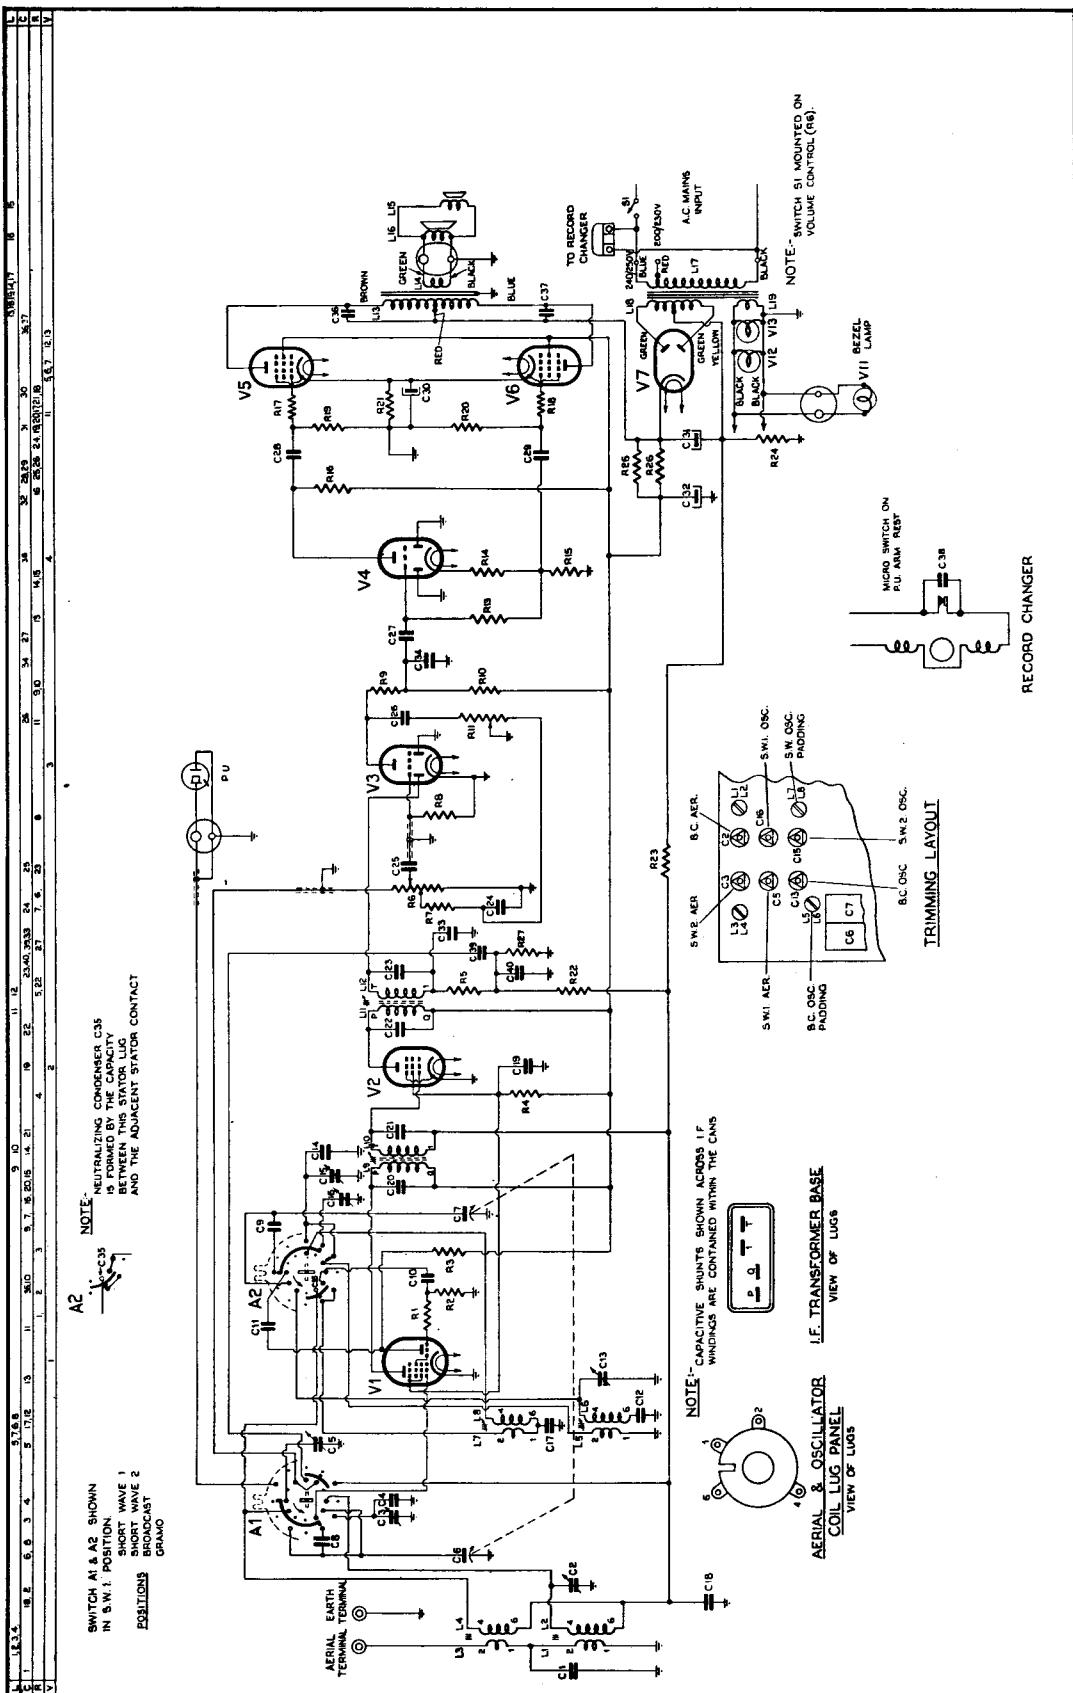

PARTS LIST

CAPACITORS

RESISTORS

COILS

No.	Description	Code No.	No.	Description	Code No.	No.	Ohms	Description	Code No.
C1, 10, 11, 33, 40	100 pF mica		R1	100 ohms $\frac{1}{2}$ W carbon		L1	19.6-26.4	B/C aerial coil	CZ.323.026
C2, 3, 5, 15, 16	30 pF air trimmer	CZ.113.700	R2	22,000 ohms $\frac{1}{2}$ W carbon		L2	1.5-2.0		
	115 pF mica 2½%	CZ.066.138	R3	47,000 ohms 1W carbon 10%		L3	1.2-1.7		CZ.323.027
C4	2 gang tuning	CZ.107.746	R4	68,000 ohms 1W carbon		L4	<0.5	S/W aerial coil	
C6-7	180 pF mica 1%	CZ.065.722	R5	47,000 ohms $\frac{1}{2}$ W carbon		L5	0.8-1.2	B/C oscillator coil	CZ.330.613
C8, 9	475 pF mica 2%	CZ.066.119	R6	0.5 megohm carbon potentiometer, tapped at 0.25 megohm, with S.P.S.T. switch	CZ.032.014	L6	2.7-3.7		
C12	60 pF air trimmer	49.005.58	R7	12,000 ohms $\frac{1}{2}$ W carbon 10%		L7	<0.5	S/W oscillator coil	CZ.330.614
C13	110 pF mica 2½%	CZ.066.140	R8	10 megohms $\frac{1}{2}$ W carbon		L8	<0.5		
C14	0.0045 mF mica 10%		R9	0.15 megohm $\frac{1}{2}$ W carbon 10%		L9	11.5-15.5	1st I.F. transformer	A3.124.25
C17	0.05 mF 200V paper		R10	68,000 ohms $\frac{1}{2}$ W carbon 10%		L10	11.5-15.5		
C18, 39	0.05 mF 400V paper		R11	1 megohm carbon potentiometer	CZ.029.149	L11	11.5-15.5	2nd I.F. transformer	CZ.320.434
C19	0.05 mF 400V paper		R13	1 megohm $\frac{1}{2}$ W carbon		L13		Output transformer	
C20, 21, 22, 23	Part of I.F. transformers		R14	1,800 ohms $\frac{1}{2}$ W carbon 10%		L14		Speaker	
			R15, 16	47,000 ohms $\frac{1}{2}$ W carbon 10%		L15			
C24	0.03 mF 200V paper		R17, 18	4,700 ohms $\frac{1}{2}$ W carbon		L16	10,000 ohms p-p	type KOL40	
C25	0.01 mF 400V paper		R19, 20	0.47 megohm $\frac{1}{2}$ W carbon		L17		Speaker	
C26, 27	0.005 mF 600V paper		R21	150 ohms 1W W/W 10%		L18	31.5-42.5		
C28, 29, 38	0.01 mF 600V paper		R22	2.2 megohms $\frac{1}{2}$ W carbon		L19	<0.5	Power transformer	CZ.344.089
C30	25 mF 10V electrolytic								
C31, 32	40 mF 350V electrolytic								
C34	200 pF mica								
C35	Inbuilt neutralising capacitor— refer circuit diagram drawing.		R24	47 ohms $\frac{1}{2}$ W W/W 10%					
			R25, 26	4,700 ohms 1W carbon					
C36, 37	0.002 mF 600V paper		R27	0.22 megohm $\frac{1}{2}$ W carbon					

All tolerances are $\pm 20\%$ unless otherwise specified.

IMPORTANT ! In ordering spare parts, quote CODE NUMBER of part and MODEL NUMBER of Receiver. In claiming free replacement under GUARANTEE, return defective part PROMPTLY and quote MODEL and SERIAL NUMBER of Receiver and DATE OF PURCHASE.