PHILIPS RADIOPLAYER

MODEL 152

SPECIFICATIONS

(Subject to alteration without notice)





VALVE EQUIPMENT AND VOLTAGE ANALYSIS

Valve Function	Valve No.	Valve Type	Plate Volts	Screen Volts	Osc. P. Volts				
Frequency Converter	V1	6AN7	225	30	85				
I.F. Amplifier Demodulator and A.V.C.	V2	6N8	225	50					
Audio Amplifier	V3	6N8	75	14					
Power Amplifier	V4	6M5	207	225					
Rectifier	V5	EZ82	Cathode — L17 C.T., 262V.						
Dial Lamps	V11 & 12	2 6.3V. 0.32A. tubular screw							
Voltage across R23, -1.8V.; across R23 and 24, -6.4V.									

NOTE: These voltages are measured with an "1,000 ohms per volt" meter and may vary ± 10% from the figures quoted. They are measured from the socket points quoted to chassis, or across the resistors listed. The receiver should be in a "no signal" condition.

MAINS VOLTAGE ADJUSTMENT.

The power transformer is provided with two mains voltage tappings—220/240 volts and 250/260 volts—for adjustment to the supply voltage at the point of installation. This receiver is adjusted at the factory to the 220/240 volts tapping.

DIAL CALIBRATION.

If it is required to correct dial calibration for an equal error on all stations, provision is made for moving the cursor assembly with respect to the dial cord. Loosen the clamping screw, make the necessary adjustment to the cursor position and securely retighten the clamping screw. This operation can be carried out without the need to remove the chassis from the cabinet.

TO REMOVE CHASSIS FROM CABINET.

Remove the power plug from the supply outlet socket. Remove the four control knobs (a firm pull is all that is necessary) and the cabinet back. The chassis is held to the cabinet by two screws in the baffle and four screws through the bottom of the cabinet. Removal of these six screws enables the chassis to be withdrawn from the cabinet.

The chassis may be replaced by a reversal of the above procedure.

ALIGNMENT.

The iron cores for the secondaries of the I.F. transformers are located in the top of the cans, those for the primaries are in the bottom of the cans. When trimming the I.F. circuits care should be taken not to screw the iron cores in too far otherwise undesired coupling may give rise to a false peak. A preliminary positioning to the outer edge of the former of all iron cores should

be made. Then, when trimming is being carried out, the cores should not be screwed in beyond the first peak. Metallic tools should not be used for I.F. transformer trimming.

Damped alignment of the I.F. channel is necessary. The procedure is:—

- (a) Connect a 100 pF capacitor across the secondary of the 1st I.F.T.
- (b) Trim in order, secondary of 2nd I.F.T., primary of 2nd I.F.T. and primary of 1st I.F.T.
- (c) Check (b).
- (d) Remove the shunt from the secondary of the 1st I.F.T. and trim this circuit.
- (e) Check (d).
- (f) Do not alter adjustments without 100 pF shunt in position.

Broadcast band alignment frequencies are 1,420 kc/s (oscillator and aerial trimmers), and 600 kc/s (slug padding). The alignment calibration scale is stencilled on the dial drum. An auxiliary pointer to use with this scale can be made up from workshop materials and fixed to a convenient point on the tuning capacitor mounting bracket. The various markings on the scale are (reading in an anti-clockwise direction):—


Stop mark (gang fully closed) 550 kc/s (large dot) 600 kc/s (large and small dots together) then 100 kc/s steps to 1,300 kc/s 1,420 kc/s (large and small dots together) 1,500 kc/s

Do not attempt to adjust the iron core of the aerial coil.

Published by Philips Electrical Industries Pty Limited Sydney - Melbourne - Brisbane - Adelaide - Perth

PARTS LISTS

COILS	Code No. Ohms Description Code No.	L3 25.5-34.5)	bon L4 1.7- 2.3 \ Aerial coil CZ.323.007	L7 2.9- 3.9 \ Oscillator coil C7 320 600	L8 1.0- 1.4 \$ Oscillator Coll	L9 11.5-15.5)	L10	L11 11.5-15.5)	L12	bon L13 440-590 Filter choke CZ.341.000	L14 510-690 Speaker and transformer, L15 < 0.5 6.000 ohms C7 161 111	L16 2.5- 3.5	L17 550-	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	L20 47-63 J		RTANT! In ordering spare pa	quote CODE NUMBER of part MODEL NUMBER of Receiver.	replacement ur urn defective	CEDIAL MINABED AS I
RESISTORS	Description	50,000 ohms 1W carbon	150,000 ohms 1W carbon	1	50,000 ohms ½W carbon	30,000 ohms 1W carbon	2 megohms ½W carbon	0.5 megohms ½W carbon	5,000 ohms ½W carbon	100,000 ohms ½W carbon	0.5 megohm tapped carbon potentiometer	10 megohms 1W carbon	l megohm 1W carbon	250,000 ohms 1W carbon	l megohm ½W carbon	25 ohms ½W carbon 10%	400 ohms ½W carbon	35 ohms 1W W/W 10%	100 ohms 1W W/W	// // // // // // // // // // // // //
	Š.	R	R2–6	R3-10-14	6	R5	R7-8	R9	R11	R12-22	R13	R15		R17	R18	R20	R21	R23	R24	
S	Code No.		P	r CZ.113.700	CZ.107.746		per	CZ.066.119		9.00	rolytic	%1		aper	oer .			olytic	oer .	osimodto orodu
CAPACITORS	Description	100 pF mica	0.05 mF 200V paper	30 pF air trimmer	2 gang tuning	L	0.01 mF 600V paper	475 pF mica 2%	20 pF mica	Dart of I E transformers	24 mF 350V electrolytic	100 pF ceramic 10%	30 pF mica	0.002 mF 600V paper	0.02 mF 400V paper	50 pF mica 10%	150 pF mica	10 mF 40V electrolytic	0.02 mF 600V paper	01 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 +
	o. Ž	C2-10	C3-25	C5-13	C6-7	· ·	C8-18-78	C11	C12	C16-17-	C19–27	C20	C21–29	C24	C26–33	C30	C31	C32	C34	All tolerance

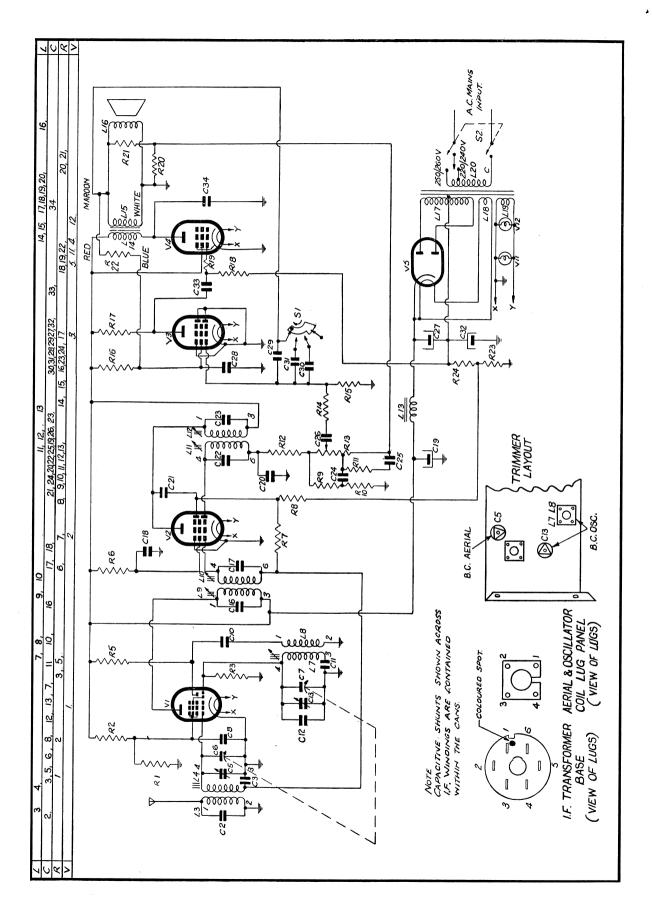

MISCELLANEOUS COMPONENTS

No. on [Dial Cord		No. on [Dial Cord	
Layout	Drawing Description	Code No.	Layout	Drawing Description	Code No.
	Assembly, baffle	CR.005.236		Grommet, gang bracket, 3x	CS.422.458
	Assembly, cursor	CR.480.639		Grommet, power cord	CS.422.457
	Assembly, lampholder, 2x	CZ.367.900		Knob, control, 4x	CS.432.623
	Assembly, pulley spindle, 2x	CR.436.206		Nipple, sl. rod. adj.	CS.274.603
	Assembly, pulley spindle	CR.436.208		Plate, lampholder mtg.	CS.240.021
5	Assembly, tuning spindle	CR.371.320	3	Pulley, dial, 4x	CS.359.602
	Back, cabinet	CS.462.089		Ring, C (tuning spindle)	CS.281.802
	Badge, Philips	CS.436.416	6	Ring, dial cord	CS.281.807
	Bracket, gang mtg.	CS.224.609		Rod, dial slide	CS.382.213
	Bracket, cab. back mtg., 4x	CS.244.602		Scale, dial	CS.412.364
	Cabinet	CS.460.505		Socket, valve (noval wafer), 5x	CZ.369.702
	Clip, coil can mtg., 6x	CS.235.833	2	,	
	Clip, dial scale R.H.	CS.227.004	2	Spring, dial drum	CS.210.010
	Clip, dial scale L.H.	CS.227.003		Strip, masking	CS.050.413
	Cloth, baffle	CE.081.85		Switch, mains on/off	CZ.210.109
4	Cord, dial drive	CS.361.829		Switch, tone control	CZ.200.236
1	Drum, dial	CS.360.006		Washer, felt (knobs), 4x	CS.424.056

