


# PHILIPS RADIOPLAYER

## MODELS 185-A-B-C

NOTE: Models 185 and 185A differ in audio circuitry design. Refer to parts lists and circuit diagram drawings for details.  
 Models 185A-B-C vary in type of record changer only. Refer to "Specifications."

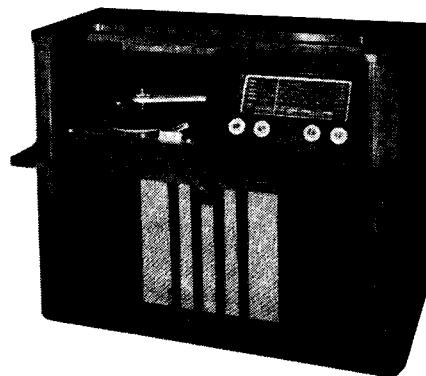

### SPECIFICATIONS

(Subject to alteration without notice)

Power Supply	200/250V, 40-50 c/s
Tuning Ranges	530-1620 Kc/s 4.7-9.2 Mc/s 9.1-18.4 Mc/s
Intermediate Frequency	455 Kc/s
Cabinet	Radiogram
Record Changer 185, 185A	Philips type AG1003
185B	Philips type NG1011
185C	Philips type AG1014

### VALVE EQUIPMENT AND VOLTAGE ANALYSIS

Valve Function	Valve No.	Valve Type	Plate Volts	Screen Volts	Osc. P. Volts	Bias
Frequency Converter	V1	6AN7	205	57	48	—
I.F. Amplifier	V2	6BH5	205	57	—	—
Demodulator, A.V.C. and Audio Amplifier	V3	6BD7	62	—	—	—
Push-Pull Power Amplifier	V4	6M5	260	205	—	-6.4
Push-Pull Power Amplifier	V5	6M5	260	205	—	-6.4
Rectifier	V6	6V4			252/252V. A.C.	
Dial Lamps	V11, V12				6.3V, 0.32A. tubular screw	
Unfiltered B+ 265V.		Filaments 6.35V.				
Filtered B+ 205V.						

NOTE: These voltages are measured with an "1,000 ohms per volt" meter and may vary  $\pm 10\%$  from the figures quoted. They are measured from the socket points indicated to chassis or across the resistor listed. The receiver should be in a "no signal" condition.

### TO REMOVE CHASSIS FROM CABINET

Remove the power plug from the mains outlet socket. Remove the four control knobs (a firm pull is all that is necessary). Unscrew the cabinet back and release aerial/earth terminal panel, also unclip the leads from inside the cabinet. Withdraw the pick-up, speaker and gramo. unit plugs from their respective sockets. Removal of the two securing bolts at rear of chassis and also the two dial back plate support screws (upper) will now allow withdrawal of chassis complete with dial scale. When refitting, care should be taken to see that the front edge of the side chassis flange engages under the lip of the front mounting bracket.

### MAINS VOLTAGE ADJUSTMENT

The power transformer is provided with two mains voltage tappings on the primary winding—200/230 volts and 240/250 volts—for adjustment to the supply voltage at the point of installation. The receiver is adjusted at the factory to the 240/250 volts tapping.

### DIAL CALIBRATION

In the event of an equal calibration error over the entire dial scale, the dial cursor can easily be moved on the dial drive cord to correct the error.

### ALIGNMENT

Set volume control to maximum and tone control to central position. With the tuning capacitor fully closed, set the dial cursor on the 120 mark of the relocation scale.

### I.F. Alignment

Alignment procedure of the I.F. channel is as under:  
 Screw out iron core of 2nd I.F.T. primary (nearer

6BH5) as far as possible. Adjust iron cores at 455 Kc/s for maximum output in the following sequence—

Peak secondary of 2nd I.F.T. (nearer 6BD7).  
 Peak secondary of 1st I.F.T. (nearer 6BH5).  
 Peak primary of 1st I.F.T. (nearer 6AN7).  
 Peak primary of 2nd I.F.T. (nearer 6BH5).

Do not repeat any adjustments.

### R.F. Alignment

The trimmer layout drawing is shown as an inset on the circuit diagram drawing.

B/C band alignment frequencies are: 1,420 Kc/s, 3XY (oscillator and aerial trimmers), and 600 Kc/s, 7ZL (slug padding with gang rocking). In short wave alignment, SW2 band (4.7-9.2 Mc/s) should be completed before attempting alignment of SW1 band. The oscillator operates on a frequency above signal frequency so that of the two signals tunable on the receiver, the higher frequency one is correct.


On SW2 band (4.7-9.2 Mc/s) alignment frequencies are: 4.825 Mc/s (114 on relocation scale), (oscillator coil slug) and 8.9 Mc/s (16 on relocation scale), (oscillator and aerial trimmers). Rock the tuning gang while adjusting the aerial trimmer.

SW1 band (9.1-18.4 Mc/s) alignment frequency is 17.8 Mc/s (small green triangle), (oscillator and aerial trimmers, rock gang while adjust aerial trimmers). Calibration should be checked at 9.65 Mc/s (small green triangle).

**Do not attempt to adjust the iron cores of the aerial coils.**

## MISCELLANEOUS COMPONENTS


No. on Dial Cord Layout Drawing	Description	Code No.	No. on Dial Cord Layout Drawing	Description	Code No.
6	Assembly, cursor	CR.480.664	—	Plug, male (gramo. unit power)	CZ.365.115
—	Assembly, lampholder, x2	C/F 733-5-4	—	Plug, 2 pin polarised (speaker and pick-up)	C/F 691-5-1
3	Assembly, tuning spindle	CR.371.223	5	Pulley, dial (large)	CS.359.618
—	Badge	CR.531.408	2	Pulley, dial (small), x2	CS.359.617
—	Bank, W/C switch (aerial)	CZ.200.060	—	Scale, dial	CS.412.395
—	Bank, W/C switch (osc.)	CZ.200.061	—	Socket, female (gramo. unit power)	CZ.365.116
—	Clip, spring (knob), x4	CS.281.832	—	Socket, 2 pin polarised (speaker and pick-up)	C/F 733-16-1
—	Clip, spring (I.F.T. mtg.), x2	A3.652.58	—	Socket, valve (noval), x6	C/F 733-2-14
4	Cord, dial drive	69" of cord required	—	Spring, cursor	CS.212.016
1	Drum, dial	CS.360.006	7	Spring, dial cord	CS.210.043
—	Knob, control, x4	CR.523.714	—	—	—

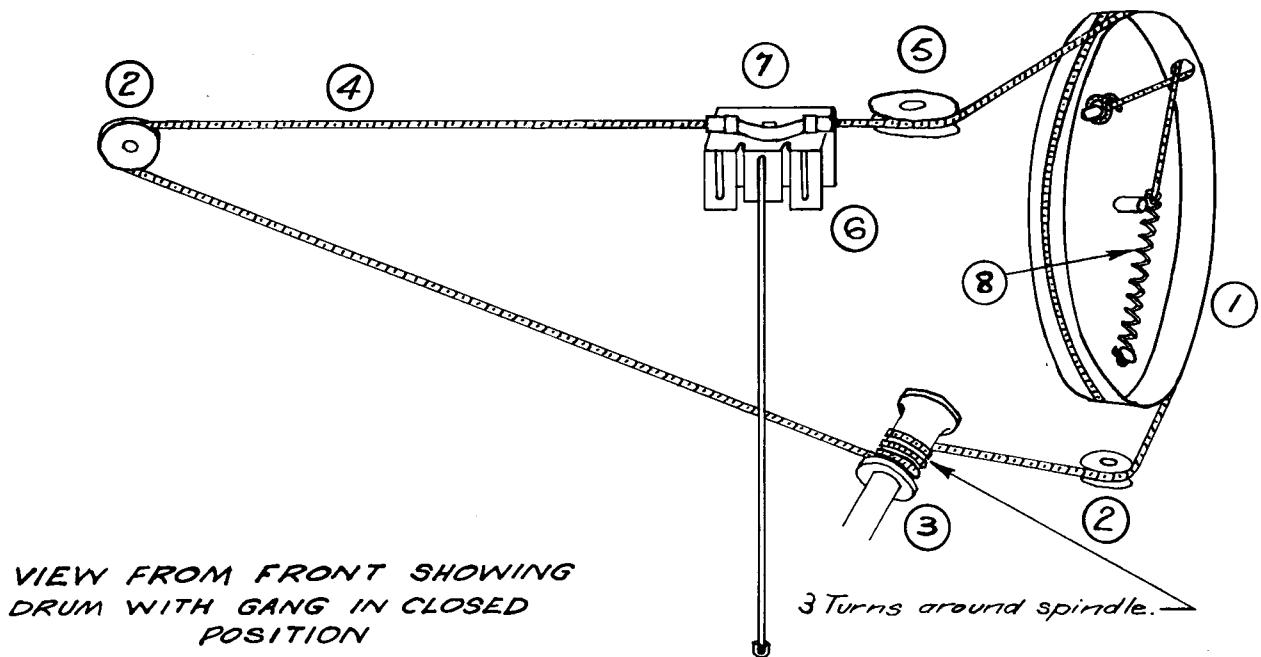


Published by

PHILIPS ELECTRICAL INDUSTRIES PTY. LTD.

SYDNEY - MELBOURNE - BRISBANE - ADELAIDE - PERTH

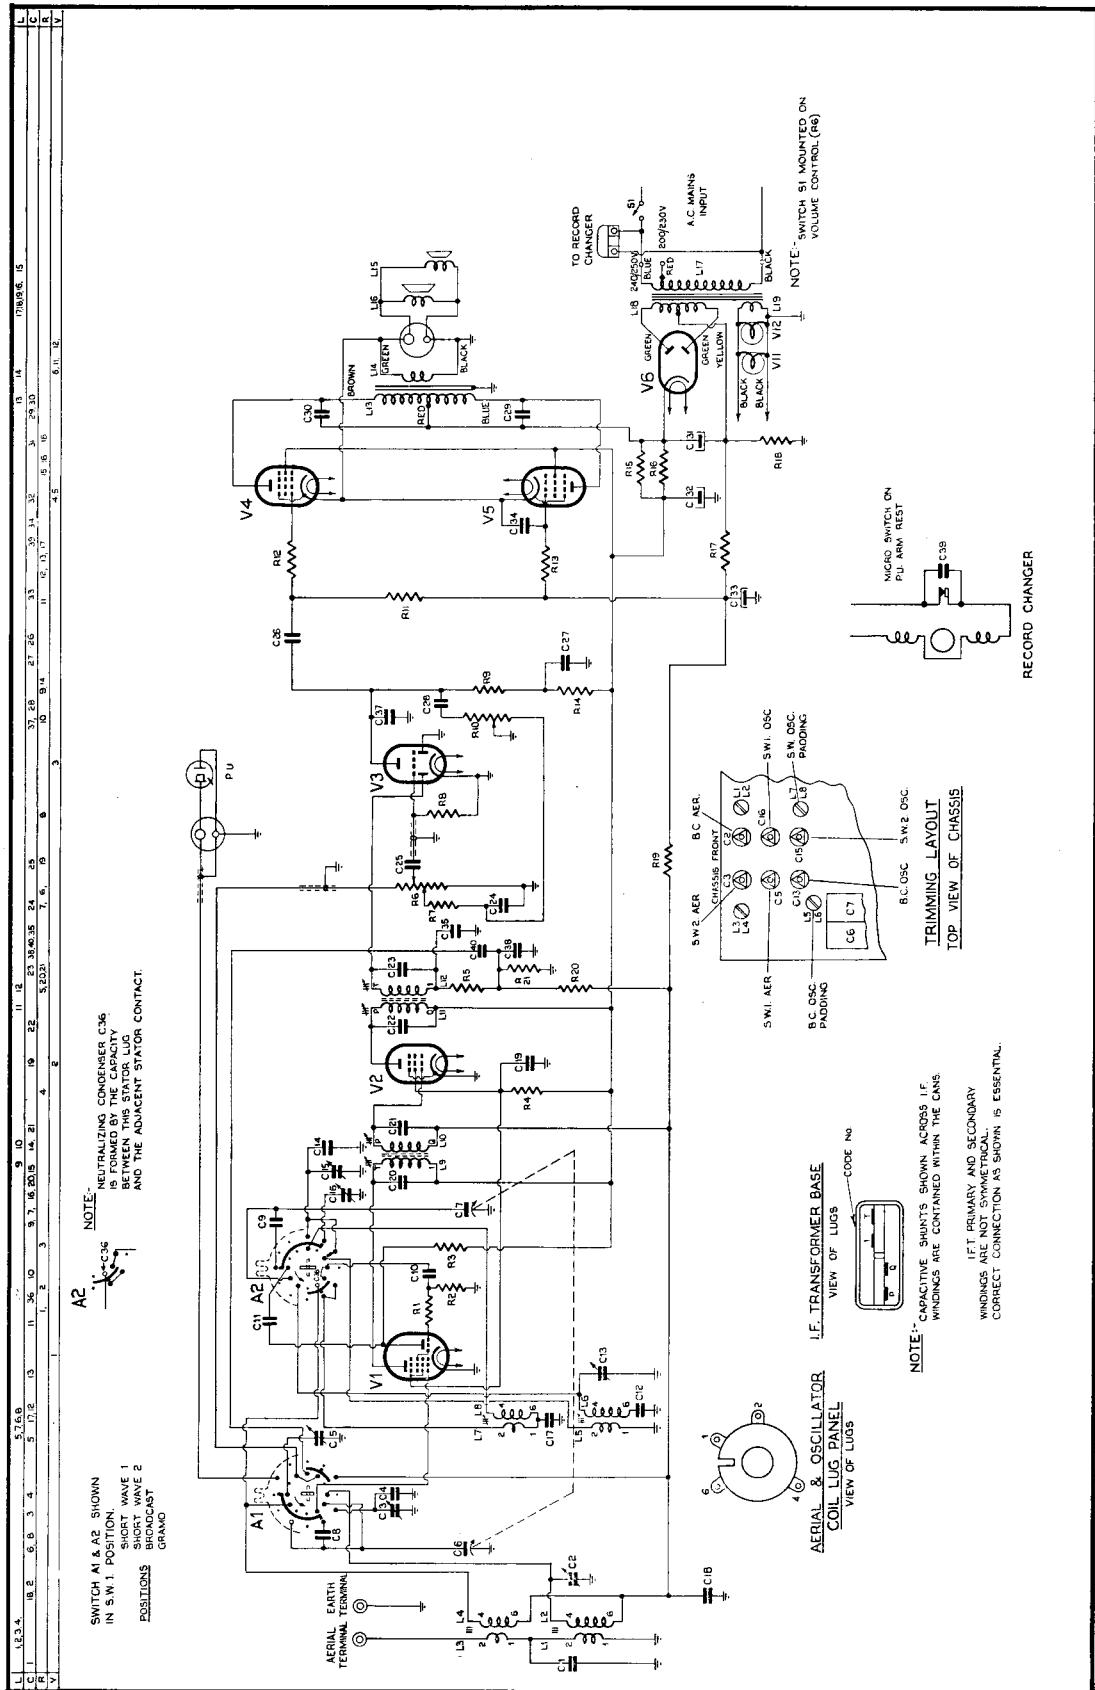

# SERVICE DATA

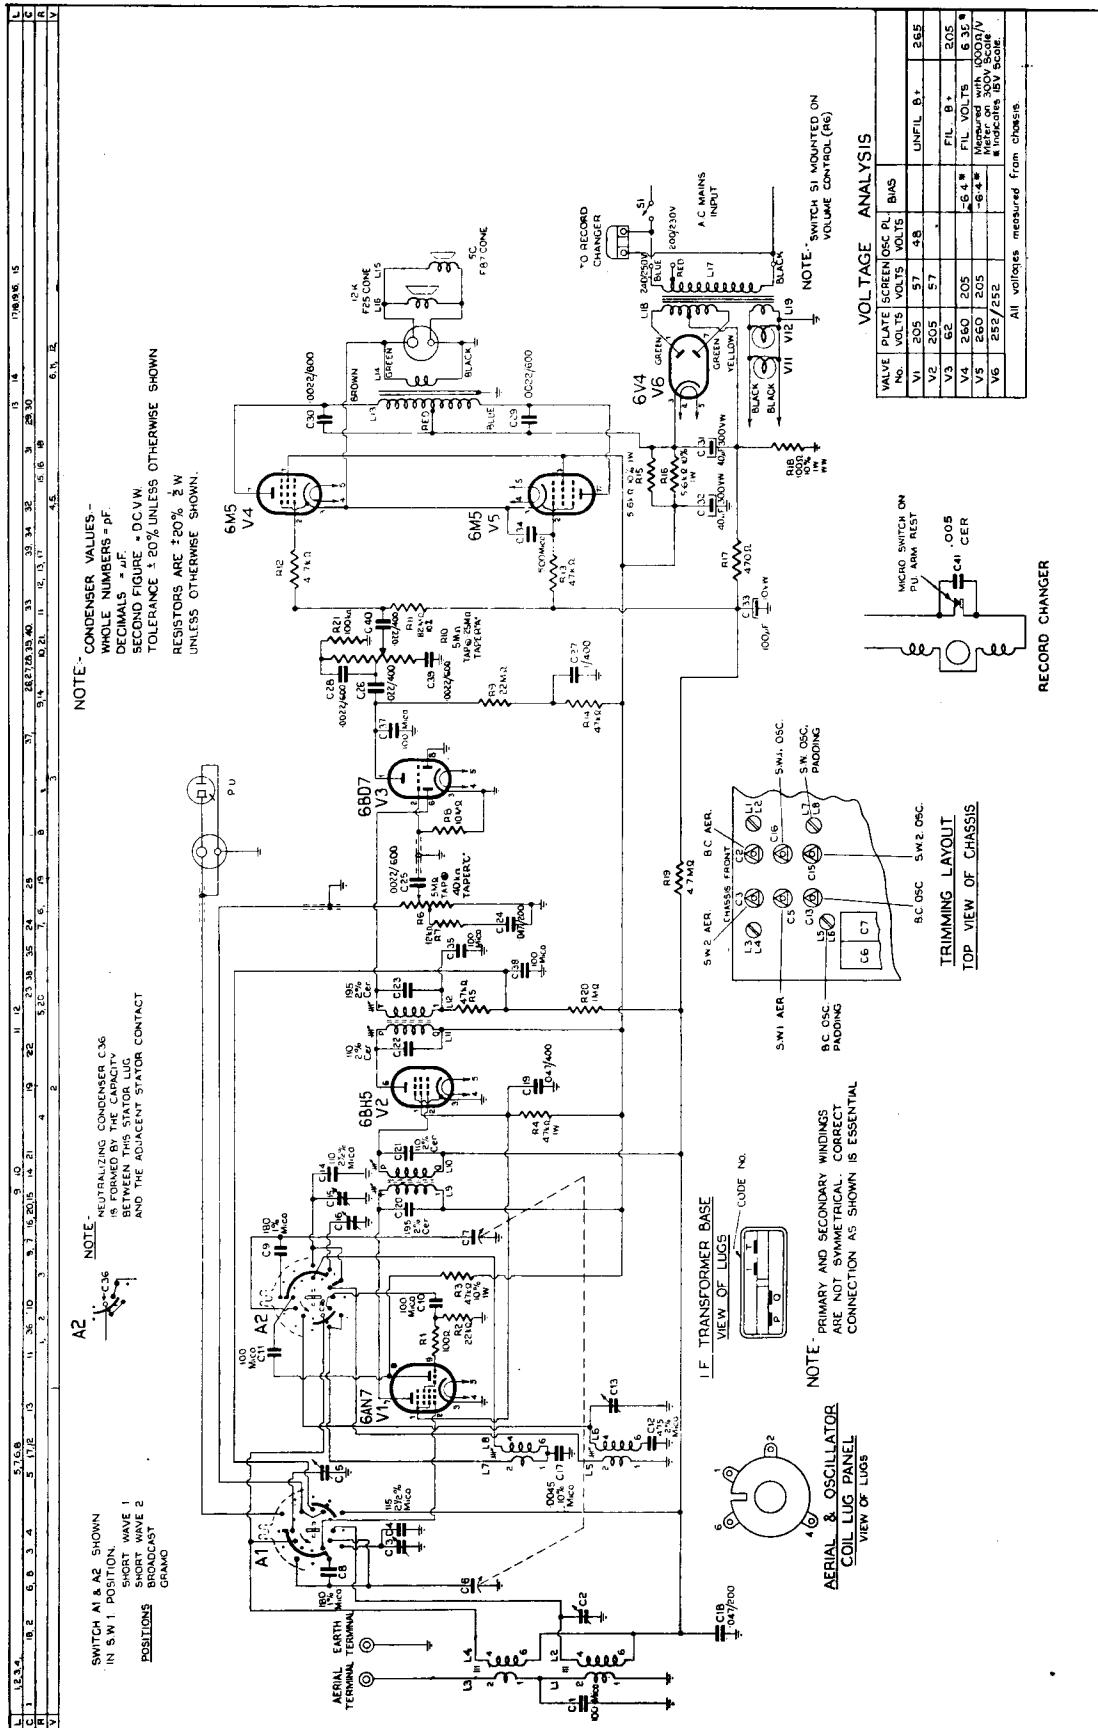

MODEL 185A-B-C

**PARTS LIST  
MODEL 185**

<b>CAPACITORS</b>			<b>RESISTORS</b>			<b>COILS</b>		
No.	Description	Code No.	No.	Description	Code No.	No.	Ohms	Description
C1, 10, 11, 35, 37, 38	100 pF mica		R1	100 ohms $\frac{1}{2}$ W W/W		L1	19.6-26.4	{ B/C aerial coil
C2, 3, 5, 15, 16	30 pF air trimmer	CZ.113.700	R2	22,000 ohms $\frac{1}{2}$ W carbon		L2	1.5-2.0	
C4	115 pF mica 2½%	CZ.066.138	R3	47,000 ohms 1W carbon 10%		L3	1.2-1.7	{ S/W aerial coil
C6, 7	2 gang tuning	CZ.107.755	R4	47,000 ohms 1W carbon		L4	<0.5	
C8, 9	180 pF mica 1%	CZ.065.722	R5, 13, 14	47,000 ohms $\frac{1}{2}$ W carbon		L5	0.8-1.2	{ B/C oscillator coil
C12	475 pF mica 2%	CZ.066.119	R6	0.5 megohm carbon potentiometer tapped at 0.25 megohm CZ.032.014 with S.P.S.T. switch (volume)		L6	2.7-3.7	
C13	60 pF air trimmer	49.055.58	R7	12,000 ohms $\frac{1}{2}$ W carbon 10%		L7	<0.5	{ S/W oscillator coil
C14	110 pF mica 2½%	CZ.066.140	R8	10 megohms $\frac{1}{2}$ W carbon		L8	<0.5	
C17	0.0045 mF mica 10%		R9, 21	0.22 megohm $\frac{1}{2}$ W carbon		L9	4.7-5.2	{ 1st I.F. transformer
C18, 40	0.047 mF 200V paper		R10	1 megohm carbon CZ.029.149 potentiometer (tone)		L10	8.0-9.0	
C19	0.047 mF 400V paper		R11	0.47 megohms $\frac{1}{2}$ W carbon		L11	8.3-9.2	{ 2nd I.F. transformer
C20, 21, 22, 23	Part of I.F. transformers		R12	4,700 ohms $\frac{1}{2}$ W carbon		L12	4.7-5.2	
C24	0.033 mF 200V paper		R15, 16	5,600 ohms 1W carbon 10%		L13	Output transformer 15,000 ohms P-P	Type KOL33 CZ.345.041
C25	0.01 mF 400V paper		R17	470 ohms $\frac{1}{2}$ W carbon		L14	Speaker	Type 5C F87
C26, 28	0.0047 mF 600V paper		R18	100 ohms 1W W/W 10%		L15	Speaker	Type 12K F25
C27	0.1 mF 400V paper		R19	4.7 megohm $\frac{1}{2}$ W carbon		L16	26-36	
C29, 30	0.0022 mF 600V paper		R20	1 megohm $\frac{1}{2}$ W carbon		L17	315-425	{ Power transformer
C31, 32	40 mF 350V electrolytic					L18		
C33	100 mF 10V electrolytic					L19	<0.5	
C34	500 pF mica							
C36	In-built neutralising capacitor— refer circuit diagram drawing							
C39	0.005 mF ceramic (anti-click capacitor)							

**IMPORTANT! When ordering spare parts, quote CODE NUMBER of part and MODEL NUMBER of Receiver. In claiming free replacement under GUARANTEE, return defective part PROMPTLY and quote MODEL and SERIAL NUMBER of Receiver and DATE OF PURCHASE.**

All tolerances are  $\pm 20\%$  unless otherwise specified.

All tolerances are  $\pm 20\%$  unless otherwise specified.

**PARTS LIST  
MODEL 185A-B-C**

**CAPACITORS**

No.	Description	Code No.	RESISTORS			COILS		
C1, 10, 11, 35, 37, 38	100 pF mica		R1	100 ohms $\frac{1}{2}$ W W/W		L1	19.6-26.4	B/C aerial coil
C2, 3, 5, 15, 16	30 pF air trimmer	CZ.113.700	R2	22,000 ohms $\frac{1}{2}$ W carbon		L2	1.5-2.0	
C4	115 pF mica 2½%	CZ.066.138	R3	47,000 ohms 1W carbon 10%		L3	1.2-1.7	S/W aerial coil
C6, 7	2 gang tuning	CZ.107.755	R4	47,000 ohms 1W carbon		L4	<0.5	
C8, 9	180 pF mica 1%	CZ.065.722	R5, 13, 14	47,000 ohms $\frac{1}{2}$ W carbon		L5	0.8-1.2	B/C oscillator coil
C12	475 pF mica 2%	CZ.066.119	R6	0.5 megohm carbon poten- tiometer tapped at 40,000 ohms with CZ.032.016 S.P.S.T. switch (volume)		L6	2.7-3.7	
C13	60 pF air trimmer	49.055.58	R7	12,000 ohms $\frac{1}{2}$ W carbon 10%		L7	<0.5	S/W oscillator coil
C14	110 pF mica 2½%	CZ.066.140	R8	10 megohms $\frac{1}{2}$ W carbon		L8	<0.5	
C17	0.0045 mF mica 10%		R9	0.22 megohm $\frac{1}{2}$ W carbon		L9	4.7-5.2	1st I.F. transformer
C18, 24	0.047 mF 200V paper		R10	0.5 megohm carbon potentiometer tapped at 0.25 megohm (tone)		L10	8.0-9.0	A3.126.84
C19	0.047 mF 400V paper		R11	0.82 megohms $\frac{1}{2}$ W carbon 10%		L11	8.3-9.2	2nd I.F. transformer
C20, 21, 22, 23	Part of I.F. transformers		R12	4,700 ohms $\frac{1}{2}$ W carbon		L12	4.7-5.2	CZ.320.444
C25, 28, 29, 30, 39	0.0022 mF 600V paper		R15, 16	5,600 ohms 1W carbon 10%		L13	Output transformer 15,000 ohms P-P	Type KOL33 CZ.345.041
C26, 40	0.022 mF 400V paper		R17	470 ohms $\frac{1}{2}$ W carbon		L14		Type 5C F87 Type 12K F25
C27	0.1 mF 400V paper		R18	100 ohms 1W W/W 10%		L15	Speaker	
C31, 32	40 mF 350V electrolytic		R19	4.7 megohm $\frac{1}{2}$ W carbon		L16	Speaker	
C33	100 mF 10V electrolytic		R20	1 megohm $\frac{1}{2}$ W carbon		L17	26-36	
C34	500 pF mica		R21	100,000 ohms $\frac{1}{2}$ W carbon		L18	315-425	Power transformer
C36	In-built neutralising capacitor— refer circuit diagram drawing					L19	<0.5	CZ.344.089
C41	0.005 mF ceramic (anti-click capacitor)							

All tolerances are  $\pm 20\%$  unless otherwise specified.

**IMPORTANT! When ordering spare parts, quote CODE NUMBER of part and MODEL NUMBER of Receiver. In claiming free replacement under GUARANTEE, return defective part PROMPTLY and quote MODEL and SERIAL NUMBER of Receiver and DATE OF PURCHASE.**

All tolerances are  $\pm 20\%$  unless otherwise specified.