

TECHNICAL INFORMATION AND SERVICE DATA

ISSUED BY AMALGAMATED WIRELESS (AUSTRALASIA) LTD.



VOLKSWAGEN

ALL TRANSISTOR MANUALLY TUNED

CAR RADIO VA265

(This corresponds to A.W.A. Model MF25)

MANUFACTURED BY AMALGAMATED WIRELESS (AUSTRALASIA) LIMITED

WARNING: This receiver is designed for 6-VOLT NEGATIVE earth operation only.

GENERAL DESCRIPTION

Model VA265 is a 6-transistor, 6-volt negative earthed, manually tuned car radio designed for the reception of the Medium Wave Broadcasting Band. The receiver is tailored to fit VW1200 and VW1300 cars.

ELECTRICAL AND MECHANICAL SPECIFICATIONS

Frequency Range 525-1,620 kHz
Intermediate Frequency 455 kHz
Battery Voltage 6 Volts
Battery Polarity Negative Earth
Battery Consumption 1.0 Amp.

Loudspeaker
5" 53387

V.C. Impedance 15 ohms at 400 Hz

Undistorted Power Output 2 Watts

Controls:

Tuning, Volume

Transistor and Diode Complement:

AWV 2N1637/27 R.F. Amplifier.

AWV 2N1637/27 Converter.

AWV 2N1637/27 I.F. Amplifier.

AWV 2N408 Audio Amplifier

AWV 2N649 Driver

AWV 2N301 Output

AWV 1N87A A.G.C.

AWV 1N87A Detector

Dial Scale Replacement

Remove the control knobs

Remove the escutcheon and replace the dial scale.

Dec, 67

VOLKSWAGEN 6 TRANSISTOR CAR RADIO VA265
(A.W.A. MF25)

DRIVE CORD REPLACEMENT.

The cord assembly is at centre travel (Fig. 1) when the tuning spindle is turned 3 turns clockwise from its full anticlockwise position. Then, both spring and pointer are in the mid position.

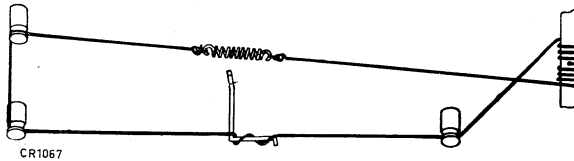


fig. 1

SERVICE NOTES.

TRANSISTOR MOUNTING.

Power transistors are thermally connected to but electrically insulated from the heat sink.

If a transistor is removed or replaced for any reason, it is essential that the following method of mounting be carefully adopted.

On no account must the old mica insulator be used again.

To mount the transistor first liberally smear the relevant surfaces of the heat sink, the transistor and both sides of the mica insulator with Silicone Heat Sink Compound, type 340 (Code No. 217016).

Place the mica insulator and transistor in place on the heat sink and secure the assembly to the heat sink with two No. 6 x $\frac{1}{2}$ " self-tapping screws.

Warning: Excessive tightening of these screws can distort the transistor with the danger of rupture to the mica insulator.

Finally check with an ohmmeter the insulation between the collector (mounting flange) and the heat sink (should be greater than 1 megohm). For this check, connections to the transistor socket should be removed.

PRINTED BOARD REMOVAL.

Remove the ten Philips Head screws securing the lid to the cabinet body and remove the lid.

From the rear of the receiver, release the board retaining clips and tilt the board to clear the clips.

Move the board backwards to clear the board locating slots in the cabinet body.

Lift the left-hand end of the board upwards to clear the top of the cabinet body and the board can be tilted to reveal the wiring side.


Re-assembly is the reverse of the above.

Power Transistor Test:

Power transistors are easily checked for short or open circuit by careful use of an ohmmeter to determine the forward and reverse resistance of each junction (as a diode).

An ohmmeter, either multimeter or vacuum tube type, having a small battery voltage of 1.5 volts applied on the X1 range must be used. Check this with a voltmeter before using, as a higher voltage will cause damage. Also check the polarity of the meter leads in the ohmmeter position. Often this is the reverse of the polarity when used as a voltmeter or ammeter.

Fig. 2 shows the correct resistance readings between the junctions of the 2N301 power transistor with the + and - signs indicating the correct polarity of the applied ohmmeter leads. The base and emitter leads should be disconnected from a mounted transistor.

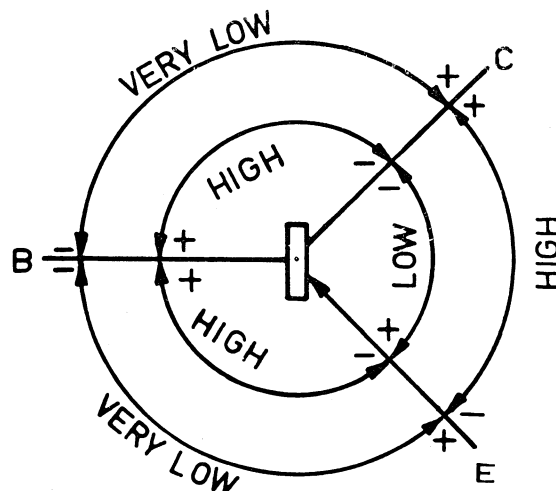

RESISTANCE DIAGRAM

fig. 2

ALIGNMENT PROCEDURE

Manufacturer's Setting of Adjustments:

The receiver is tested by the manufacturer with precision instruments and all adjusting screws, except the aerial trimmer, are sealed. Re-alignment should be necessary only when components in tuned circuits are repaired or replaced, or when it is found that the seals over the adjusting screws have been broken.

It is especially important that the adjustments should not be altered unless the correct instruments, listed below, are used.

For all alignment operations connect the "low" side of the signal generator to the receiver chassis and keep the generator output as low as possible to avoid a.g.c. action. Also, keep the volume control in the maximum clockwise position.

When the generator is connected to the aerial terminal, use the dummy aerial as shown in the diagram.


Testing Instruments:

Signal Generator—Modulated 400 Hz or Modulated Oscillator.

Dummy Aerial—See diagram.

Output Meter—15 ohms impedance.

I.F. Alignment Tool No. 39462.

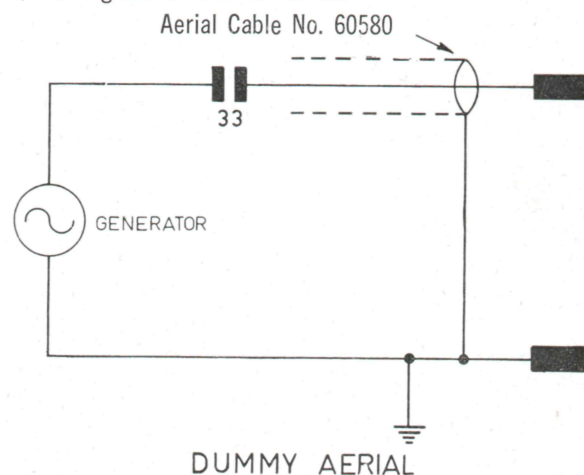

A. GENERAL.

ALIGNMENT TABLE

ORDER	CONNECT GENERATOR TO:	TUNE GENERATOR TO:	TUNE RECEIVER TO:	ADJUST FOR MAX. PEAK OUTPUT:
1	Collector of VT1 *	455 kHz	H.F. Limit	TR3 Secondary Core
2	Collector of VT1 *	455 kHz	H.F. Limit	TR3 Primary Core
3	Collector of VT1 *	455 kHz	H.F. Limit	TR2 Secondary Core
4	Collector of VT1 *	455 kHz	H.F. Limit	TR2 Primary Core
Repeat the above adjustments until maximum output is obtained.				
5	Aerial Terminal via Dummy Aerial	1,620 kHz (Accurate)	H.F. Limit	Oscillator Trimmer (C14)
6	Aerial Terminal via Dummy Aerial	1,550 kHz	1,550 kHz	R.F. Trimmer (C6)
7	Aerial Terminal via Dummy Aerial	1,550 kHz	1,550 kHz	Aerial Trimmer (C1)
Repeat adjustments 5, 6 and 7 until no further improvement is possible.				

* A 0.01 μ F capacitor should be connected in series with the high side of the generator.


B. CALIBRATION ALIGNMENT: With the receiver connected to an aerial, the dial scale calibration may be checked and corrected if necessary. The pointer may be moved relative to the dial scale by sliding it along the dial cord.

C. TUNER ALIGNMENT.

Adjustment of the tuner cores should not be made unless a coil has been replaced or it is suspected that the alignment has been interfered with, in which case, carefully follow the procedure below:


1. Adjust the tuner to the H.F. end stop and back all cores out of the coils as far as possible.
2. Tune the signal generator accurately to 1,620 kHz and adjust the oscillator, R.F. and aerial trimmers for maximum output.
3. Tune the signal generator accurately to 600 kHz and the core carriage to a point 0.680" from the H.F. end stop. Adjust the oscillator, R.F. and aerial cores for maximum output.
4. Tune the signal generator to 1,620 kHz and tuner to the H.F. end stop and re-adjust the oscillator trimmer for maximum output.
5. Tune the signal generator and tuner to 1,550 kHz and adjust the R.F. and aerial trimmers for maximum output.
6. Repeat steps 3, 4 and 5 until no further improvement is obtained.
7. Seal the tuning core studs.

VOLKSWAGEN CAR RADIO VA265

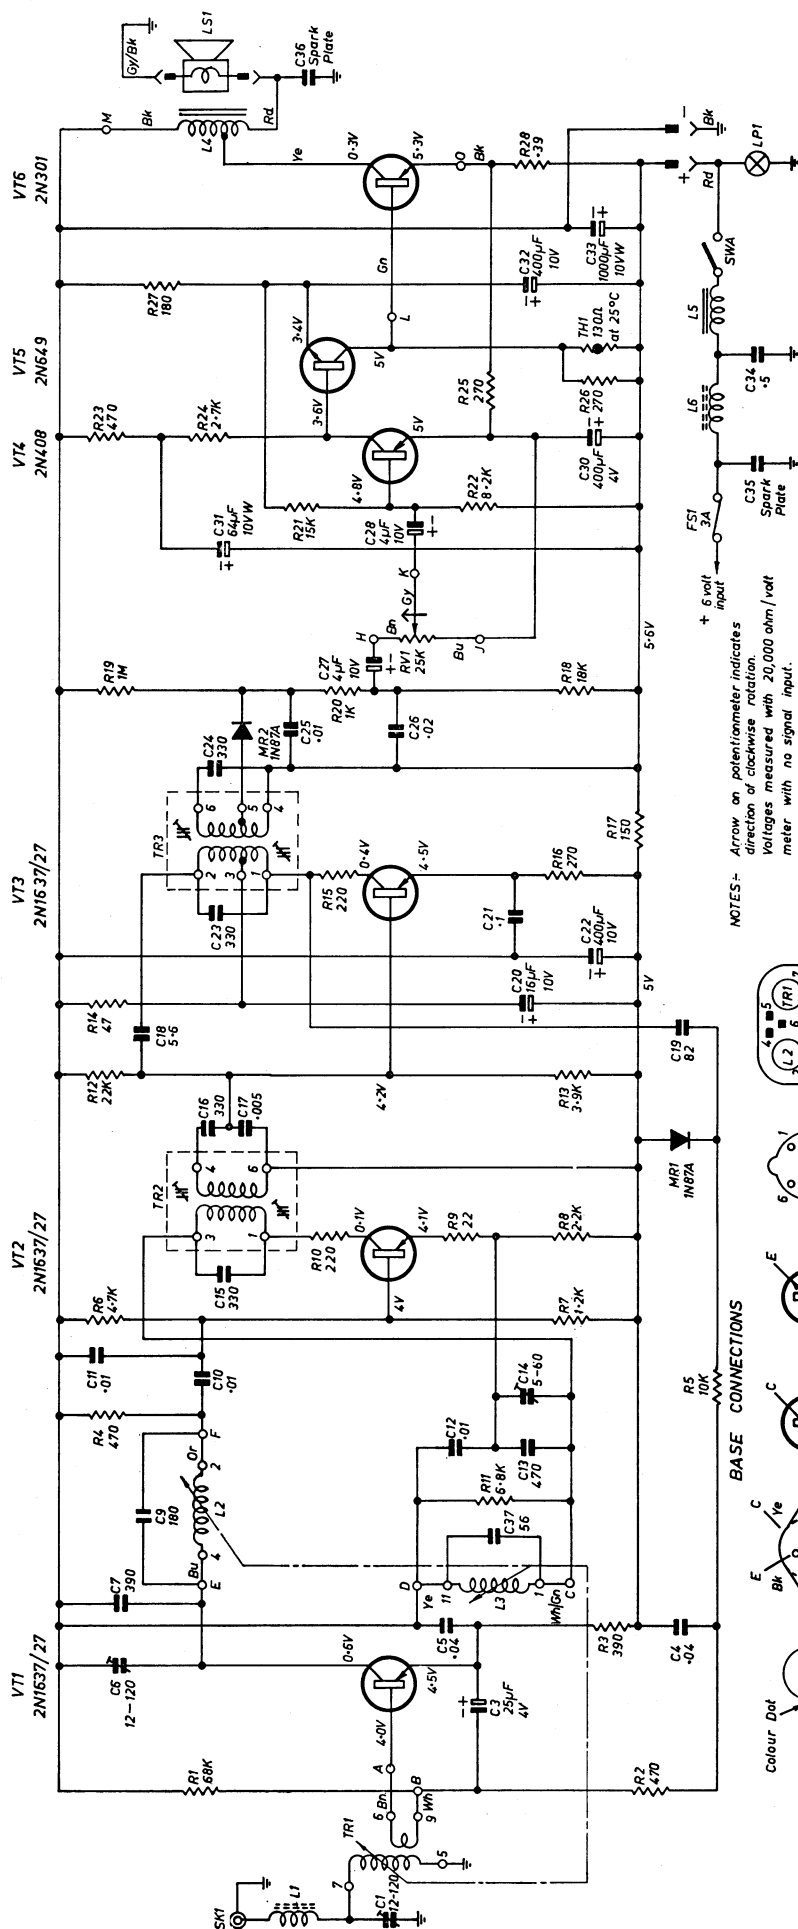


NOTES:-
 Arrow on potentiometer indicates
 direction of clockwise rotation.
 Voltages measured with 20,000 ohm/volt
 meter with no signal input.

BASE CONNECTIONS

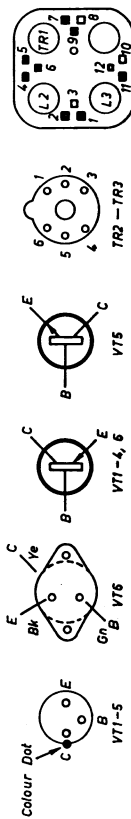

CR1/55

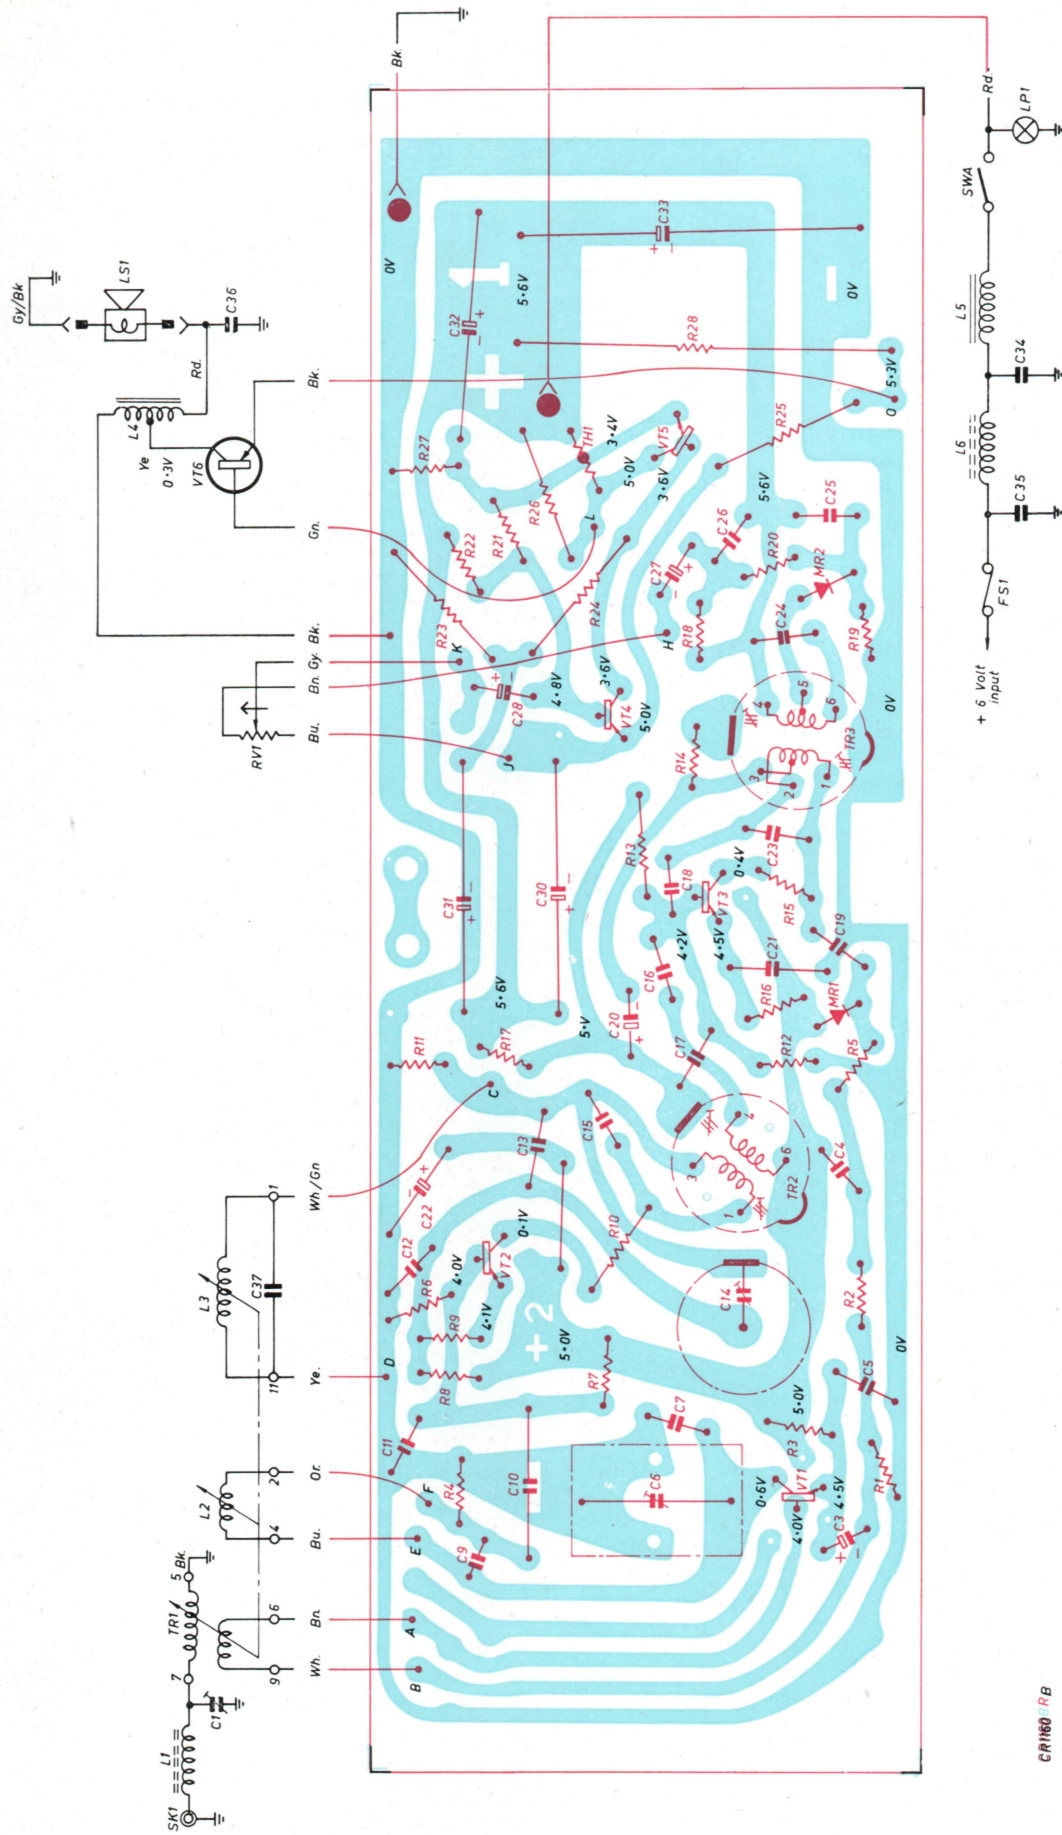

Notes: The diagram represents the view from the wiring side of the printed board.

Blue indicates printed wiring.

Red indicates components and leads mounted on the remote side of the board.

Black indicates those components and leads mounted on the wiring side or completely removed from the board.

All voltages shown are positive with respect to the board earth and measured with no signal input and volume maximum clockwise using a 20,000 ohm/volt meter.

CIRCUIT CODE

CODE No.	DESCRIPTION	PART No.	CODE No.	DESCRIPTION	PART No.
RESISTORS					
All resistors composition type unless otherwise stated.					
R1	68K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C19	82pF $\pm 10\%$ N750 disc	
R2	470 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C20	16 μ F 10VW Electrolytic	228878
R3	390 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C21	0.1 μ F $\pm 80\%$ -20% 25VW Hi-K disc	229786
R4	470 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C22	400 μ F 10VW Electrolytic	
R5	10K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C23	330pF $\pm 5\%$ N750 disc	
R6	4.7K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C24	330pF $\pm 5\%$ N750 disc	
R7	1.2K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C25	0.01 $\pm 20\%$ 200VW AEE W99	
R8	2.2K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C26	0.02 $\pm 20\%$ 200VW AEE W99	
R9	22 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C27	4 μ F 10VW Electrolytic	228189
R10	220 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C28	4 μ F 10VW Electrolytic	228189
R11	6.8K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C29	Not Used	
R12	22K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C30	400 μ F 4VW Electrolytic	229854
R13	3.9K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C31	64 μ F 10VW Electrolytic	229629
R14	47 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C32	400 μ F 10VW Electrolytic	229786
R15	220 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C33	1000 μ F 10VW Electrolytic	229914
R16	270 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C34	0.5 μ F $\pm 20\%$ 200VW AEE W48	
R17	150 ohms $\pm 10\%$ $\frac{1}{2}$ watt		C35	Spark Plate	64494
R18	18K ohms $\pm 10\%$ $\frac{1}{2}$ watt		C36	Spark Plate	64494
R19	1 Megohm $\pm 10\%$ $\frac{1}{2}$ watt		C37	56pF $\pm 5\%$ N750 disc	
R20	1K ohm $\pm 10\%$ $\frac{1}{2}$ watt		TRANSFORMERS		
R21	15K ohms $\pm 10\%$ $\frac{1}{2}$ watt		TR1	Tuning Coil Aerial	52726
R22	8.2K ohms $\pm 10\%$ $\frac{1}{2}$ watt		TR2	1st I.F. Transformer	52797
R23	470 ohms $\pm 10\%$ $\frac{1}{2}$ watt		TR3	2nd I.F. Transformer	52798
R24	2.7K ohms $\pm 10\%$ $\frac{1}{2}$ watt		TRANSISTORS & DIODES		
R25	270 ohms $\pm 10\%$ $\frac{1}{2}$ watt		VT1	2N1637/27	
R26	270 ohms $\pm 10\%$ $\frac{1}{2}$ watt		VT2	2N1637/27	
R27	180 ohms $\pm 5\%$ $\frac{1}{2}$ watt		VT3	2N1637/27	
R28	0.39 ohm $\pm 10\%$ 1 watt		VT4	2N408	
RV1	25K ohms curve S33 carbon W/S Vol.	620244	VT5	2N649	
CAPACITORS			VT6	2N301	
C1	12-120pF Trimmer Aerial	231010	MR1	1N87A	
C2	Not Used		MR2	1N87A	
C3	25 μ F 4VW Electrolytic	229428	INDUCTORS		
C4	0.04 μ F $\pm 20\%$ 200VW AEE W99		L1	Aerial Choke	205914
C5	0.04 μ F $\pm 20\%$ 200VW AEE W99		L2	Tuning Coil R.F.	53257
C6	12-120pF Trimmer R.F.	231018	L3	Tuning Coil Oscillator	52792
C7	390pF $\pm 5\%$ 630VW Polystyrene		L4	Output Choke	53512/002
C8	Not Used		L5	L.T. Filter Choke	51702/004
C9	180pF $\pm 5\%$ 100VW Polystyrene		L6	L.T. Filter Choke	205970
C10	0.01 μ F $\pm 20\%$ 200VW AEE W99		MISCELLANEOUS		
C11	0.01 μ F $\pm 20\%$ 200VW AEE W99		FS1	3 Amp. Fuse	370011
C12	0.01 μ F $\pm 20\%$ 200VW AEE W99		LP1	Pilot Lamp, 6 volt	428105
C13	470pF $2\frac{1}{2}\%$ 630VW Polystyrene		SK1	Aerial Socket	66790
C14	5-60pF Trimmer Oscillator	231020	SWA	On-Off Switch (on RV1)	
C15	330pF $\pm 5\%$ N750 disc		TH1	130 ohms at 25°C NTC Thermistor	893703
C16	330pF $\pm 5\%$ N750 disc		LS1	Speaker 5"	53387
C17	0.005 μ F $\pm 20\%$ 200VW AEE W99				
C18	5.6pF $\pm 10\%$ NPO disc				

D.C. RESISTANCE OF WINDINGS

Winding	D.C. Resistance in ohms	Winding	D.C. Resistance in ohms
Aerial Choke L1	3	2nd I.F. Transformer TR3:	
Aerial TR1:		Primary	6
Primary	7	Secondary	6
Secondary	*		
Oscillator L3	2.9	2nd I.F. Transformer:	
R.F. L2	1.6	Primary	6
Output Choke L4	*	Secondary	6
L.T. Choke L5	*		
L.T. Choke L6	*		

* Less than 1 ohm.

The above readings were taken on components from a standard chassis, but substitution of materials during manufacture may cause variations and it should not be assumed that a component is faulty if a slightly different reading is obtained.

MECHANICAL REPLACEMENT PARTS

Item	Part No.	Item	Part No.
Cable, Low Tension, Female	49923	Spring, Drive Cord	60717
Cable, Low Tension, Male	49996	Tuner Assembly	63920/023
Cable, Speaker	54523	Comprising:	
Clip, Spring, Board Retaining	67633	Clip, Thrust	63926
Dial Scale	65049	Core, Tuning (2)	63939
Escutcheon	68279	Core, Tuning	63940
Insulator, Transistor Mounting	38568	Grommet, Core Mounting	33913
Knob Assembly (2)	68284	Spindle, Tuning	68272
Pointer	68273	Spring, Tension	44179
Socket, Transistor Mounting	793276		

NOTE: When ordering spares, always quote the above Part Numbers, and in the case of coloured parts, such as knobs, etc., also quote the colour.