



“DOUGLAS”

---

## INSTRUCTIONS FOR ORDERING SPARE PARTS.

---

WHEN ordering spare parts the following suggestions, if observed, will save unnecessary delays caused by correspondence arising from inadequate descriptions.

1. The type of the Reel Carrier should always be quoted on the order, e.g. “DOUGLAS” *Standard* Reel Carrier etc., and the part numbers and descriptions of the parts required listed; these are shown on the plates.
2. If the desired part is not shown in the illustrations or indicated on the parts list, a complete description must be given, and where possible a pattern or sketch should be sent.

When improvements are made in the design of any type of Reel Carrier and the parts are interchangeable, the latest type of part will always be supplied, unless the order states that the parts must be the same as already fitted. In this case the date of purchase and source of supply should be given.

The Company retain the right to alter any design without notification, and guarantee against faulty workmanship only those parts manufactured by themselves.

Overseas users of “DOUGLAS” Coil Winding Machines should address their enquiries to the Company’s Agents in their country. Users in the United Kingdom should write direct to the address below.

### AVO LIMITED

AVOCET HOUSE, 92-96, VAUXHALL BRIDGE ROAD, LONDON, S.W.1

Telephone : Victoria 3404 (12 lines)

Contractors to the ADMIRALTY, WAR OFFICE,  
AIR MINISTRY, POST OFFICE, MINISTRY OF AVIATION,  
CROWN AGENTS for the COLONIES and ELECTRICAL and  
TELEPHONE MANUFACTURERS throughout the World.

"DOUGLAS"

REEL

CARRIERS



# MANUAL OF INSTALLATION, OPERATION AND MAINTENANCE

**THIS** instruction and spare parts manual is  
intended to cover all types of "DOUGLAS"  
Reel Carriers.

## — INDEX —

	PAGE
"DOUGLAS" STANDARD REEL CARRIER ... ..	4
"DOUGLAS" UNIVERSAL REEL CARRIER ... ..	5
"DOUGLAS" GENERAL PURPOSE REEL CARRIER ... ..	6
"DOUGLAS" FLYER REEL CARRIER ... ..	7
"DOUGLAS" LINEAR MEASURE REEL CARRIER ... ..	8
SUPPLY REEL TABLE ... ..	8
WIRE TENSION CHARTS (GENERAL PURPOSE REEL CARRIER) ...	9
BRAKE TENSION TABLE ... ..	10
WIRE TENSION CHART (UNIVERSAL REEL CARRIER) ... ..	11

## LIST OF PLATES

"DOUGLAS" STANDARD REEL CARRIER—PLATE 1 ... ..	13
"DOUGLAS" UNIVERSAL REEL CARRIER—PLATE 2 ... ..	15
"DOUGLAS" GENERAL PURPOSE REEL CARRIER—PLATE 3 ...	17
"DOUGLAS" FLYER REEL CARRIER—PLATE 4 ... ..	19
"DOUGLAS" LINEAR MEASURE REEL CARRIER—PLATE 5 ...	21

THE "DOUGLAS"



REEL CARRIERS

# "DOUGLAS" STANDARD REEL CARRIER

The "DOUGLAS" Standard Reel Carrier illustrated on Plate No. 1 is supplied as an accessory with many of the bench type "DOUGLAS" Coil Winding Machines. It may, however, be purchased as a complete assembly as illustrated, or Reel Carrier or Stand may be purchased separately.


Wires from 47 s.w.g. (0.002" — 0.05 mm.) diameter to 28 s.w.g. (0.0148" — 0.38 mm.) diameter can be de-reeled when coils of round, square or rectangular section have to be wound, providing the following two points are carefully observed :—

- (a) Rectangular coil section must have sides within the ratio of 2 to 1.
- (b) The Wire Supply Reel should be in accordance with the British Standards Institution Specification, No. 1489, Table 2 (an extract is reproduced on Page 8). The reason for this is that Reels having an excessive gross weight cannot be adequately controlled.

When multiple coil winding has to be carried out, up to four "DOUGLAS" Standard Reel Carriers can be mounted on one Stand.

## POSITIONING THE REEL CARRIER ON THE BENCH

The "DOUGLAS" Standard Reel Carrier assembly should be secured to the bench at the back of the Machine so that the angle "x" shown on the accompanying sketch is between 60°—80° and the Pulley, item 4, in the centre of the total traverse width. The Reel Carrier may be positioned on the tube by loosening the Clamping Screw at the back of the Reel Carrier Frame; it should be arranged as near to the top of the tube as practicable.

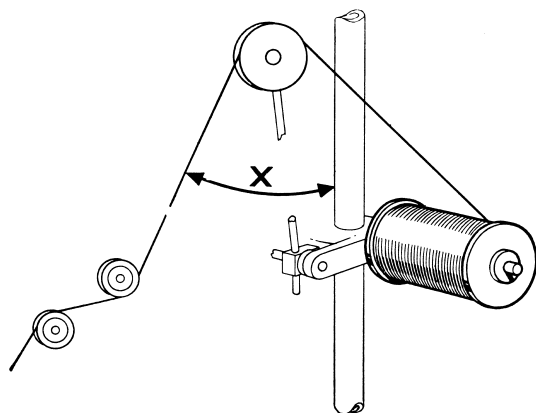

## SETTING THE TENSION

The Wire Supply Reel must first be placed on the Main Spindle, Item 5, so that the wire comes from the top of the Reel when unwound; the Loose Cone, Item 6, is then replaced on the spindle and the Quick Release Nut, Item 7, is pushed along the spindle up to the Loose Cone and tightened, thus clamping the Supply Reel.

The wire is then drawn from the Reel and passed over the Pulley, Item 45 (the Pulley Arm, Item 4, is held in a clamping block, Item 10, which may be adjusted to bring the Pulley approximately opposite the centre of the Reel). The tension may now be adjusted and adjustment will be simplified if the following instructions are noted :—

The Pulley Arm, Item 4, when pulled down actuates a Cam, Item 20, which releases the Bottom Brake, Item 23, from the Drum, Item 27, which controls the over-run of the Reel. The Spring, Item 25, returns the Pulley Arm to its neutral position and is adjusted according to the gauge of wire being de-reeled.

The Upper Brake Spring, Item 29, is adjusted by means of the Adjusting Screw, Item 39, and when applied this gives the initial brake tension. Hence the procedure of adjusting the tension for a particular gauge of wire is thus :—all the tension on the Bottom Brake Shoe should be reduced so that it falls away from the Drum. A weight equivalent to the wire being de-reeled, see Table, Page 9, is hung on the end of the wire and tension applied to the Upper Brake Spring by means of the Adjusting Screw, and to the return spring for the pulley arm by means of the Adjusting Stud, Item 26. When these are correctly set the weight should fall gradually. The Bottom Brake Shoe is then brought up until it just touches the Drum; this will set the correct over-run for the wire and winding may be commenced.

## MAINTAINING THE REEL CARRIER

It is important that the Main Spindle, Item 5, should rotate very freely and from time to time this must be dismantled, and the Ball Race, Item 13, cleaned and re-lubricated with a fine grade oil. This instruction applies also to the Pulley, Item 45, which should be examined for wear, as this may damage the covering of the wire.

Care should be taken to see that the Upper and Lower Brake Leathers are kept free from dust, dirt and oil. If dust or dirt are allowed to collect on these parts erratic tension will result and rapid wear of the drum will take place.

"DOUGLAS"

R E E L

C A R R I E R S

# "DOUGLAS" UNIVERSAL REEL CARRIER


The "DOUGLAS" Universal Reel Carrier as illustrated on Plate No. 2 is especially useful when irregular-shape coils have to be wound. Wires from 50 s.w.g. (0.001"—0.025 mm.) to 21 s.w.g. (0.032" — 0.8 mm.) can be de-reeled, but it must be borne in mind that the maximum diameter of Reel which can be used is 4" (101 mm.). The reason for this limited diameter of reel is that if Reels having too large a gross weight are employed, the tension will vary considerably during the use of the wire on the Reel.

The Reel Carrier is complete with three Wire Guide Arms, namely, Light Tension Arm Assembly, Item 56, Medium Tension Arm Assembly, Item 55 and Heavy Tension Arm Assembly, Item 53. The light arm should be used for wires from 50 s.w.g. (0.001"—0.25 mm.) to 48 s.w.g. (0.0016"—0.04 mm.); the Medium arm for wires from 47 s.w.g. (0.002"—0.05 mm.) to 33 s.w.g. (0.010"—0.25 mm.) and Heavy arm for wires from 32 s.w.g. (0.0108"—0.27 mm.) to 21 s.w.g. (0.032"—0.81 mm.). When the Heavy Tension Arm is being used the Spring, Item 60, is adjusted between the Arm and the Spindle, Item 59.

The Reset Spring, Item 38, contained inside the Cover, Item 58, is adjustable by means of the Hand Wheel Assembly, Item 27, and is set in accordance with the chart shown on Page 11. It must be borne in mind that the figures given on this chart are not intended to be taken as exact and are only an indication of the approximate position to which the indicator should be set. Variations will, of course, occur, due to the differences in tensile strengths of wire and weights of reels employed. The figures must, of course, be increased where wires other than copper are being wound.

The Slider Pulley, Item 8, mounted on the Guide Wires, Item 70, is attached to the Column Spring, Item 27, and is intended to act both as an over-run device and a shock absorber. The two Slider Stops, Item 68, should be set to allow the Slider to move between them within reasonable limits. For instance, if a round coil is being wound the distance between the Stops should be quite small, whilst if a coil of irregular section is being wound, with a large ratio difference between the length of the sides, the Stops should be set far apart. It is an advantage to use the Slider Pulley as near to the top of the column as possible.

The method of threading the wire over the Pulley on the Wire Guide Arm and the Slider Pulley is shown in the sketch below.

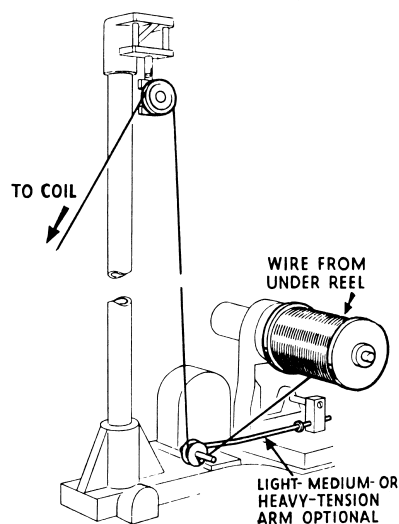

## POSITIONING THE REEL CARRIER

When setting the Reel Carrier up on the bench it should be borne in mind that the column end of the casting should be close to the Machine.

## MAINTAINING THE REEL CARRIER

Care should be taken to see that the Brake Pad which comes into contact with the Drum on the main Reel-Carrying Spindle is kept free from dirt, dust and oil. If dirt and dust are allowed to collect on this pad erratic tension will be obtained and rapid wear of the Drum will take place. The vertical wires should be kept lubricated with a fine grade oil and the Small Pulleys on the arms should also have their Spindles oiled at frequent intervals.

The Slider Pulley, Item 8, must be examined from time to time to ensure that it has not suffered damage, as this will affect the covering on the wire. This also applies to the Pulleys on the Light, Medium and Heavy Tension Arms.



“DOUGLAS”

REEL

CARRIERS

## “DOUGLAS” GENERAL PURPOSE REEL CARRIER

The “DOUGLAS” General Purpose Reel Carrier, illustrated on Plate No. 3, is similar to that fitted to the “DOUGLAS” Large Multiple-Coil Winding Machine, and can be supplied either as a right or left hand Reel Carrier, i.e. with the Supply-Reel Spindle on the left or right hand side of the stand tube.

The design of this Reel Carrier has been greatly improved since the early prototype and now has four methods of applying tension, hence wires from 47 s.w.g. (0.002” — 0.05 mm.) to 18 s.w.g. (0.048” — 1.22 mm.) can be de-reeled when coils of round, square or rectangular section have to be wound. Care, however, should be taken to see that the Supply Reel is in accordance with the British Standards Institution Specification No. 1489, Table 3, included on Page 8, since Reels having an excessive gross weight cannot be adequately controlled.

The Reel Carriers can be purchased as a complete assembly on a tube similar to that for the “DOUGLAS” Standard Reel Carrier (shown on Plate No. 1).

### POSITIONING THE REEL CARRIER ON THE BENCH

The “DOUGLAS” General Purpose Reel Carrier assembly should be secured to the bench at the back of the Machine so that the angle “x” shown on sketch, Page 4, is approximately between 60°—80°, and the Pulley, Item 10, in the centre of the total traverse width. The Reel Carrier may be positioned on the tube by loosening the Cotter Pin, Item 39, and should be arranged as near to the top as possible, as this gives the best winding results.

### ADJUSTING THE TENSION

The Wire Supply Reel should be loaded on the Spindle so that when the wire is unwound the Reel revolves in a clockwise direction when viewed from the Quick Release Nut end. This is to ensure that the Quick Release Nut, Item 41, does not become loose during winding. From the Supply Reel the wire is drawn under the Pulley on the Spindle, Item 40, and over the top of the Pulley on the Arm, Item 5.

Under normal winding conditions it is only necessary to change the Light and Heavy Extension Springs, Item 19 and 20, according to the gauge of wire being de-reeled. A Tension Chart and Tension Brake Table are shown on Pages 9 & 10, the

latter being only to serve as a guide. Therefore, if the following example is noted the various tension adjustments will be readily understood.

Assuming 46 s.w.g. (0.0024” — 0.06 mm.) is to be de-reeled the Hand Wheel, Item 62, is turned until the Spring Barrel and Arm Assembly, Items 22 and 23, leave the Brake Lever, Item 48, i.e. with the Wire Tension Indicator, Item 69 or 70 turned past zero. The Light Tension Spring, Item 19, is assembled on the Arm and if used in conjunction with the Spring, Item 34, the required tension can be applied.

To adjust the tension a “Tensometer,” if available, is used, between the wire from the Pulley, Item 10, and the Wire Guide Arms on the Paper Inserting Unit. The Machine is then run at top speed and the tension adjusted by loosening or tightening the Knurled Nuts, Items 17 and 35, until the Tensometer reads 1.5 ozs. (42 grams). If a Tensometer is not available a weight equal to 1.5 ozs. (42 grams) is hung on the wire from the Arm and the tension adjusted as described above until the Supply Reel commences to revolve.

It will now be seen that the Tension Brake Table can be used as a guide for various gauges of wire and the Tension Chart for the winding weights.

The Fixed Tension Adjuster may be used in either of two positions, one in the middle of the Brake Spring and the other directly over the Brake Block, this Adjuster is for use when sufficient tension cannot be applied by the other methods, and if the screw is placed in the middle hole the tension will not be as fierce as if placed directly over the Brake Block.

### MAINTAINING THE REEL CARRIER

The Pulley Wheels, Items 10 and 12, should be lubricated with a light grade oil every two to three days, and must be examined from time to time to ensure that they have not suffered damage, as this will affect the covering on the wire.

The Supply Reel Spindle, Item 41, must at all times rotate very freely, thus the Bearing, Item 47, must be lubricated with a light grade oil and dismantled from time to time and cleaned.

The Worm Wheel Bearings, Item 65, and the Worm and Worm Wheel Teeth, Items 65, 66 and 70, must also be lubricated.

On no account must oil or dirt be allowed to collect on the Friction Brake Pulley, Item 55, as this will seriously affect the winding tension.

“DOUGLAS”

R E E L

C A R R I E R S

# “DOUGLAS” FLYER REEL CARRIER

The “DOUGLAS” Flyer Reel Carrier is a take-off stand for use with heavy gauge wire and is illustrated on Plate No. 4. This Reel Carrier has been especially designed for winding coils such as L.T. secondaries, magneto coil primaries, or field or stator coils and can be used with any type of Winding Machine. Wires from 30 s.w.g. (0.0124" — 0.3 mm.) to 14 s.w.g. (0.08" — 0.3 mm.) can be de-reeled.

The Supply Drum sizes must be within the following dimensions :—

Maximum width of Drum	... 7" (178 mm.)
Maximum diameter of Drum	... 13" (330 mm.)
Maximum bore of Drum	... $\frac{3}{4}$ " (19 mm.)


## POSITIONING THE REEL CARRIER

It is intended that the Flyer Drum Reel Carrier be secured to the floor behind the Machine within the centre of the total traverse width, but if the winding head of the Machine is fairly high the Carrier must be raised accordingly.

## ADJUSTING THE REEL CARRIER

To load the Wire Supply Drum, the Friction Disc Carrier Casting, Item 20, is unscrewed from the Stud, Item 26, this will allow the whole of the Tension Unit and Wire Guide Arm Assembly to be lifted away and the Supply Drum can then be placed over the Stud, care being taken to ensure that the wire rotates in a clockwise direction when de-reeled looking on the top of the Drum. This is important as it has the tendency to tighten the Friction Disc Carrier Casting on the Supply Drum, whereas if placed the other way round this Casting might become loose and lead to serious consequences. The Distance Pieces, Items 21 to 23, must, of course, be added or removed from the Stud to suit the width of the Drum being used, and the Loose Cone, Item 25, replaced on the Stud before loading the Supply Drum.

The Friction Disc Carrier Casting, etc., may now be replaced on the Stud and locked against the Supply Drum with a spanner. The next step is to adjust the Winding Arm, Item 8. To do this the Screw, Item 27, is loosened and the wire passed around the Pulleys, Item 3, the angle of the Lower Pulley and the distance of the Pulleys away from the rim of the Drum, will depend upon the size of the Drum being used —see accompanying sketch. *Note:* the wrap of the wire around the Pulleys should be sufficient to allow the wire to remain threaded when the winding is stopped suddenly. The remaining operation is to adjust the Top Friction Disc, Item 15, to give the desired tension according to the wire being de-reeled. To do this the Lower Hand Nut, Item 9, is screwed in a clockwise or anti-clockwise direction and when set is locked by the Upper Hand Nut.

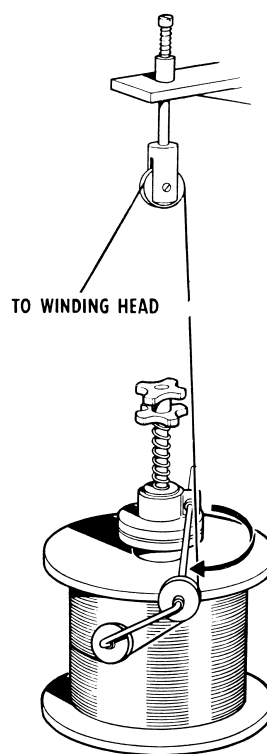

## MAINTAINING THE REEL CARRIER

The Ball and Thrust Races, Items 14 and 18, in the Friction Head must be kept lubricated.

The Ball Races in the Winding Arm Pulleys, Item 3 and Pulley, Item 28, must be kept lubricated and from time to time removed and cleaned ; this is important as any tendency for these Pulleys to become solid with the Spindle may affect the covering on the wire

"DOUGLAS"

REEL

CARRIERS

# "DOUGLAS" LINEAR MEASURE REEL CARRIER

The "DOUGLAS" Linear Measure Reel Carrier has been specially developed to record in yards, feet or metres the amount of material being de-reeled. This Reel Carrier is illustrated on Plate No. 5, which shows the Pre-Set Measure Indicator, etc., and yards or feet and/or yards or metres may be recorded according to the Wire Guide Pulley fitted, see Items Nos. 21 and 22.

The feature of this Reel Carrier is its usefulness when resistance wire is being wound. In addition, there are many uses for such a Reel Carrier in the Textile Industry, but since this Carrier is of recent development and its features in this connection are not fully known, only the de-reeling of wire is dealt with here.

Wires from 47 s.w.g. (0.002 ins.—0.05 mm.) diameter to 28 s.w.g. (0.0148 ins.—0.38 mm.) diameter can be de-reeled and the wire supply reel should be in accordance with British Standards Institute Specification No. 1489, Table 2 (an extract is reproduced on this page). The reason for this is that reels having an excessive gross weight cannot be adequately controlled.

Generally the function of this Reel Carrier is similar to the "DOUGLAS" Standard Reel Carrier, and for the instructions for setting the tension, etc., see Page 9. The only item that needs explaining here is the Measure Indicator.

## THE PRE-SET MEASURE INDICATOR

The Pre-Set Measure Indicator fitted to the "DOUGLAS" Linear Measure Reel Carrier is

complete with electrical contacts, Items Nos. 43 and 44, and provision is made via the flexible coupling tube, Item No. 30, to connect the Reel Carrier electrically to the clutch or similar operating mechanism of the Coil Winding Machine. Care should be taken not to make connection to the motor circuit as this would allow overrun of the Machine and an erroneous length of wire would result.

The setting of the Measure Indicator is made by positioning the Barrel Indicator, Item No. 11, and the Pointer, Item No. 33.

*For example:—*Assuming 1,650 yards of wire are required to be de-reeled. The wire is first drawn from the Supply Reel and passed over the large Wire Guide Pulley, Item 21 or Item 22 as fitted, and down to the former. The Barrel Indicator is then turned until 1,600 shows in the aperture of the Indicator Cowl, Item II and the Pointer is set at 50 on the Calibrated Dial, Item 35; this automatically opens the electrical contacts. Winding may now be commenced and when the pre-determined length is reached, the contacts close.

Up to 2,000 yards, feet or metres can be recorded.

## WIRE SUPPLY REEL SIZES

DIAMETER OF WIRE			REEL FLANGE DIAMETER		DIAMETER OF WIRE			REEL FLANGE DIAMETER	
INCHES	METRIC mm.	S.W.G.	INS.	METRIC mm.	INCHES	METRIC mm.	S.W.G.	INS.	METRIC mm.
0.001	0.025	50	1 $\frac{3}{4}$ "	44.45	0.010	0.254	33	3 $\frac{3}{4}$ "	95.25
0.0012	0.03	49	1 $\frac{3}{4}$ "	44.45	0.0108	0.256	32	3 $\frac{3}{4}$ "	95.25
0.0016	0.04	48	1 $\frac{3}{4}$ "	44.45	0.0116	0.280	31	3 $\frac{3}{4}$ "	95.25
0.0020	0.05	47	2 $\frac{1}{4}$ "	53.97	0.0124	0.306	30	4 $\frac{1}{2}$ "	114.3
0.0024	0.06	46	2 $\frac{1}{4}$ "	53.97	0.0136	0.331	29	4 $\frac{1}{2}$ "	114.3
0.0028	0.07	45	2 $\frac{1}{2}$ "	63.5	0.0148	0.358	28	4 $\frac{1}{2}$ "	114.3
0.0032	0.081	44	2 $\frac{1}{2}$ "	63.5	0.0164	0.407	27	4 $\frac{1}{2}$ "	114.3
0.0036	0.098	43	2 $\frac{1}{2}$ "	63.5	0.0180	0.457	26	4 $\frac{1}{2}$ "	114.3
0.0040	0.102	42	2 $\frac{1}{2}$ "	63.5	0.020	0.508	25	4 $\frac{1}{2}$ "	114.3
0.0044	0.114	41	3 $\frac{1}{2}$ "	76.2	0.022	0.559	24	4 $\frac{1}{2}$ "	114.3
0.0048	0.122	40	3"	76.2	0.024	0.610	23	4 $\frac{1}{2}$ "	114.3
0.0052	0.132	39	3"	76.2	0.028	0.711	22	6 $\frac{1}{2}$ "	152.4
0.0060	0.152	38	3 $\frac{3}{4}$ "	95.25	0.032	0.813	21	6"	152.4
0.0068	0.172	37	3 $\frac{3}{4}$ "	95.25	0.036	0.914	20	6"	152.4
0.0076	0.194	36	3 $\frac{3}{4}$ "	95.25	0.040	1.016	19	6"	152.4
0.0084	0.213	35	3 $\frac{3}{4}$ "	95.25	0.048	1.219	18	6"	152.4
0.0092	0.234	34	3 $\frac{3}{4}$ "	95.25					

Part of the above Table is reproduced by permission of THE BRITISH STANDARDS INSTITUTION, B.S. Specification 1489 (Table 2).

# “DOUGLAS” GENERAL PURPOSE REEL CARRIER

## TENSION CHART—*Inches*

<i>Light Spring</i>			<i>Heavy Spring</i>		
GAUGE	WINDING WEIGHT	INDEX	GAUGE	WINDING WEIGHT	INDEX
47 s.w.g.	1 oz.	4	36 s.w.g.	9 ozs.	50
46 „	1½ ozs.	6	35 „	10 „	60
45 „	2 „	17	34 „	11½ „	70
44 „	2½ „	25	33 „	13 „	80
43 „	3 „	35	32 „	14 „	90
42 „	3½ „	45	31 „	15 „	100
41 „	4 „	55	30 „	16 „	110
40 „	5 „	75	29 „	18 „	120
39 „	5½ „	85			
38 „	6½ „	100			
37 „	8 „	120			

## TENSION CHART—*Metric*

<i>Light Spring</i>			<i>Heavy Spring</i>		
GAUGE	WINDING WEIGHT	INDEX	GAUGE	WINDING WEIGHT	INDEX
0·05	28 grams	4	0·19	255 grams	50
0·06	42 „	6	0·21	283 „	60
0·07	56 „	17	0·23	326 „	70
0·08	70 „	25	0·25	369 „	80
0·09	85 „	35	0·27	397 „	90
0·10	100 „	45	0·29	425 „	100
0·11	113 „	55	0·32	454 „	110
0·12	142 „	75	0·35	510 „	120
0·13	156 „	85			
0·15	184 „	100			
0·17	227 „	120			

NOTE.—The winding weights shown in the tables are those specified by certain wire manufacturers and may have to be exceeded to obtain tight wound coils. The Index figures refer to those marked on the Reel Carrier Dials and should be used only as a guide, that is the Reel Carrier is set to the figures in the tables and finally adjusted as described in the text.

“D O U G L A S” R E E L C A R R I E R S

“DOUGLAS” GENERAL PURPOSE REEL CARRIER

TENSION BRAKE TABLE					
SHAPE OF COIL FORMER	GAUGE OF WIRE	ARM RETURN SPRING	BRAKE ARM SPRING	INDEX TENSION BRAKE	FIXED TENSION
ROUND	47-37 (0.05)-(0.17)	LIGHT	OFF	SEE CHART	OFF
SQUARE OR RECTANGULAR	47-44 (0.05)-(0.08)	LIGHT	APPLIED TO SUIT	OFF	OFF
SQUARE OR RECTANGULAR	43-40 (0.09)-(0.12)	HEAVY	APPLIED TO SUIT	OFF	OFF
SQUARE OR RECTANGULAR	41-37 (0.11)-(0.17)	HEAVY	APPLIED TO SUIT	APPLIED TO SUIT LESS THAN CHART	OFF
ROUND	36-29 (0.19)-(0.35)	HEAVY	OFF	SEE CHART	OFF
SQUARE OR RECTANGULAR	36-29 (0.19)-(0.35)	HEAVY	APPLIED TO SUIT	APPLIED TO SUIT LESS THAN CHART	OFF
ROUND, SQUARE OR RECTANGULAR	28-26 (0.37)-(0.45)	HEAVY	OFF	APPLIED TO SUIT	APPLIED TO SUIT IN EITHER POSITION

**NOTE.**—The above table shows how the various tension adjustments may be used on the reel carrier. No hard and fast rules can be laid down as conditions vary with different makes of wire and coverings and the manner of spooling on the supply reels.


**BRAKE SITUATIONS**

FIXED TENSION ADJUSTOR - 2 POSITIONS

ARM RETURN SPRING HEAVY OR LIGHT

INDEX TENSION BRAKE

BRAKE ARM ADJUSTOR

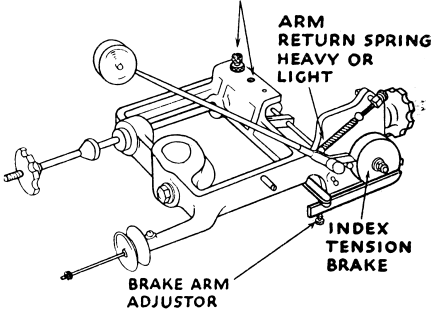

“ D O U G L A S ”                      R E E L                      C A R R I E R S

## UNIVERSAL REEL CARRIER—TENSION CHART

GAUGE OF WIRE	WINDING WEIGHT	DIAL INDEX	TYPE OF ARM	GAUGE OF WIRE	WINDING WEIGHT	DIAL INDEX	ARM INDEX	TYPE OF ARM
50 (0·025)		2	} <i>Light Tension Arm</i>	32 (0·274)	14 ozs.	60	1	} <i>Heavy Tension Arm</i>
49 (0·03)		2.5		31 (0·294)	15 „	60	2	
48 (0·04)		4		30 (0·315)	16 „	60	3	
47 (0·05)	1 oz.	4	} <i>Medium Tension Arm</i>	29 (0·345)	18 „	60	4	
46 (0·061)	1½ ozs.	6		28 (0·375)	20 „	60	5	
45 (0·071)	2 „	8		27 (0·416)	23 „	60	6	
44 (0·081)	2½ „	10		26 (0·457)	25 „	60	7	
43 (0·091)	3 „	13		25 (0·508)	28 „	60	8	
42 (0·101)	3½ „	18		24 (0·558)	31 „	60	9	
41 (0·111)	4 „	25		23 (0·609)	35 „	60	10	
40 (0·121)	5 „	35		22 (0·711)	39 „	60	11	
39 (0·132)	5½ „	42		21 (0·812)	44 „	60	12	
38 (0·152)	6½ „	60						
37 (0·172)	8 „	75						
36 (0·193)	9 „	85						
35 (0·213)	10 „	95						
34 (0·233)	11½ „	110						
33 (0·254)	13 „	120						

Dimensions between ( ) are millimetres.


NOTE.—The Arm Index refers to the setting of the spring, Item 60, on the spindle, Item 59, see Plate 3.

The winding weights shown in the Table are those specified by certain wire manufacturers and may have to be adjusted accordingly.

## Plate 1—Parts List


ITEM NO.	DESCRIPTION	PART NO.	NO. OFF	ITEM NO.	DESCRIPTION	PART NO.	NO. OFF
1	Base and Tube Assembly	20283/A	1	23	Bottom Brake Shoe Assembly including Leather . . . . .	20277/A	1
2	Complete Reel Carrier Assembly . . . . .	50032/A		24	Leather for Bottom Brake Shoe . . . . .	11749/1	1
3	Main Casting Assembly including Pt 40146-2, 20273-2 & 2OFF AS46	20279/A	1	25	Return Spring for Pulley Arm . . . . .	11756/1	1
4	Pulley and Arm Assembly including Ball Race, etc.	13967/A	1	26	Adjusting Stud for Item 25 . . . . .	11755/1	1
5	Main Spindle and Cone Assembly . . . . .	20278/A	1	27	Brake Drum . . . . .	11743/1	1
6	Loose Cone . . . . .	11745/1	1	28	Grub Screw Securing Item 27 . . . . .	AS.28	1
7	Quick Release Nut . . . . .	11746/2	1	29	Upper Brake Spring and Leather Assembly . . . . .	11766/A	1
8	Stop Collar . . . . .	11760/2	1	30	Backing Strip . . . . .	11752/1	1
9	Grub Screw Securing Item 8 . . . . .	AS.23	1	31	Screw Securing Items 29 and 30 . . . . .	S.221	1
10	Clamping Block for Pulley Arm . . . . .	11763/2	1	32	Washer . . . . .	W.1	1
11	Set Screw for locking Clamping Block . . . . .	S.117	1	33	Collar Securing Item 23	11748/2	1
12	Screw Securing Pulley Arm . . . . .	S.451	1	34	Grub Screw Securing Item 33 . . . . .	AS.23	1
13	Ball Races for Main Spindle . . . . .	BR.5	2	35	Spindle for Lower Brake Shoe . . . . .	11747/1	1
14	Dust Covers for Ball Races . . . . .	11776/2	2	36	Leather for Upper Brake Shoe . . . . .	11750/1	1
15	Cam Spindle . . . . .	11764/2	1	37	Adjusting Nut for Lower Brake Shoe Spring . . . . .	11557/2	1
16	Collar and Spring Post Assembly . . . . .	11765/A	1	38	Knurled Lock Nut . . . . .	11754/2	1
17	Grub Screw Securing Item 16 . . . . .	AS.23	1	39	Adjusting Screw for Upper Brake Shoe . . . . .	11753/2	1
18	Collar . . . . .	11768/2	1	40	Spring for Lower Brake Shoe . . . . .	11757/1	1
19	Grub Screw Securing Item 18 . . . . .	AS.23	1	41	Knurled Nut for Item 25	10807/2	1
20	Cam . . . . .	11758/2	1	42	Pulley Arm . . . . .	20276/1	1
21	Cam Adjusting Screw . . . . .	S.234	1	43	Circlip . . . . .	11777/1	2
22	Lock Nut for Cam Adjusting Screw . . . . .	N.22	1	44	Ball Race for Pulley . . . . .	BR.4	1
				45	Pulley . . . . .	20282/2	1
				46	Dust Cover for Ball Race	11775/2	1

# **“DOUGLAS” STANDARD REEL CARRIER** **PLATE 1.**

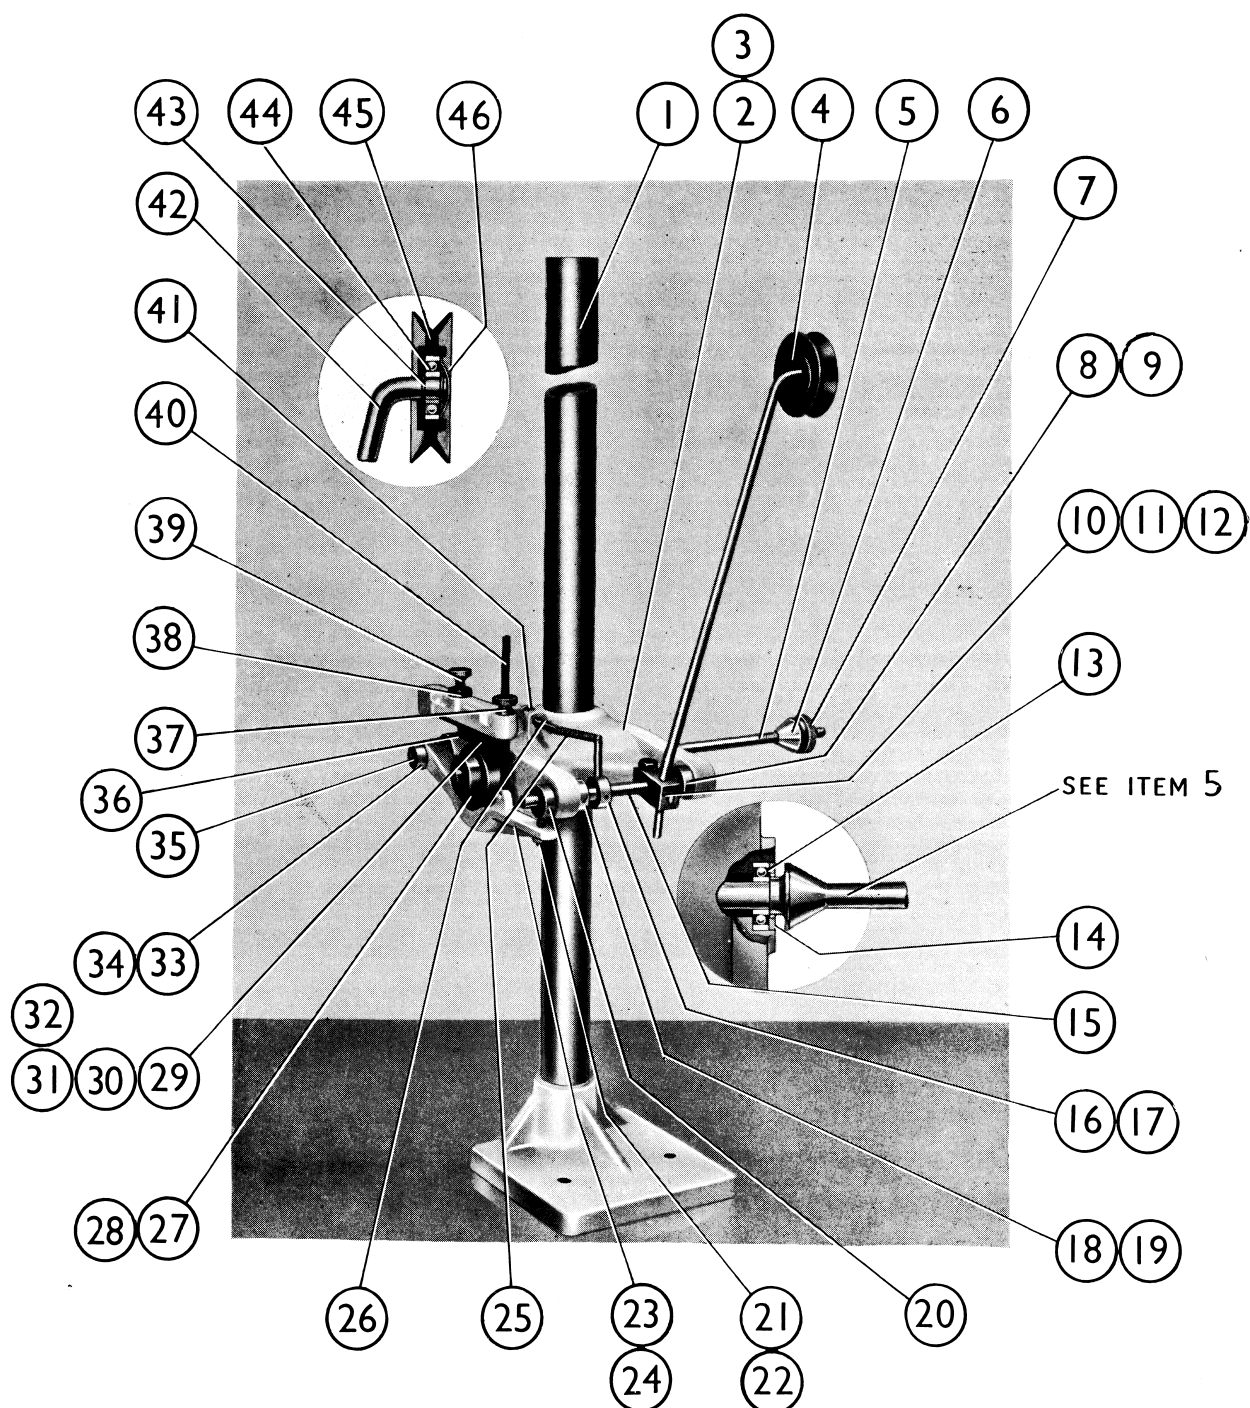



# “DOUGLAS” STANDARD REEL CARRIER PLATE 1.

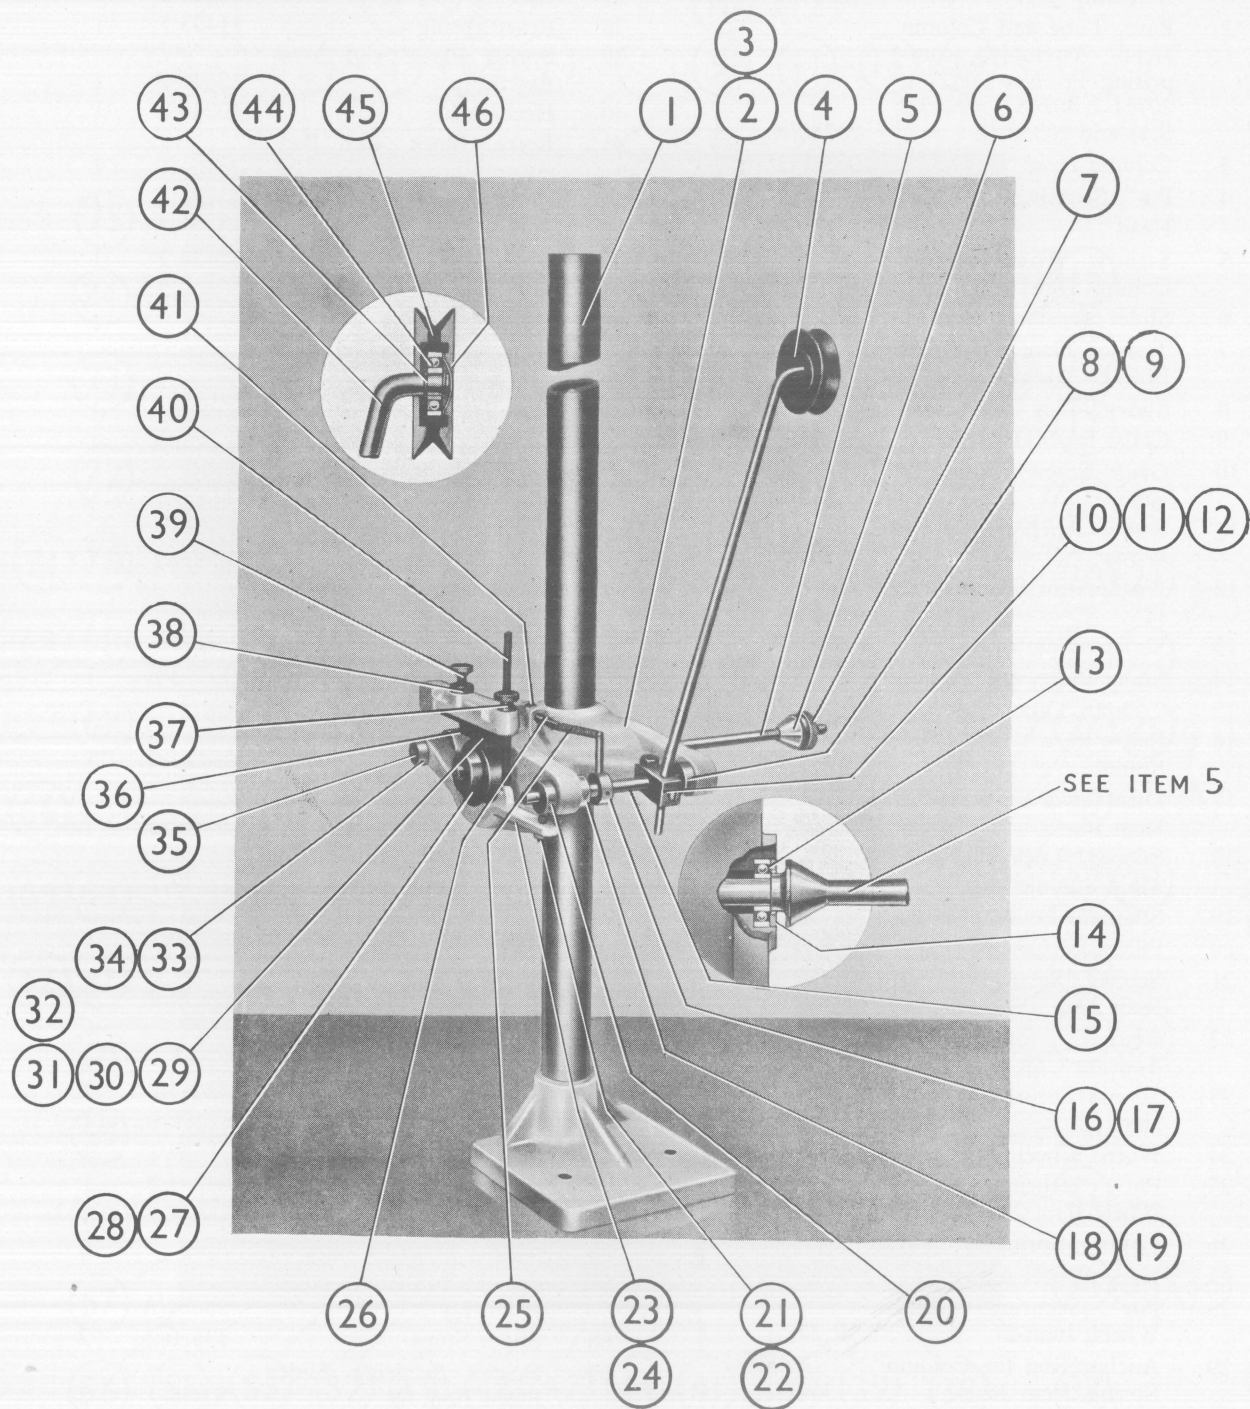


## Plate 2—Parts List

ITEM NO.	DESCRIPTION	PART NO.	NO. OFF	ITEM NO.	DESCRIPTION	PART NO.	NO. OFF
1	Complete Reel Carrier Assembly . . . . .	50085/A	1	36	Dowels for Item 34 . . . . .	20245/20	4
2	Base, Tube and Column Head Assembly, comprising Pt. No. 20527/2, 20751 2, 40246/2, 40245/2 S.11 and 20339/42 . . . . .	20748/A	1	37	Base . . . . .	40245/2	1
3	Column Head . . . . .	20527/3	1	38	Reset Spring . . . . .	11403/1	1
4	Pin Securing Column Head . . . . .	20339/42	1	39	Spring Barrel and Arm Assembly . . . . .	13646/B	1
5	Screw Positioning Column Head . . . . .	AS.51	1	40	Headstock . . . . .	40246/2	1
6	Slider Tension Screws . . . . .	BSF.3	2	41	Brake Block and Pad Assembly . . . . .	14201/1	1
7	Tension Plate and Pulley Bracket Assembly . . . . .	13645/A	1	42	Brake Pad . . . . .	13630/1	1
8	Slider Pulley . . . . .	13613/1	1	43	Screw Securing Item 41 . . . . .	13600/2	1
9	Collar for Slider Pulley . . . . .	13623/2	1	44	Thrust Rod . . . . .	13626/2	1
10	Grub Screw for Collar Item 9 . . . . .	S.811	1	45	Roller for Thrust Rod . . . . .	13627/2	1
11	Screws Anchoring Slider Wires . . . . .	AS.5	2	46	Lock Nut for Item 44 . . . . .	N.20	1
12	Washers for Screws Item 11 . . . . .	W.16	2	47	Anchor Post for Spring Item 48 . . . . .	13597/2	1
13	Slider Assembly complete . . . . .	13644/A	1	48	Spring . . . . .	11928/1	1
14	Slider Pulley Spindle . . . . .	13622/2	1	49	Fulcrum Lever Assembly . . . . .	13640/A	1
15	Column Tube . . . . .	20751/2	1	50	Spindle for Fulcrum Lever Assembly, Item 49 . . . . .	13602/1	1
16	Ball Race for Main Spindle . . . . .	BR.5	2	51	Screw Securing Fulcrum Lever Assembly, Item 49 . . . . .	13603/2	1
17	Dust Cover for Ball Race Item 16 . . . . .	13632/2	1	52	Screw Securing Wire Guide Arm . . . . .	S.221	1
18	Special Lock Nut for Main Spindle . . . . .	10621/1	1	53	Heavy Tension Arm Assembly . . . . .	20750/A	1
19	Standard Lock Nut . . . . .	N.31	1	54	Ball Race for Item 53 . . . . .	BR.3	1
20	Pillars for Cover . . . . .	13588/2	2	55	Medium Tension Arm Assembly . . . . .	13652/A	1
21	Screws Securing Pillar Item 20 . . . . .	S.47	2	56	Light Tension Arm Assembly . . . . .	13642/A	1
22	Bracket for Spring Tension Unit . . . . .	13586/2	1	57	Anchor for Slider Guide Wire . . . . .	13619/2	1
23	Screws Securing Bracket Item 22 . . . . .	S.448	4	58	Cover for Spring Tension Unit . . . . .	20749/A	1
24	Worm Wheel . . . . .	11410/1	1	59	Spindle for Heavy Tension Arm Spring . . . . .	13604/2	1
25	Pin Securing Worm Wheel Item 24 . . . . .	R.27	1	60	Spring for Heavy Tension Arm . . . . .	11918/1	1
26	Column Spring . . . . .	13003/1	1	61	Tension Index Drum . . . . .	13583/2	1
27	Hand Wheel Assembly . . . . .	13608/A	1	62	Screw Securing Item 61 . . . . .	11409/2	1
28	Pin Securing Hand Wheel, Item 27 . . . . .	R.27	1	63	Roller for Item 39 . . . . .	13629/1	1
29	Anchor Rod for Column Spring, Item 26 . . . . .	13601/1	1	64	Screw Securing Roller . . . . .	13592/2	1
30	Plug . . . . .	13628/1	1	65	Brake Carrier Plate . . . . .	13598/2	1
31	Screw Securing Item 30 . . . . .	S.233	1	66	Screws Securing Item 65 . . . . .	AS.5	2
32	Spring Barrel Arbor . . . . .	13593/2	1	67	Spindle and Brake Drum Assembly . . . . .	20664/A	1
33	Worm . . . . .	11411/3	1	68	Slider Stops . . . . .	13620/2	2
34	Worm Carrier Bracket . . . . .	13594/2	2	69	Screws Securing Slider Stops Item 68 . . . . .	S.838	2
35	Screws Securing Item 34 . . . . .	AS.5	2	70	Loose Cone . . . . .	11745/1	1
				71	Quick Release Nut . . . . .	11746/2	1
				72	Slider Guide Wire . . . . .	SW.5	1
				73	Tension Cord Pulley . . . . .	13585/2	1
				74	Spindle for Item 71 . . . . .	13616/1	1
				75	Tension Cord . . . . .	MISC.37 30 ins	


# “DOUGLAS” UNIVERSAL REEL CARRIER

## PLATE 2.

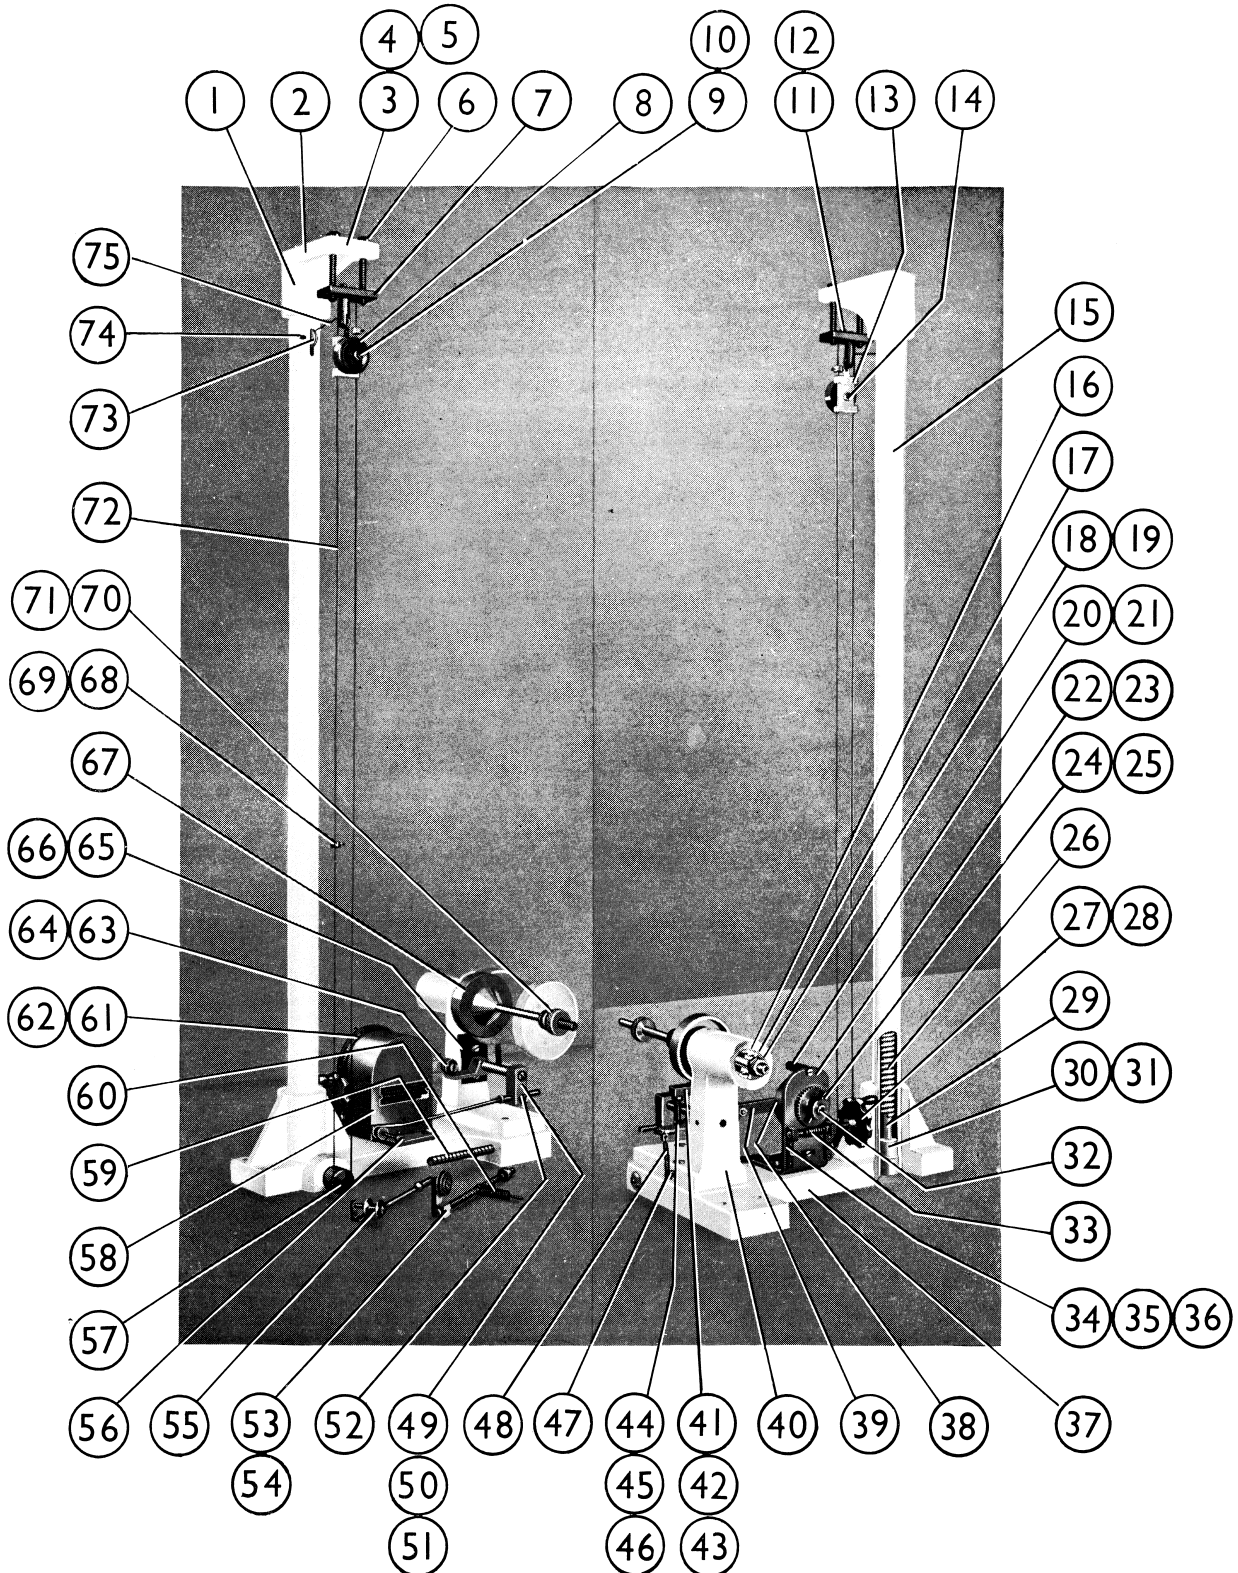



# “DOUGLAS” UNIVERSAL REEL CARRIER PLATE 2.

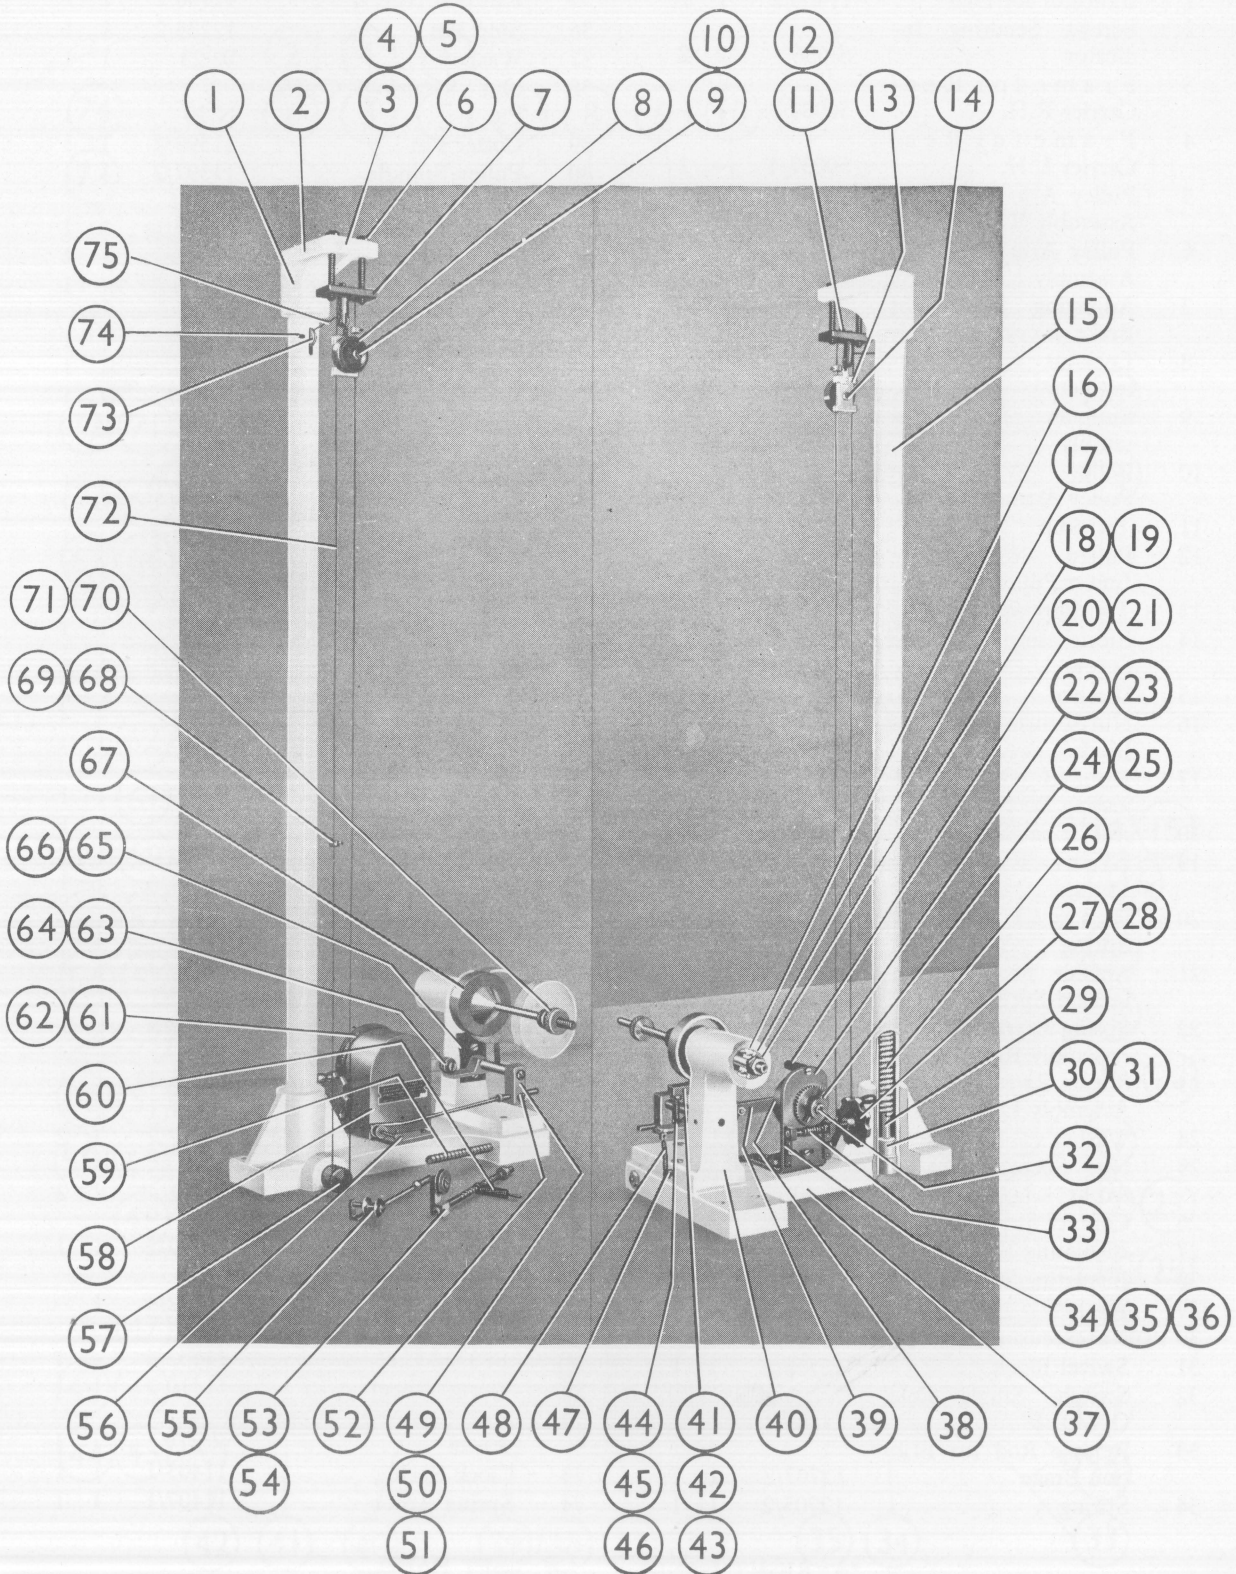


## Plate 3—Parts List

ITEM NO.	DESCRIPTION	PART NO.	*A	*B	ITEM NO.	DESCRIPTION	PART NO.	*A	*B
1	Indicator for Dial . . .	11406/2	1	1	35	Knurled Nut . . .	12706/2	1	1
2	Screws Securing Indicator . . . . .	S.636	2	2	36	Stop Pin . . . . .	12233/2	1	1
3	Frame for Reel Carrier R.H. . . . .	50037/3	1	-	37	Washer . . . . .	W.23	1	1
4	Frame for Reel Carrier L.H. . . . .	50037/4	-	1	38	Nut Securing Cotter Pin . . . . .	N.30	1	1
5	Pulley Arm and Shaft Assembly R.H. . . . .	20336/D	1	-	39	Cotter Pin . . . . .	11399/2	1	1
6	Pulley Arm and Shaft Assembly L.H. . . . .	20336/C	-	1	40	Pulley Spindle . . . . .	11397/2	1	1
7	Adjusting Screw for Brake Block Assembly . . . . .	12225/2	1	1	41	Spindle for Supply Reel . . . . .	14029/1	1	1
8	Locknut for Adjusting Screw . . . . .	11754/4	1	1	42	Hand Wheel . . . . .	14028/1	1	1
9	Support Tube Assembly . . . . .	20335/A	1	1	43	Adjustable Cone . . . . .	11075/2	1	1
10	Pulley Wheel for Pulley Arm Assembly . . . . .	10835/3	1	1	44	Screw Securing Adjustable Cone . . . . .	AS.27	1	1
11	Twicklip . . . . .	11579/3	2	2	45	Collar . . . . .	11078/2	1	1
12	Pulley Wheel for Lower Pulley Spindle . . . . .	10835/3	1	1	46	Screw Securing Collar . . . . .	AS.27	1	1
13	Twicklip for Item 12 . . . . .	11579/3	1	1	47	Ball Race . . . . .	BR.5	2	2
14	Block for Adjusting Screw . . . . .	12229/2	1	1	48	Brake Lever, Complete . . . . .	20701/A	1	1
15	Washer . . . . .	W.15	1	1	49	Spindle for Brake Lever . . . . .	11747/2	1	1
16	Nut Securing Adjusting Block . . . . .	N.40	2	2	50	Pin Securing Spindle . . . . .	20245/22	1	1
17	Knurled Nut for Adjusting Screw . . . . .	10807/2	1	1	51	Collar . . . . .	11748/2	1	1
18	Adjusting Screw . . . . .	11755/2	1	1	52	Screw Securing Collar . . . . .	AS.23	1	1
19	Light Extension Spring . . . . .	13438/1	1	1	53	Brake Pad . . . . .	11384/1	1	1
20	Heavy Extension Spring . . . . .	11421/1	1	1	54	Screw Securing Brake Pad . . . . .	S.806	2	2
21	Anchor Post for Extension Spring . . . . .	11395/3	1	1	55	Friction Brake Pulley . . . . .	11743/1	1	1
22	Spring Barrel and Arm Assembly R.H. . . . .	20271/B	1	-	56	Screw Securing Friction Brake Pulley . . . . .	13470/1	1	1
23	Spring Barrel and Arm Assembly L.H. . . . .	20271/D	-	1	57	Collar . . . . .	11748/2	1	1
24	Washer . . . . .	W.15	1	1	58	Screw Securing Collar . . . . .	AS.23	1	1
25	Nut Securing Spring Arbor . . . . .	N.40	2	2	59	Fixed Tension Brake . . . . .	12214/A	1	1
26	Contact Stop Stud . . . . .	11460/2	1	1	60	Screw Securing Item 59 . . . . .	S.219	1	1
27	Insulating Bush . . . . .	11461/1	1	1	61	Reservoil Bush . . . . .	11658/2	1	1
28	Insulating Washer . . . . .	30008/13	1	1	62	Hand Wheel . . . . .	20325/1	1	1
29	Washer . . . . .	W.15	1	1	63	Brake Release Block . . . . .	13469/A	1	1
30	Nut Securing Stud . . . . .	N.41	1	1	64	Pin Securing Brake Release Block . . . . .	20245/20	1	1
31	Swivel Block . . . . .	12708/2	1	1	65	Worm Spindle . . . . .	11411/1	1	1
32	Switch, Single Pole, ON-OFF . . . . .	11549/1	1	1	66	Worm Carrier Bracket . . . . .	11412/2	2	2
33	Release Rod for Friction Brake . . . . .	12707/2	1	1	67	Screw Securing Worm Carrier Bracket . . . . .	S.469	2	2
34	Spring . . . . .	12705/2	1	1	68	Special Screw, Fixing Dial . . . . .	11409/2	1	1
					69	Wire Tension Indicator Dial R.H. . . . .	11552/3	1	-
					70	Wire Tension Indicator Dial L.H. . . . .	11552/4	-	1
					71	Worm Wheel . . . . .	11410/1	1	1
					72	Pin Securing Worm Wheel . . . . .	R.27	1	1
					73	Clock Spring . . . . .	11403/1	1	1
					74	Spring Arbor . . . . .	11407/1	1	1

\*A: RIGHT HAND.


\*B: LEFT HAND.

# **“DOUGLAS” GENERAL PURPOSE REEL CARRIER** **PLATE 3.**

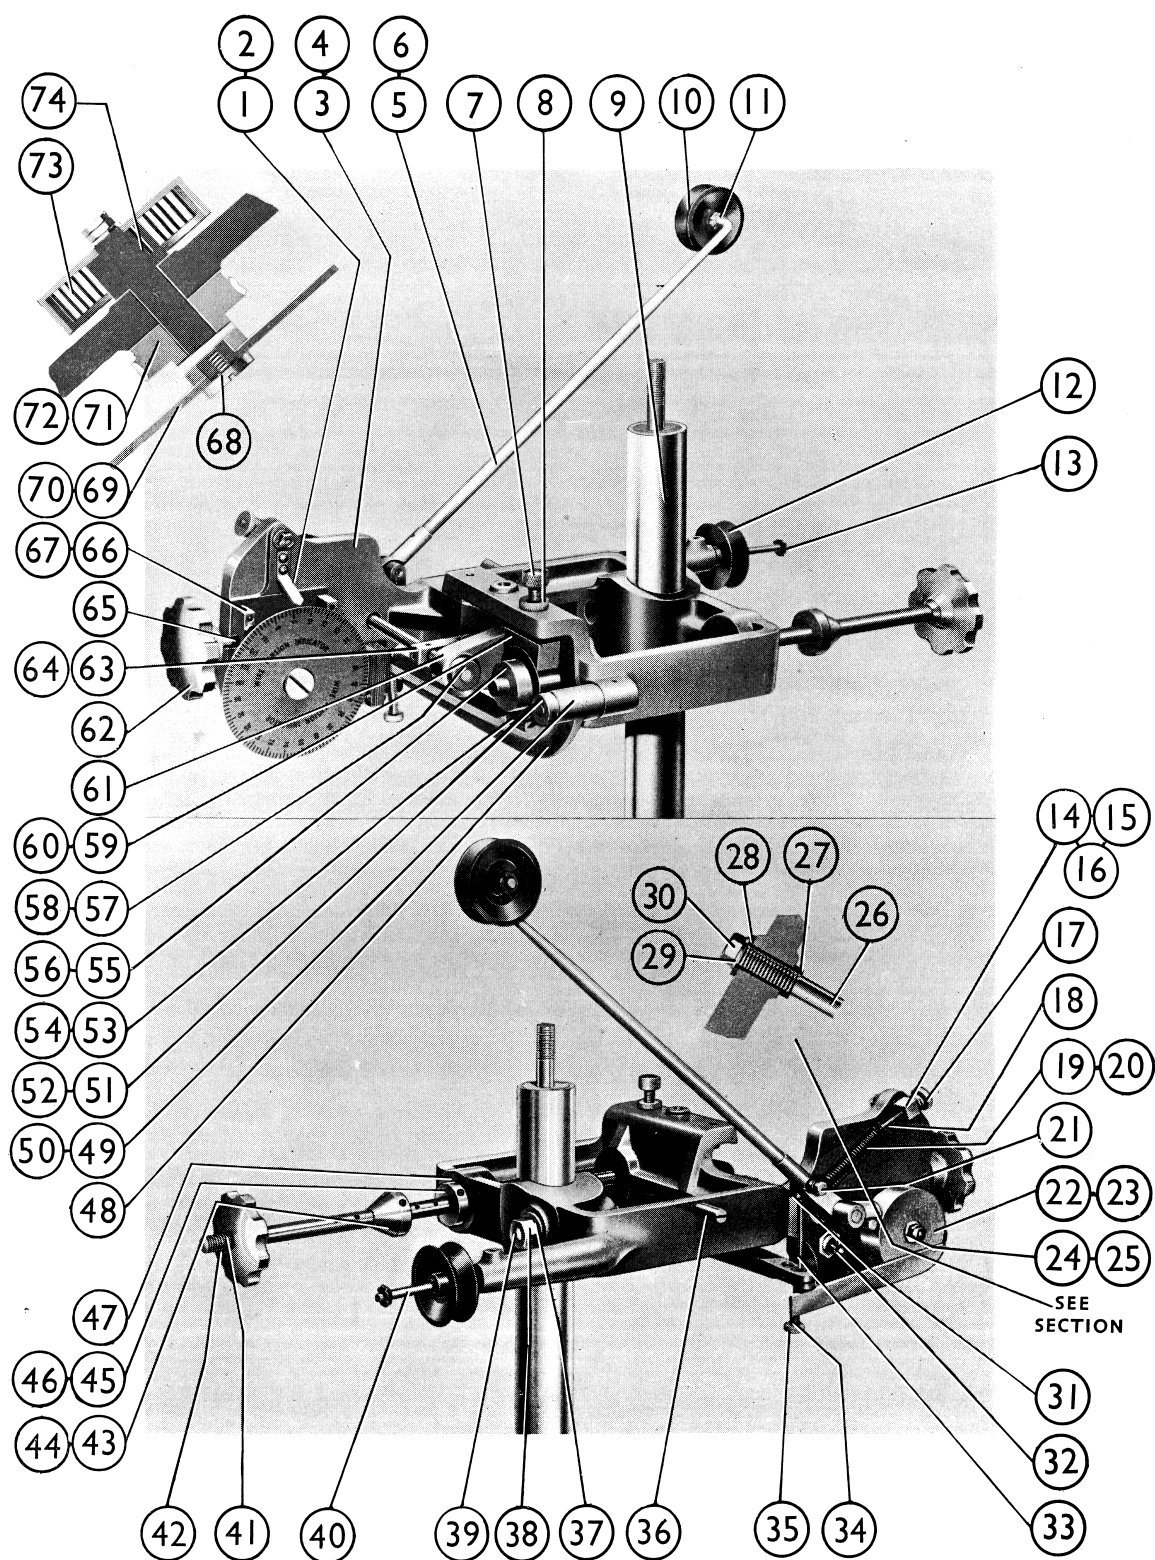



# “DOUGLAS” GENERAL PURPOSE REEL CARRIER PLATE 3.

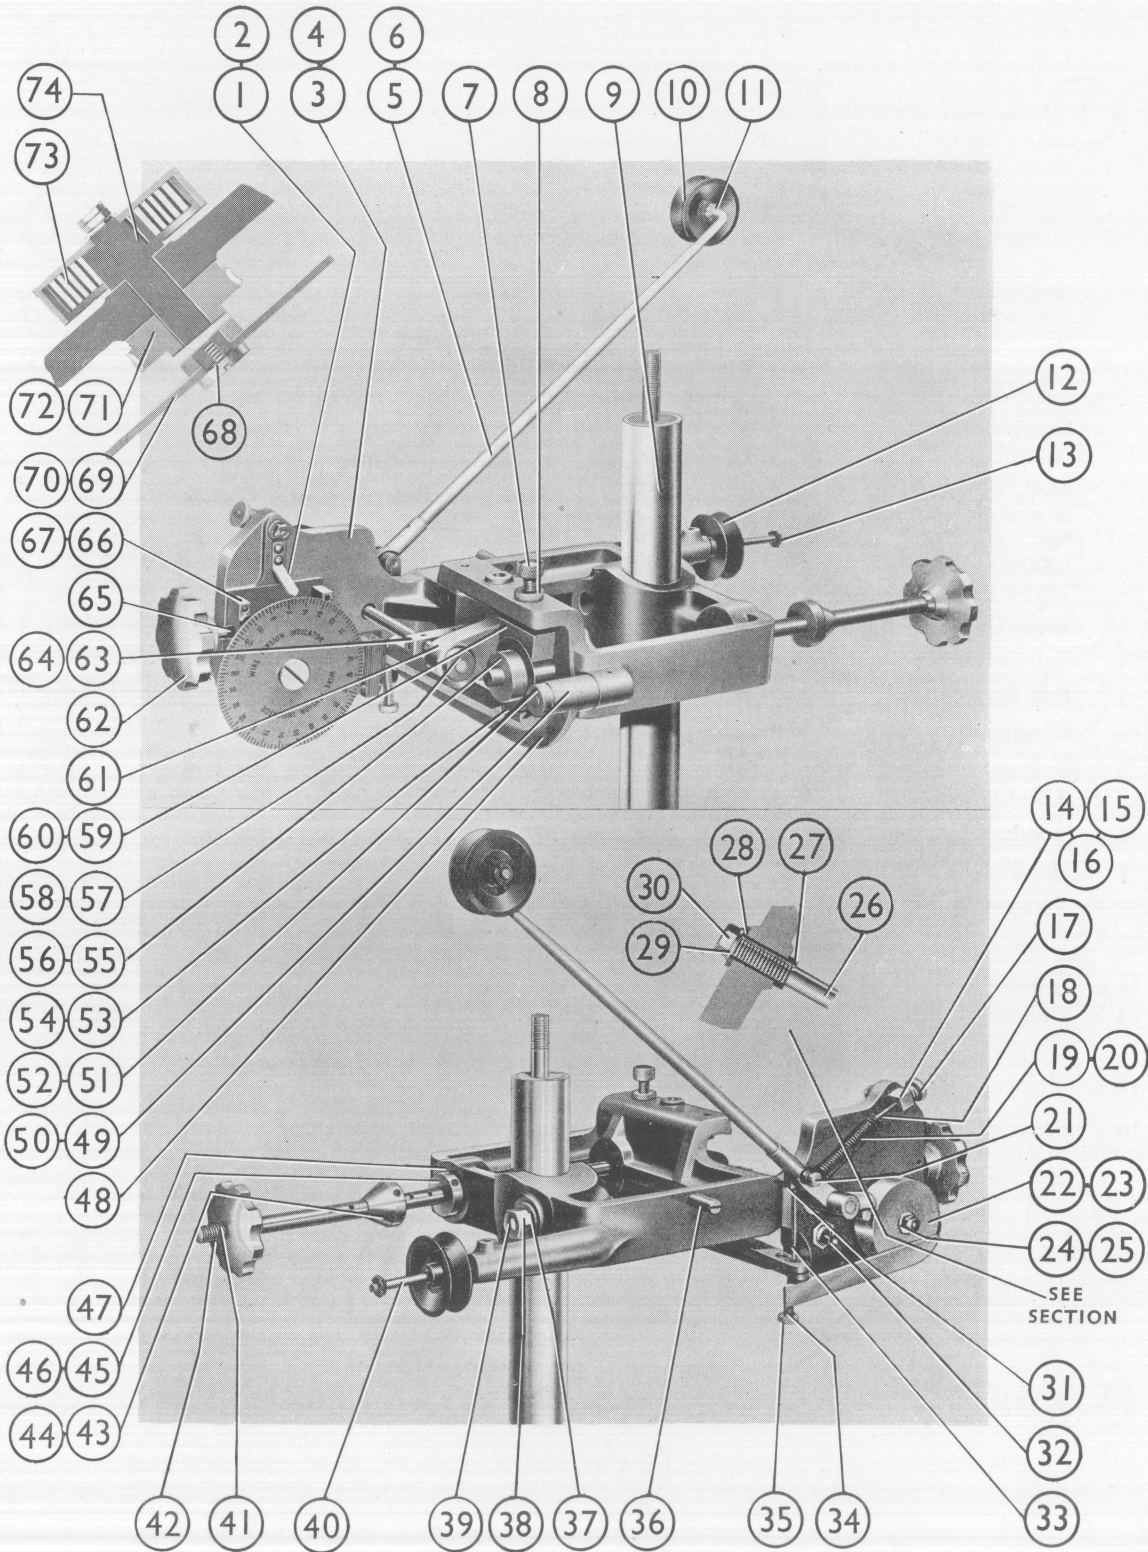


## Plate 4—Parts List

ITEM NO.	DESCRIPTION	PART NO.	NO. OFF	ITEM NO.	DESCRIPTION	PART NO.	NO. OFF
1	Complete Reel Carrier Assembly . . . . .	50004/A		18	Ball Race . . . . .	BR.1	2
2	Base, Column and Head Assembly comprising Pt. No. 40006/2, 10148/1, 40007/2, and 3 off 20339/33 . . . . .	40416/A	1	19	Dust Cover for Item 18 .	12339/6	1
3	Winding Arm Pulleys .	10706/2	2	20	Friction Disc Carrier Casting . . . . .	20015/2	1
4	Ball Race Retaining Discs	10151/2	2	21	Distance Piece $\frac{1}{4}$ " thick .	10154/1	1
5	Ball Races . . . . .	BR.5	2	22	Distance Piece $\frac{1}{2}$ " thick .	10154/2	1
6	Winding Arm Collars .	10239/2	4	23	Distance Piece 1" thick .	10154/3	1
7	Screws Securing Winding Arm Collars, Item 6 . .	S.499	4	24	Lock Nuts . . . . .	N.32	2
8	Winding Arm. . . . .	20016/1	1	25	Loose Cone . . . . .	10153/1	1
9	Hand Nuts . . . . .	10143/2	2	26	Stud . . . . .	10142/2	1
10	Tension Spring . . . .	10144/1	1	27	Screw Securing Winding Arm, Item 8 . . . . .	B.S.F.2	1
11	Studs . . . . .	10142/1	1	28	Pulley . . . . .	10150/2	1
12	Thrust Washer . . . .	10145/2	1	29	Special Screw. . . . .	10152/2	1
13	Thrust Race Cover . .	10146/1	1	30	Washer (Not Used) . . . . .	.....	1
14	Thrust Race . . . . .	BR.15	1	31	Ball Race . . . . .	BR.5	1
15	Top Friction Disc . . .	20013/2	1	32	Ball Race Retaining Ring	10151/1	1
16	Friction Disc . . . . .	20014/1	1	33	Spacing Washer for Ball Race, Item 31 . . . . .	10238/1	1
17	Screws Securing Friction Disc, Item 16 . . . . .	S.440	4	34	Bearing Bracket . . . .	10141/2	1
				35	Bush . . . . .	10707/2	1
				36	Top Spring . . . . .	10709/1	1
				37	Top Stud . . . . .	10708/2	1
				38	Retaining Cap . . . . .	10710/2	1




# **“DOUGLAS” FLYER REEL CARRIER** **PLATE 4.**

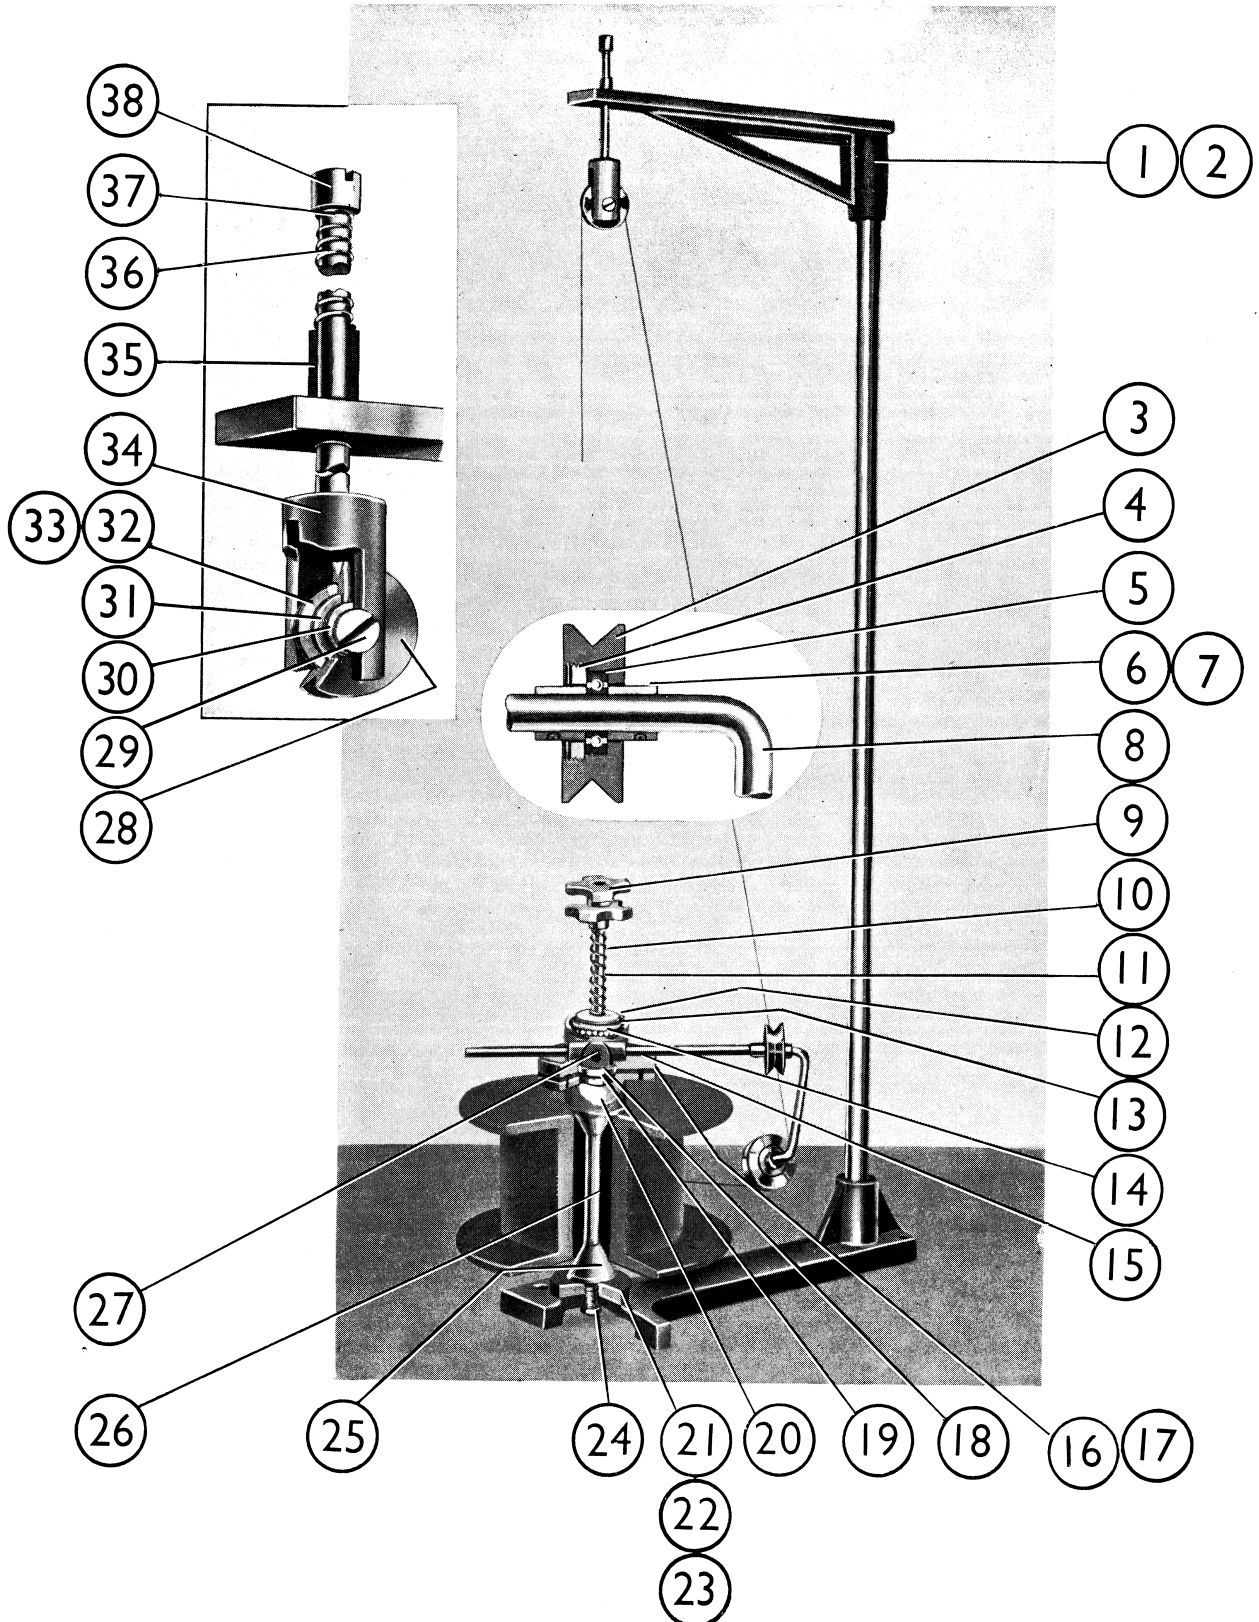

# “DOUGLAS” FLYER REEL CARRIER

## PLATE 4.

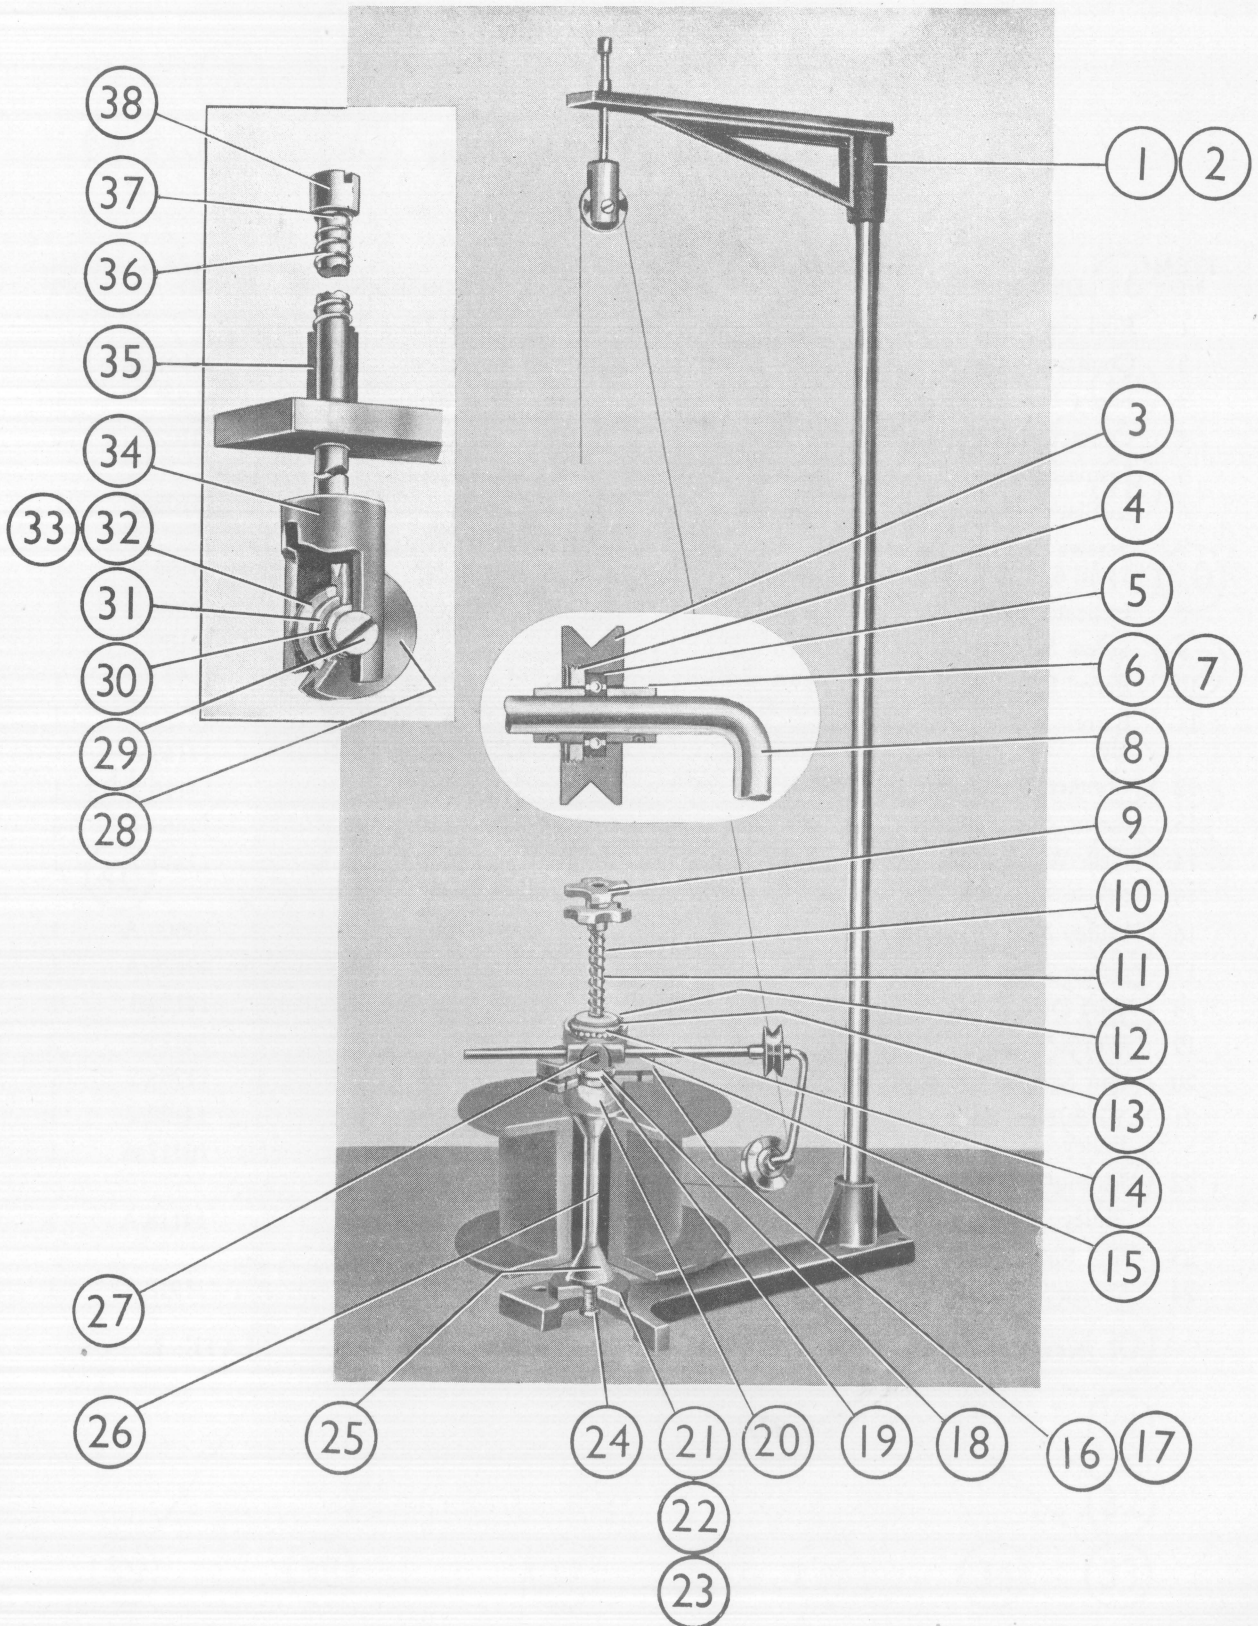


## Plate 5—Parts List

ITEM NO.	DESCRIPTION	PART NO.	QUAN. OFF	ITEM NO.	DESCRIPTION	PART NO.	QUAN. OFF
1	Reel Carrier Complete .	40428/A		25	Worm Case and Flange		
2	Connection Cover . .	14061/A	1		Assembly . . . . .	14101/A	1
3	Screw Securing Item 2 .	S.615	2	26	Lock Nuts . . . . .	N.22	3
4	Contact Fixing Plate .	14088/2	1	27	Grease Cap . . . . .	14102/1	1
5	Insulating Plate . . .	14089/1	1	28	Pinion Gear Tube As-		
6	Insulating Block . . .	14087/1	1		sembly . . . . .	14103/A	1
7	Screws Securing Items 4,			29	Gear Pinion Spindle As-		
	5 and 6 . . . . .	S.669	2		sembly . . . . .	14106/A	1
8	Indicator Cowl . . . .	14090/2	1	30	Pointer Knob . . . .	14109/1	1
9	Screw Securing Item 8 .	S.676	4	31	Dial Pointer . . . . .	14108/2	1
10	Barrel Spindle . . . .	14091/1	1	32	Calibrated Dial . . .	11541/1	1
11	Barrel Indicator Assem-			33	Pointer Spindle . . .	14112/1	1
	bly . . . . .	14092/A	1	34	Pointer Spindle Bush .	14115/1	1
12	Contact Cover Block .	14095/2	1	35	Gear Wheel Bush . .	14116/2	1
13	Screw Securing Item 12	S.677	2	36	I.O.M. Washer . . .	12668/1	1
14	Gear Wheel . . . . .	14096/2	1	37	Socket . . . . .	12354/1	1
15	Screw Securing Item 16	S.456	1	38	Flexible Coupling Tube		
16	Pulley Arm Assembly .	20830/A	1		Assembly . . . . .	20800/A	1
17	Screw Securing Item 25	S.449	1	39	Base and Tube Assembly	40429/A	1
18	Case Disc . . . . .	14097/1	1	40	Square Mounting Bar .	14124/1	1
19	Worm Wheel . . . . .	14098/1	1	41	Distance Pieces . . .	14125/2	2
20	Nut Securing Item 19 .	N.25	1	42	Cam Spindle . . . . .	11764/2	1
21	Yards/Feet Measure			43	Back Plate . . . . .	14126/2	1
	Pulley . . . . .	12618/1	1	44	Fixed Contact Assembly	14117/A	1
22	Metric/Yards Measure			45	Moving Contact Assem-		
	Pulley . . . . .	14086/1	1		bly . . . . .	14118/A	1
23	Ball Race . . . . .	BR.8	2	46	Return Spring for Pulley		
24	Worm Spindle . . . .	14100/1	1		Arm . . . . .	11918/1	1


NOTE : FOR ALL OTHER PARTS NOT SHOWN SEE PLATE 1  
 “DOUGLAS” STANDARD REEL CARRIER.

# “DOUGLAS” LINEAR MEASURE REEL CARRIER PLATE 5.

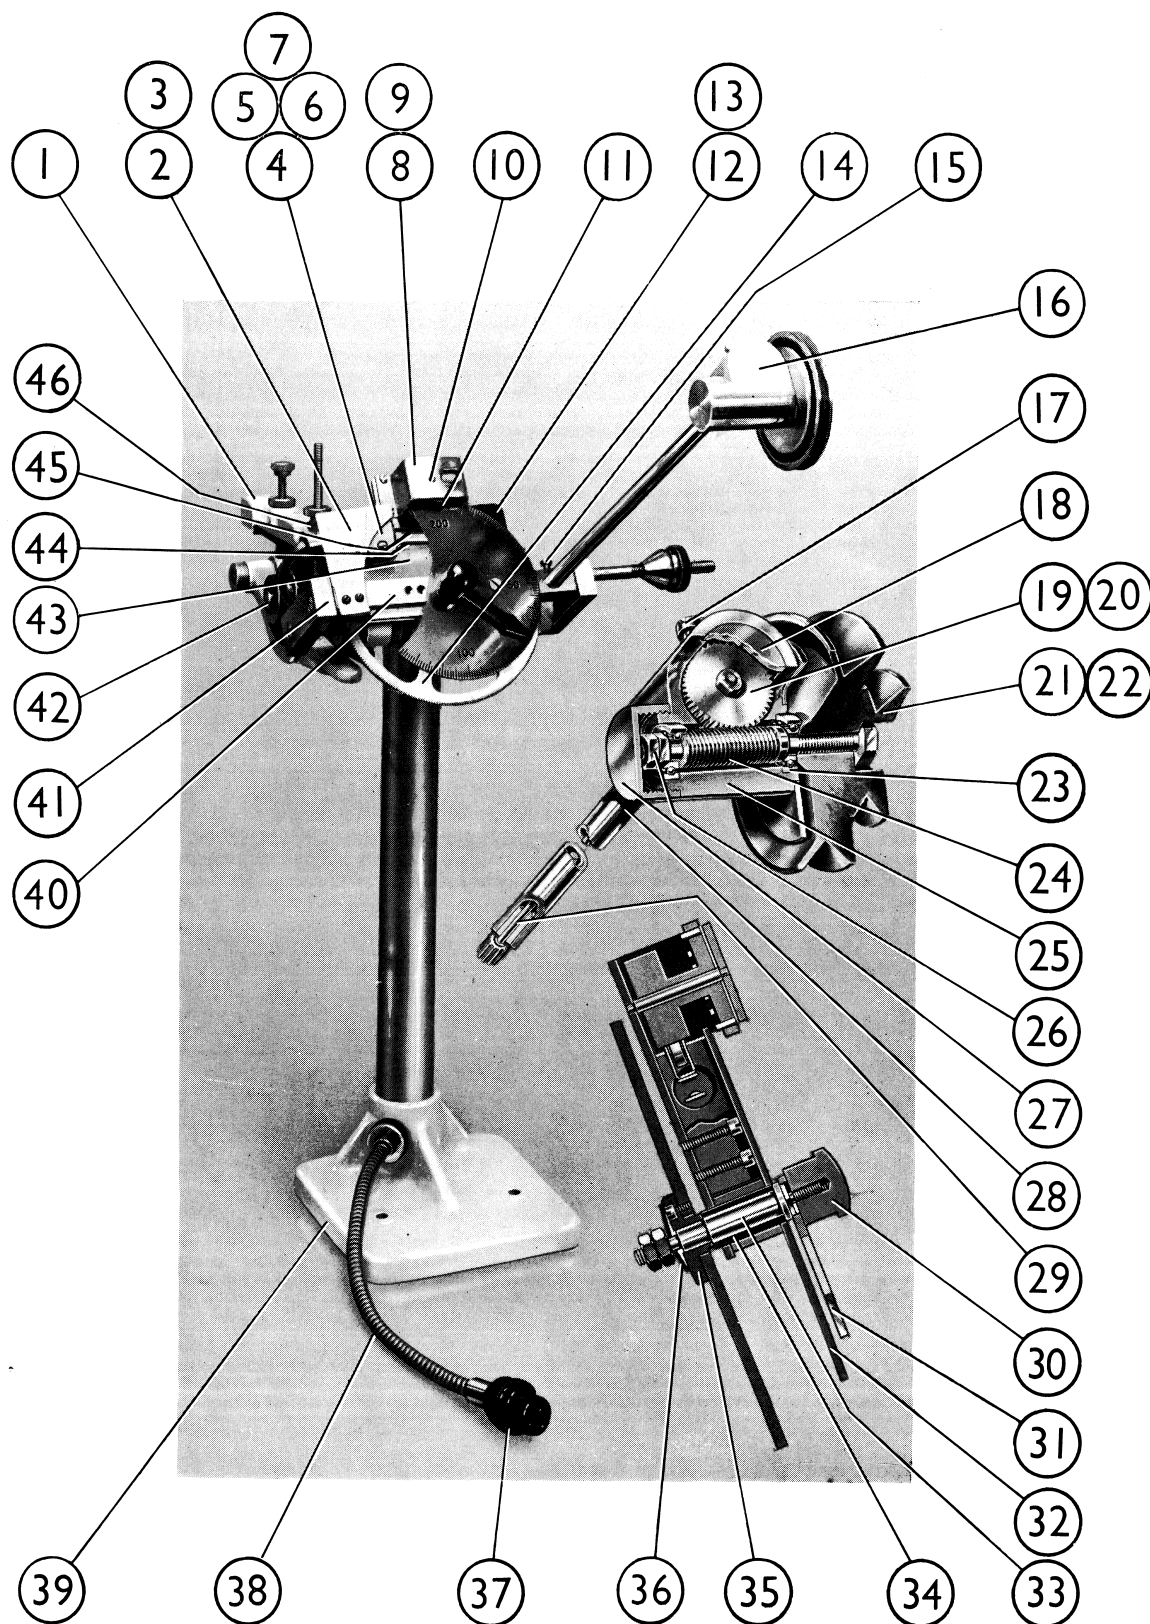



**“DOUGLAS” LINEAR MEASURE REEL CARRIER**  
**PLATE 5.**

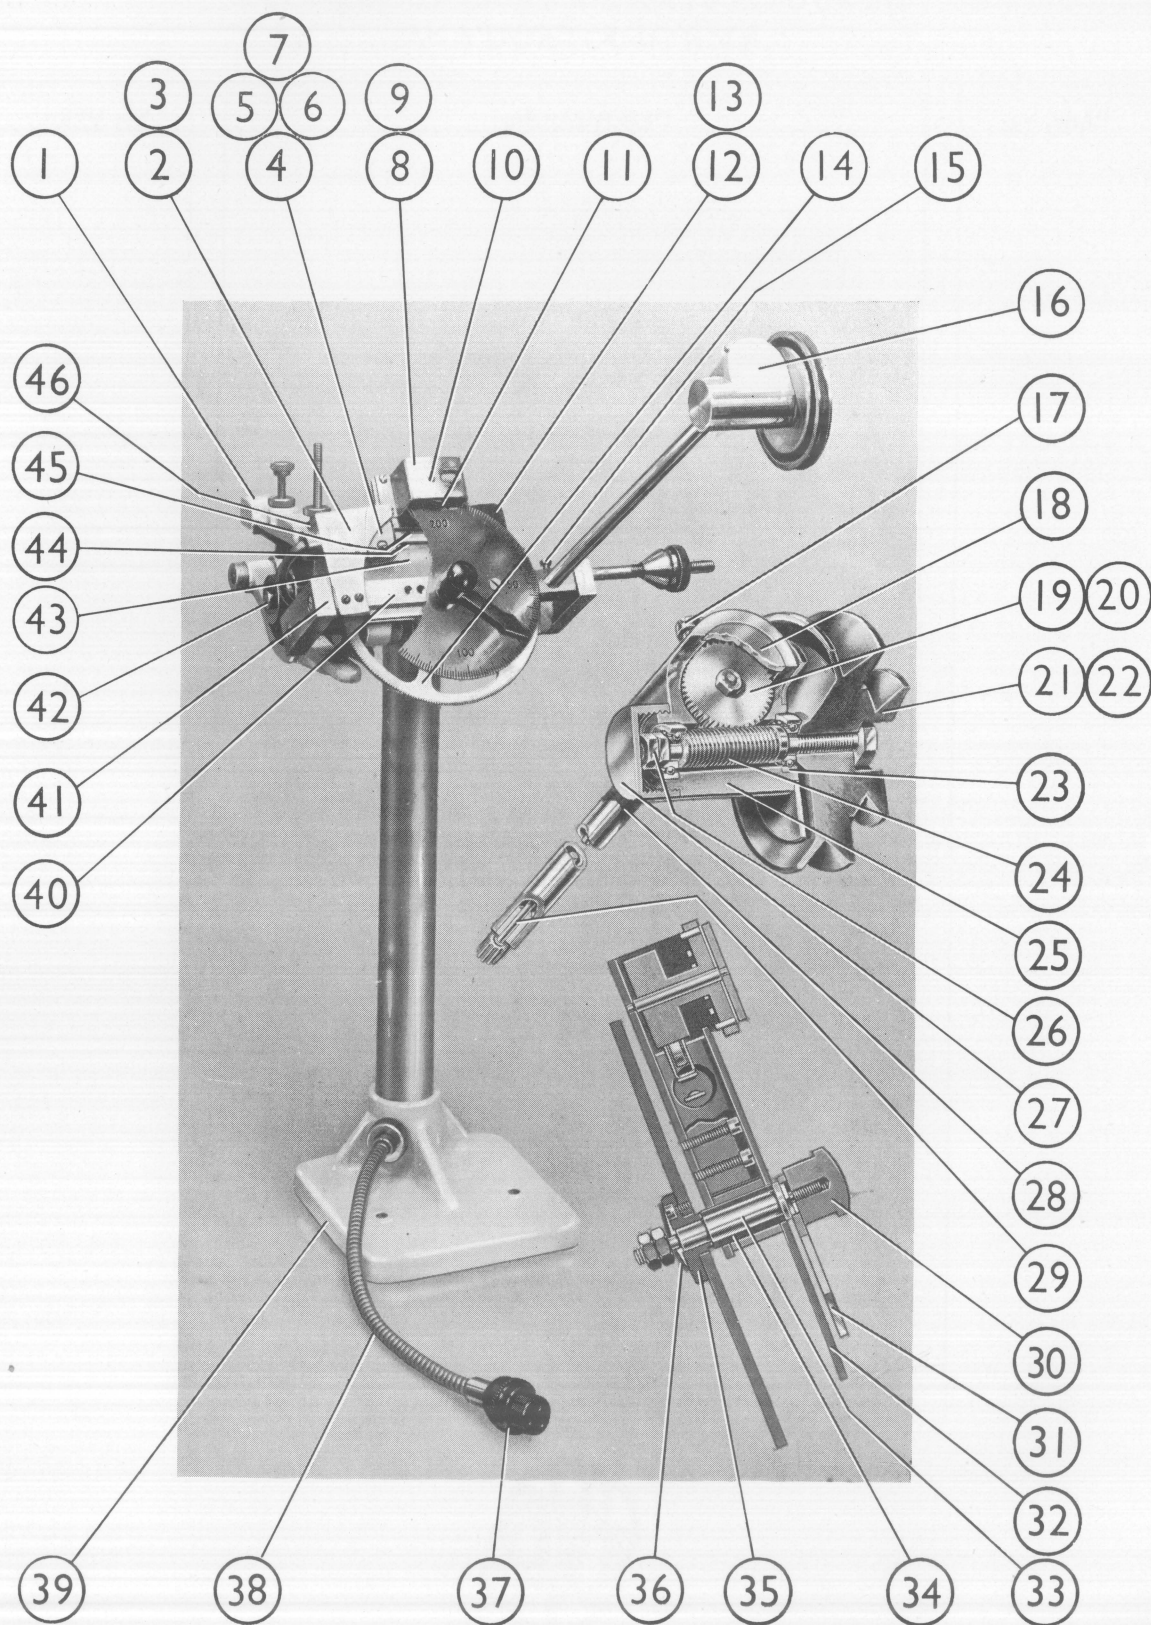

"D O U G L A S" R E E L C A R R I E R S

RECORD OF SPARE PARTS STOCKED  
BY YOUR COMPANY

PART No.

DESCRIPTION

No. OFF



"DOUGLAS" COIL WINDING MACHINES

RECORD OF SPARE PARTS STOCKED  
BY YOUR COMPANY

PART No.

DESCRIPTION

No. OFF



"D O U G L A S" R E E L C A R R I E R S

NOTES





"D O U G L A S" R E E L C A R R I E R S

NOTES





" D O U G L A S " R E E L C A R R I E R S

**OTHER MACHINES IN  
THE " AVO " RANGE**

" DOUGLAS " NO. 6  
" DOUGLAS " NO. 1  
" DOUGLAS " NO. 3  
" MACADIE " S.C.  
" MACADIE " T.D.S.M.  
" DOUGLAS " NO. 15  
" MACADIE " FULLY AUTOMATIC P.I  
" DOUGLAS " H.F.  
" DOUGLAS " NO. 3 EXTENDED BASE  
" DOUGLAS " LARGE MULTI WINDER  
" DOUGLAS " SMALL MULTI WINDER  
" DOUGLAS " DUAL HEAD  
" DOUGLAS " MAGNETO  
" DOUGLAS " SPECIAL EXTENDED BASE NO. 6  
" DOUGLAS " UNIVERSAL REEL CARRIER  
" DOUGLAS " WAVE WINDER  
" DOUGLAS " FLYER DRUM CARRIER  
" DOUGLAS " HEAVY DUTY POWER DRIVEN  
" DOUGLAS " HEAVY DUTY H.F.  
" DOUGLAS " PROGRESSIVE WAVE WINDER  
" DOUGLAS " ELECTROMAGNETIC COUNTERSHAFT  
" DOUGLAS " GENERAL PURPOSE REEL CARRIER  
" DOUGLAS " LARGE MULTI WINDER WITH PROGRAMME CONTROL  
" DOUGLAS " TYPE 62



## AVO LIMITED


AVOCET HOUSE, 92-96, VAUXHALL BRIDGE ROAD, LONDON, S.W.1

*Telephone: Victoria 3404 (12 lines)*





"DOUGLAS"  
REEL CARRIERS

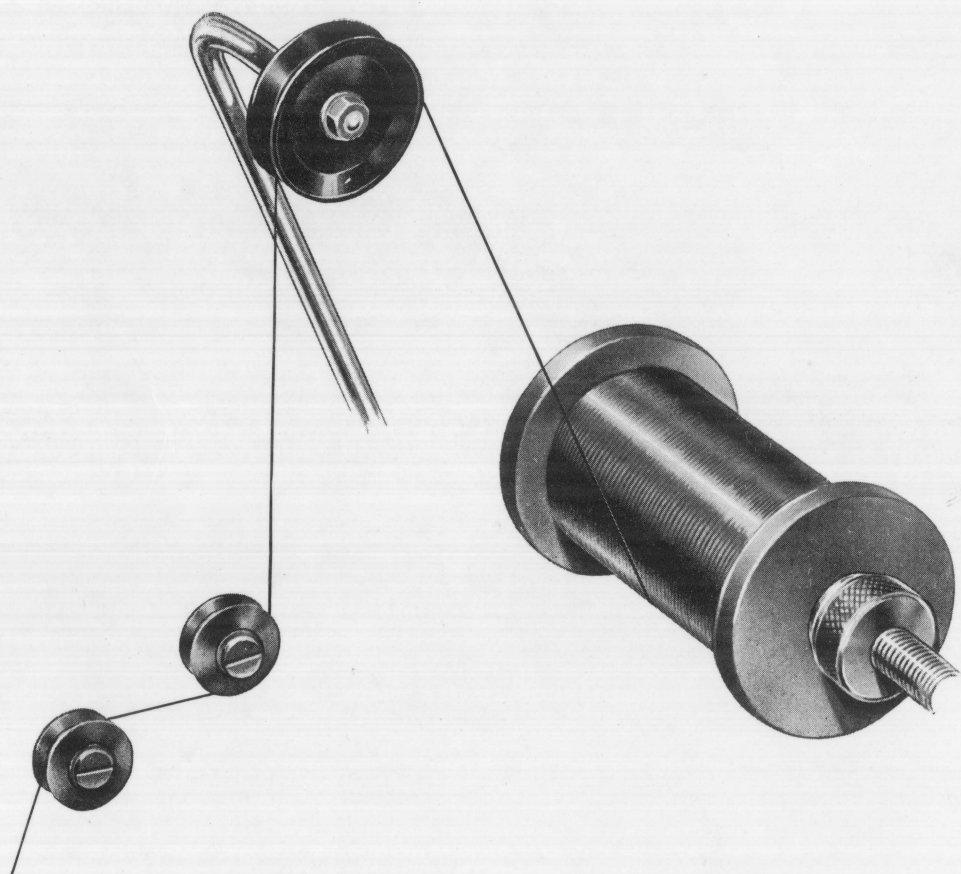

---

INSTALLATION • OPERATION • MAINTENANCE


---

AND PARTS LIST

---



**"DOUGLAS"**  
**REEL CARRIERS**

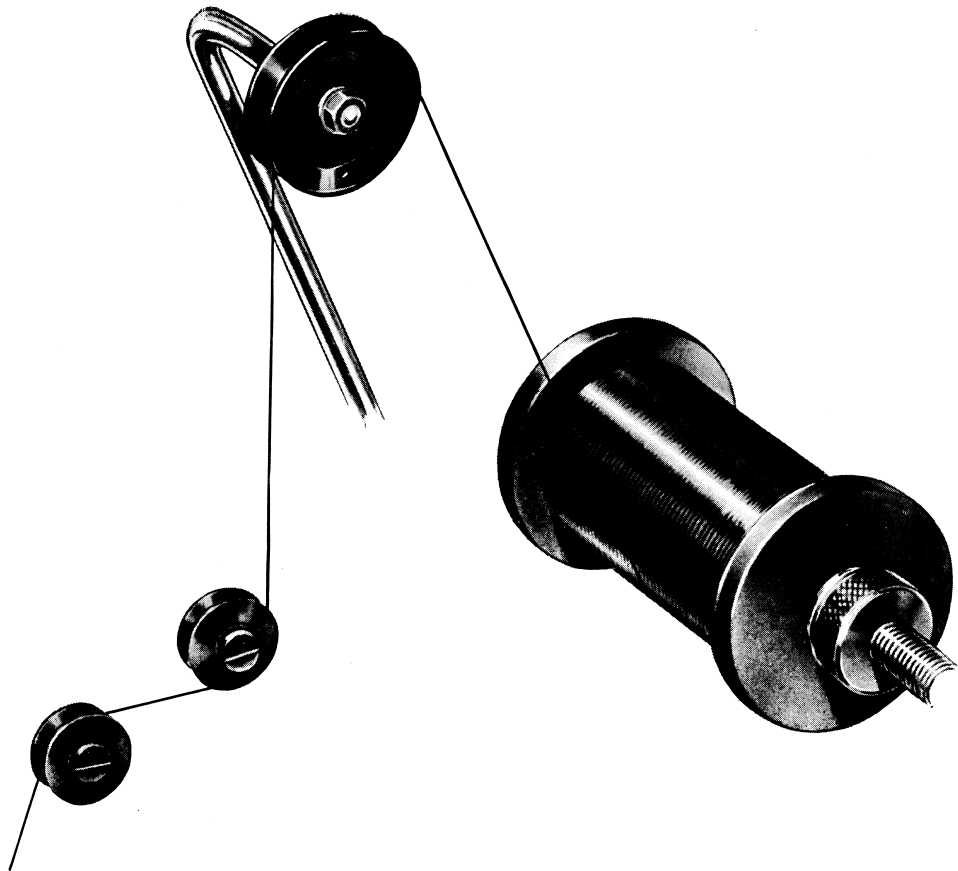

---

**INSTALLATION • OPERATION • MAINTENANCE**

---

**AND PARTS LIST**

---