

Closer Relations through
"Clarion Service Manual"

Service Manual

Overseas Sales Branch Offices

Clarion Corporation of America 5500 Rosecrans Ave., Lawndale, Calif., 90260 U.S.A. Tel: 213-973-1100 Telex: CLARIONLSA 66-4447
Clarion Corporation of America (Eastern Division) 100 Thirteenth Avenue, Ronkonkoma, New York 11779 U.S.A. Tel: 516-467-1120 Telex: 64-0787
Clarion Shoji (EUROPA) G.m.b.H. Rudolf-Diesel-Strasse 2, 6236 Eschborn 2, West Germany Tel: 06173-61041-42 Telex: 415414
Clarion (HONG KONG) Co., Ltd. 526, Ocean Centre, Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: 3-690528 Telex: HX64293 CLAHK
Clarion Canada Inc. 1401 Meyerside Dr. Mississauga, Ontario L5T 1G8, Canada Tel: 416-678-1367 Telex: 216968573 CLARION MSGA
Clarion Shoji (U.K.) Ltd. 46, Faraday Road, Dorcan Industrial Estate, Dorcan, Swindon, Wiltshire SN3 5HQ United Kingdom Tel: (0793) 24081 Telex: 44689

MAZDA Automobile Genuine Cassette Stereo Player Model PT-8005



SPECIFICATIONS:

Reproduction system: 4 track, 2 program, 2 channel stereo reproduction
Tape speed: 4.76cm/s
Wow and flutter: Less than 0.3% (W.R.M.S)
Separation: More than 30dB
Cross talk: More than 40dB
S/N ratio: More than 40dB
FF, REW time: Less than 90s (C-60)
Load impedance: $4\Omega \times 2$
Power output: More than $3.5W \times 2$ (for 10% distortion)
More than $5.5W \times 2$ (for max. volume)
Power supply voltage: DC 13.2V
Negative ground
Current consumption: 1.5A
Semiconductor: 3 ICs, 4 transistors and 9 diodes.
Dimensions: Width 150mm
Height 50mm
Depth 135mm
Weight: 1.1kg

FEATURES:

1. Auto eject at play ended.
2. Auto eject at F.F. ended.
3. Auto play at rewinded.


COMPONENT:

● PT-8005K-A Main unit 1
N

ADJUSTMENT:

1. AZIMUTH ADJUSTMENT

Play the 6.3kHz, -10VU section of the AZIMUTH tape and adjust the head azimuth adjustment screw (716-0429-00) so that the output levels are maximized in both tape running directions. (Figure 1)

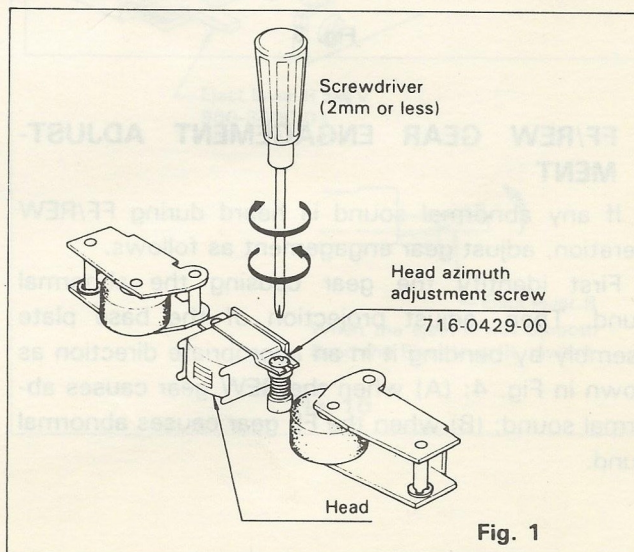

2. REEL BASE TORQUE ADJUSTMENT

The plate spring (brass) which applies torque to each reel base can be seen through the hole in the deck plate around each reel shaft. (Figure 2)

Six sets of 3-level steps are provided on each reel base and torque can be varied by changing the step on which each plate spring foot is placed; Changing it to a lower step decreases torque and changing it to a higher step increases torque.

Among the six feet of the plate spring, one rests a step with stoppers as shown in Figure 3. To adjust torque slightly lift the spring and shift it to another step with tweezers. Be careful not to lift the spring foot too much, or it may be deformed.

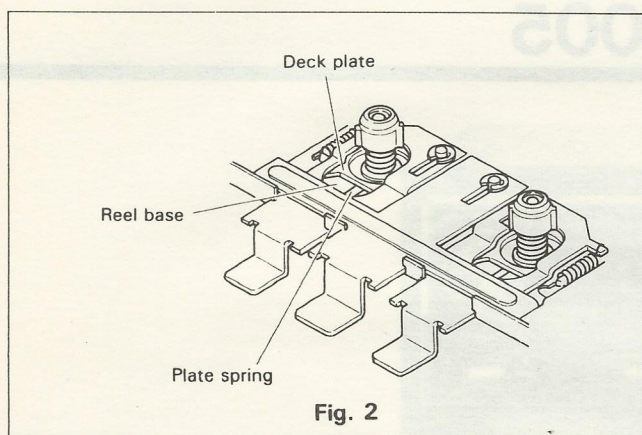


Fig. 2


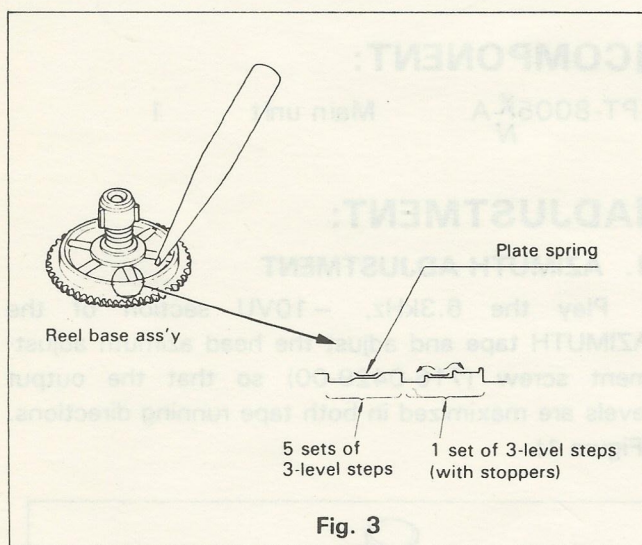


Fig. 3

3. FF/REW GEAR ENGAGEMENT ADJUSTMENT


If any abnormal sound is heard during FF/REW operation, adjust gear engagement as follows.

First identify the gear causing the abnormal sound. Then, adjust projection of the base plate assembly by bending it in an appropriate direction as shown in Fig. 4; (A) when the REW gear causes abnormal sound; (B) when the FF gear causes abnormal sound.

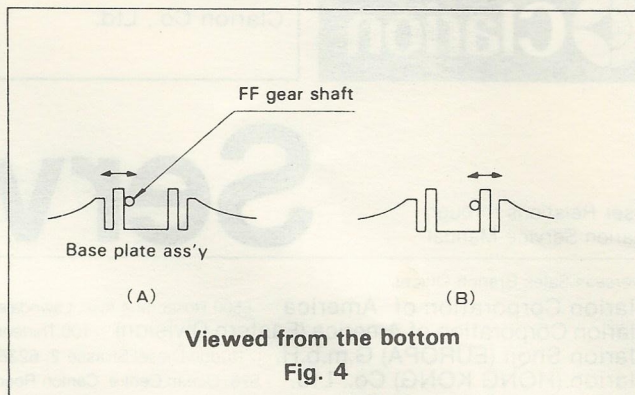

4. LEAF SWITCH ADJUSTMENT

Adjust the leaf switch gap (t) to 0.5mm by loosening the machine screw (M2×6) as shown in Figure 5.


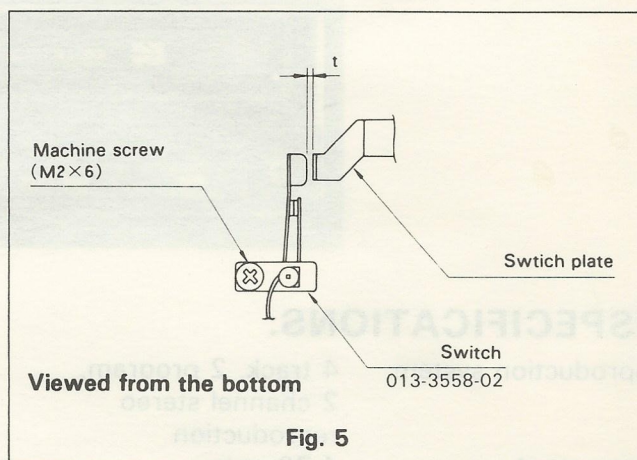


5. POWER SWITCH (MICROSWITCH) ADJUSTMENT

The microswitch is actuated as follows: when a cassette is inserted, the guide A-A assembly drops and the projection on the right side of the A-A assembly pushes switch lever A so that the other end of the switch lever A actuates the microswitch.

When a cassette is loaded, the flat part of switch lever A around the microswitch actuation point (embossed part) must contact the microswitch and must not move any further. (Figure 6)


Bend the projection (highlighted part) of the guide A-A assembly in the direction of movement of switch lever A so that the above condition is satisfied. (Figure 7)

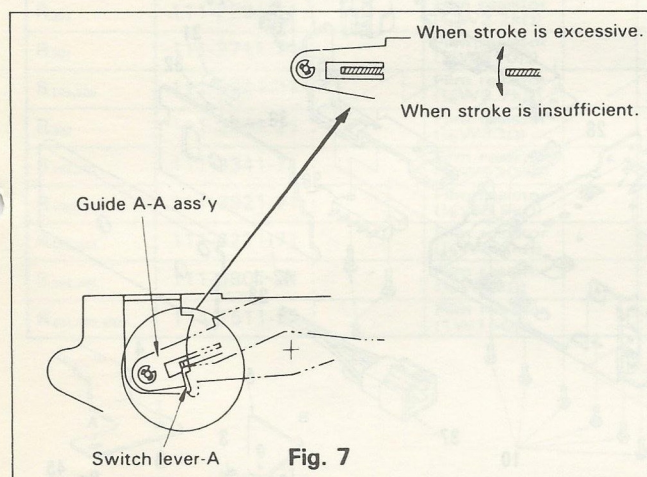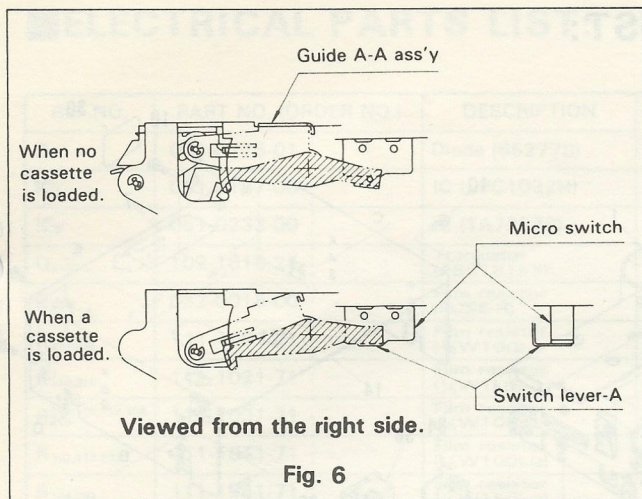

6. HEAD PLATE SLIDING PLUNGER (015-0230-00) ADJUSTMENT

Press the plunger core by hand in the direction indicated with; if the core stroke is insufficient, the lock mechanism of the plunger link will not be released and the cam gear will not move; and, if the core stroke is excessive, the drawing force will be lowered and the core will not be drawn.

Adjust distance t in Figure 8 to 1.3 ~ 1.5mm after loosening the machine screw (M2.6×3). After adjustment has been completed, press the core and check whether or not it is returned smoothly by the spring. Apply lock paint to the screw.

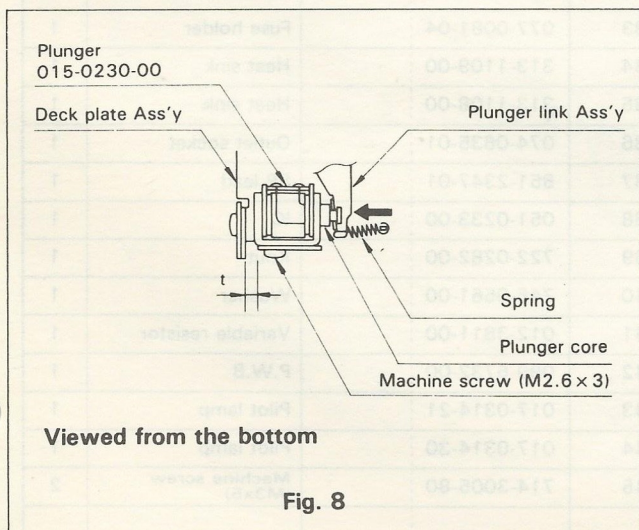


7. HEAD PLATE LATCHING PLUNGER (015-0227-04) ADJUSTMENT

When the gap between the core and plunger is too large, plunger plate B cannot be drawn by the core and head shift operation cannot be performed.


When the gap is too narrow, the head link lock may be reset.

Press the plunger (015-0230-00) core (Figure 8), turn the cam a little and adjust the gap so that the core contacts the plunger when the lock arm is all the way to the left after loosening the machine screw (M2.6×3). (Figure 9)


* Be sure to apply lock paint to the machine screw after plunger adjustment.

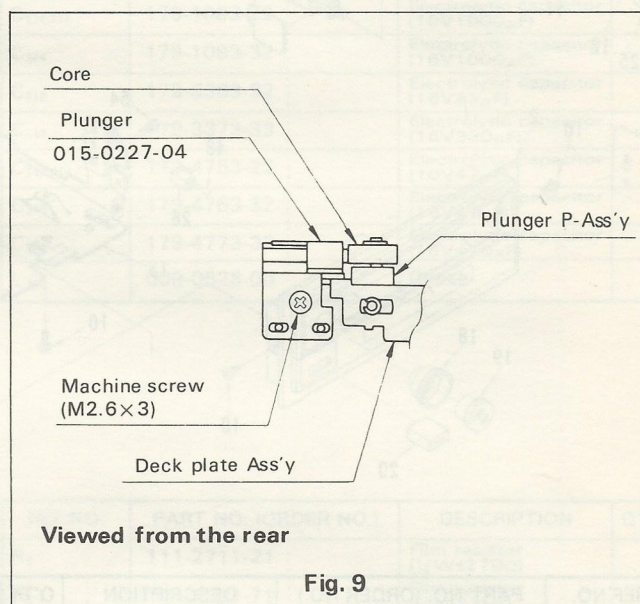

8. AUTO EJECT ADJUSTMENT

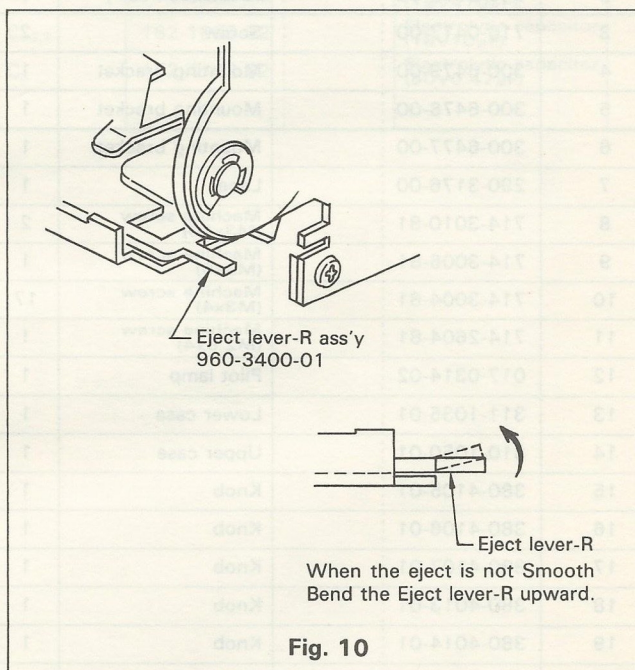

■ MAIN EXPLODED VIEW • PARTS LIST:

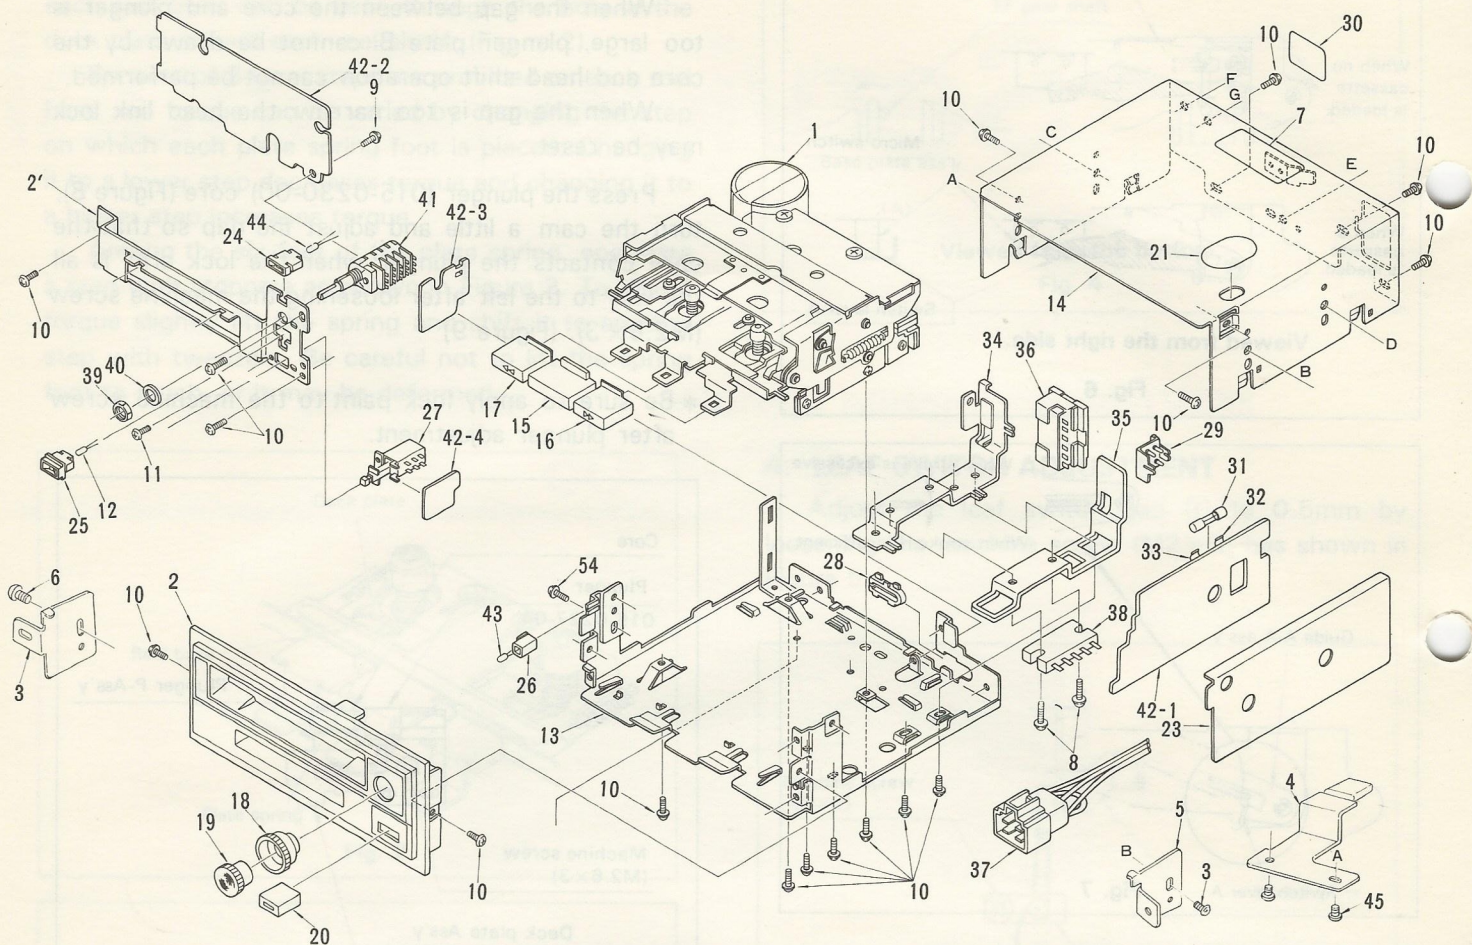

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
1	930-0506-00	Tape mechanism	1
2	940-2677-02	Escutcheon ass'y	1
3	716-0417-00	Screw	2
4	300-6479-00	Mounting bracket	1
5	300-6478-00	Mounting bracket	1
6	300-6477-00	Mounting bracket	1
7	290-3176-00	Label	1
8	714-3010-81	Machine screw (M3x10)	2
9	714-3006-81	Machine screw (M3x6)	1
10	714-3004-81	Machine screw (M3x4)	17
11	714-2604-81	Machine screw (M2.6x4)	1
12	017-0314-02	Pilot lamp	1
13	311-1035-01	Lower case	1
14	310-1050-01	Upper case	1
15	380-4105-01	Knob	1
16	380-4106-01	Knob	1
17	380-4107-01	Knob	1
18	380-4013-01	Knob	1
19	380-4014-01	Knob	1
20	380-4015-00	Knob	1
21	290-2567-01	Label	1
22	309-0505-00	Front plate	1
23	347-0935-01	Insulator	1

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
24	345-3425-00	P.L holder	1
25	345-3264-00	P.L holder	1
26	345-3265-03	P.L holder	1
27	013-3346-03	Switch	1
28	335-0818-00	Lead holder	1
29	944-0576-00	Filter ass'y	1
30	286-3678-00	Set plate	1
31	120-0050-02	Fuse (5A)	1
32	077-0081-05	Fuse holder	1
33	077-0081-04	Fuse holder	1
34	313-1109-00	Heat sink	1
35	313-1108-00	Heat sink	1
36	074-0635-01	Outlet socket	1
37	851-2347-01	SP lead	1
38	051-0233-00	IC	1
39	722-0282-00	Knut	1
40	745-0561-00	Washer	1
41	012-3811-00	Variable resistor	1
42	099-6732-00	P.W.B	1
43	017-0314-21	Pilot lamp	1
44	017-0314-30	Pilot lamp	1
45	714-3005-80	Machine screw (M3x5)	2


ELECTRICAL PARTS LIST:

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY	REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
D ₉	001-0276-01	Diode (S5277B)	1	C _{107,207}	042-0298-00	Electrolytic capacitor (50V1 μ F NP)	2
IC ₁	051-0187-00	IC (μ PC1032H)	1	C _{110,115,210,215}	043-0126-00	Ceramic capacitor (12V0.2 μ F)	4
IC ₂	051-0233-00	IC (TA7227P)	1	C _{109,209}	043-0165-00	Ceramic capacitor (12V0.1 μ F)	2
Q ₁₋₃	102-1815-25	Transistor (2SC1815Y)	3	C _{111,211}	160-1522-05	Ceramic capacitor (0.0015 μ F)	2
R ₄₀₄	032-0018-00	Film resistor (FUSE-R)	1	C _{112,212}	171-6823-06	Ceramic capacitor (0.0068 μ F)	2
R _{111,211}	111-1001-71	Film resistor ($\frac{1}{6}$ W10 Ω)	2	C _{106,206}	173-1032-10	Polyester capacitor (0.01 μ F)	2
R _{110,210}	111-1021-71	Film resistor ($\frac{1}{6}$ W1k Ω)	2	C _{303,401}	173-1042-10	Polyester capacitor (0.1 μ F)	2
R _{108,109,113,208,209}	111-1031-71	Film resistor ($\frac{1}{6}$ W10k Ω)	5	C _{101,201}	173-2222-10	Polyester capacitor (0.0022 μ F)	2
R _{101,112,201}	111-1041-71	Film resistor ($\frac{1}{6}$ W100k Ω)	3	C _{104,204}	173-2232-10	Polyester capacitor (0.022 μ F)	2
R _{104,204}	111-1541-71	Film resistor ($\frac{1}{6}$ W150k Ω)	2	C _{102,105,108,202,205,208}	179-1053-69	Electrolytic capacitor (50V1 μ F)	6
R ₃₀₂	111-2221-71	Film resistor ($\frac{1}{6}$ W2.2k Ω)	1	C _{103,113,203,213}	179-1073-29	Electrolytic capacitor (10V100 μ F)	4
R ₃₀₁	111-2711-71	Film resistor ($\frac{1}{6}$ W270 Ω)	1	C _{116,216}	179-1083-22	Electrolytic capacitor (10V1000 μ F)	2
R _{105,205}	111-2721-71	Film resistor ($\frac{1}{6}$ W2.7k Ω)	2	C ₃₀₄	179-1083-32	Electrolytic capacitor (16V1000 μ F)	1
R ₃₀₂	111-3301-71	Film resistor ($\frac{1}{6}$ W33 Ω)	1	C ₁₁₈	179-3363-32	Electrolytic capacitor (16V33 μ F)	1
R _{107,207}	111-3341-71	Film resistor ($\frac{1}{6}$ W330k Ω)	2	C ₁₁₇	179-3373-33	Electrolytic capacitor (16V330 μ F)	1
R _{106,206}	111-3921-71	Film resistor ($\frac{1}{6}$ W3.9k Ω)	2	C _{114,214}	179-4763-22	Electrolytic capacitor (10V47 μ F)	2
R _{103,203}	111-6221-71	Film resistor ($\frac{1}{6}$ W6.2k Ω)	2	C ₃₀₂	179-4763-32	Electrolytic capacitor (16V47 μ F)	1
R _{102,202}	111-6801-71	Film resistor ($\frac{1}{6}$ W68 Ω)	2	C ₃₀₁	179-4773-33	Electrolytic capacitor (16V470 μ F)	1
R _{401,402,403}	114-1511-52	Film resistor (1W150 Ω)	3	L ₃₀₁	009-0625-00	Choke	1

◎Tape mechanism section

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY	REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
D _{7,8}	001-0276-00	Diode (S5277B)	2	R ₃	111-2711-21	Film resistor ($\frac{1}{4}$ Ws270 Ω)	1
D ₁₋₆	001-0330-00	Diode (1SS119)	6	R ₁	111-3331-71	Film resistor ($\frac{1}{6}$ W33k Ω)	1
IC ₁₀	051-0403-01	IC (TD6308AP)	1	R ₅	114-2291-51	Film resistor (1W2.2 Ω)	1
Q ₁₀	100-1020-25	Transistor (2SA1020YZ)	1	C ₅	179-4773-33	Electrolytic capacitor (16V470 μ F)	1
R ₂	111-1011-71	Film resistor ($\frac{1}{6}$ W100 Ω)	1	C _{1,2,3}	182-1063-32	Electrolytic capacitor (16V10 μ F)	3
R ₄	111-1021-71	Film resistor ($\frac{1}{6}$ W1k Ω)	1	C ₄	182-4743-62	Electrolytic capacitor (50V0.47 μ F)	1
R ₆	111-2221-71	Film resistor ($\frac{1}{6}$ W2.2k Ω)	1				

■ TAPE MECHANISM EXPLODED VIEW • PARTS LIST:

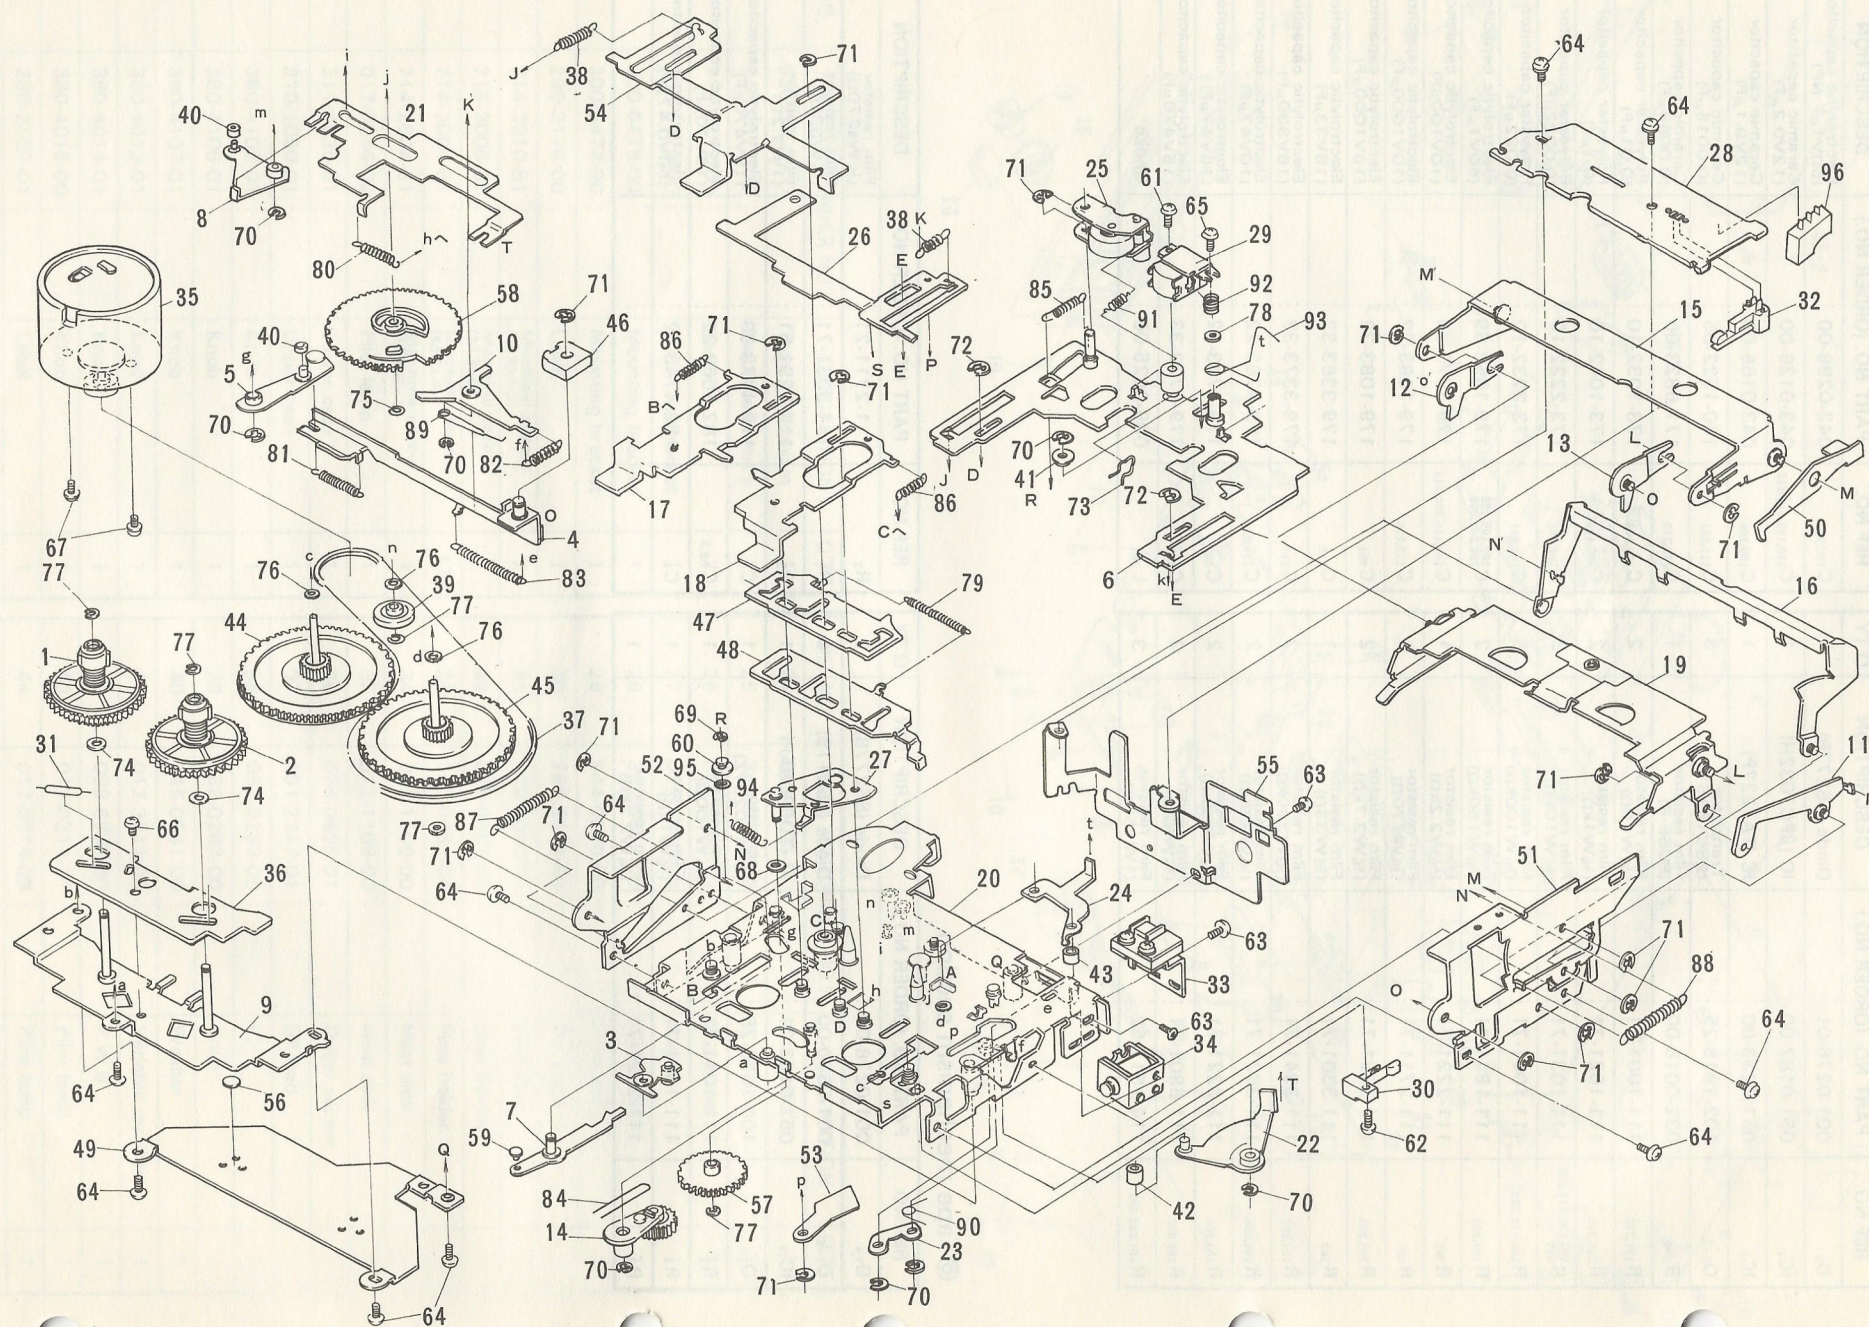


REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
1	960-3259-03	Reel base ass'y	1
2	960-3259-06	Reel base ass'y	1
3	960-3264-02	FF plate ass'y	1
4	960-3270-09	Plunger P ass'y	1
5	960-3271-04	Lock arm ass'y	1
6	960-3272-10	Head plate ass'y	1
7	960-3273-05	Head link ass'y	1
8	960-3274-04	Power link ass'y	1
9	960-3275-04	Base P ass'y	1
10	960-3276-02	Plunger L ass'y	1
11	960-3280-02	Guide A-B ass'y	1
12	960-3281-01	Eject L-L ass'y	1
13	960-3282-01	Eject L-R ass'y	1
14	960-3283-01	FF gear ass'y	1
15	960-3290-03	Guide A-A ass'y	1
16	960-3291-03	Swing L ass'y	1
17	960-3298-00	FF lever ass'y	1
18	960-3299-00	REW lever ass'y	1
19	960-3311-00	Pack guide ass'y	1
20	960-3394-00	Deck plate ass'y	1
21	960-3395-01	Power P ass'y	1
22	960-3396-00	Power L-B ass'y	1
23	960-3397-00	Lock arm B ass'y	1
24	960-3398-00	Lock plate ass'y	1
25	960-3399-00	Roller ass'y	1
26	960-3400-01	Eject L-R ass'y	1
27	960-3402-00	Idler P ass'y	1
28	099-6594-00	P.W.B	1
29	011-0281-00	Head	1
30	013-3558-02	Switch	1
31	013-3601-00	Switch	1
32	013-3669-00	Switch	1

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
33	015-0227-04	Plunger	1
34	015-0230-00	Plunger	1
35	960-3517-00	DC motor ass'y	1
36	099-6206-01	P.W.B	1
37	602-0065-01	Belt	1
38	750-2276-00	Spring	2
39	604-0024-00	Tension pulley	1
40	610-0092-00	Roller E	2
41	610-0093-01	Roller C	1
42	610-0117-00	Link roller	1
43	610-0118-00	Roller F	1
44	611-0061-00	Flywheel	1
45	613-0019-00	Power gear	1
46	630-1198-03	Core	1
47	630-1305-02	FF lock	1
48	630-1307-02	Switch plate	1
49	630-1316-02	Bottom plate	1
50	630-1326-02	Switch lever A	1
51	630-1332-06	Side panel R	1
52	630-1333-03	Side panel L	1
53	630-1482-01	Eject link	1
54	630-1487-00	Eject lever L	1
55	630-1488-00	Support plate B	1
56	631-0314-00	Thrust plate	1
57	631-0343-00	Idler gear	1
58	631-0345-03	Cam gear	1
59	631-0385-00	Slider	1
60	632-1069-01	Head L roller	1
61	714-2004-81	Machine screw (M2x4)	1
62	714-2006-81	Machine screw (M2x6)	1
63	714-2603-81	Machine screw (M2.6x3)	3
64	714-2604-81	Machine screw (M2.6x4)	10

REF.NO.	PART NO. (ORDER NO.)	DESCRIPTION	Q'TY
65	716-0429-00	Screw	1
66	716-0479-00	Screw	1
67	716-0347-00	Screw	2
68	746-0714-00	Washer	1
69	743-1200-10	E-ring	1
70	743-1500-10	E-ring	8
71	743-2000-10	E-ring	16
72	743-2500-10	E-ring	2
73	744-0021-00	Step retainer	1
74	745-0586-00	Washer	2
75	746-0622-01	Washer	1
76	746-0624-00	Washer	3
77	746-0628-01	Washer	5
78	746-0664-00	Washer	1
79	750-2049-00	Spring	1
80	750-2051-00	Spring	1
81	750-2052-03	Spring	1
82	750-2053-01	Spring	1
83	750-2054-01	Spring	1
84	750-2055-00	Spring	1
85	750-2057-02	Spring	1
86	750-2058-00	Spring	2
87	750-2062-00	Spring	1
88	750-2063-02	Spring	1
89	750-2093-02	Spring	1
90	750-2200-00	Torsion spring	1
91	750-2201-00	Spring	1
92	750-2202-01	Spring	1
93	750-2203-00	Torsion spring	1
94	750-2204-00	Spring	1
95	746-0621-00	Washer	1
96	013-3580-00	Switch	1

CIRCUIT DIAGRAM:

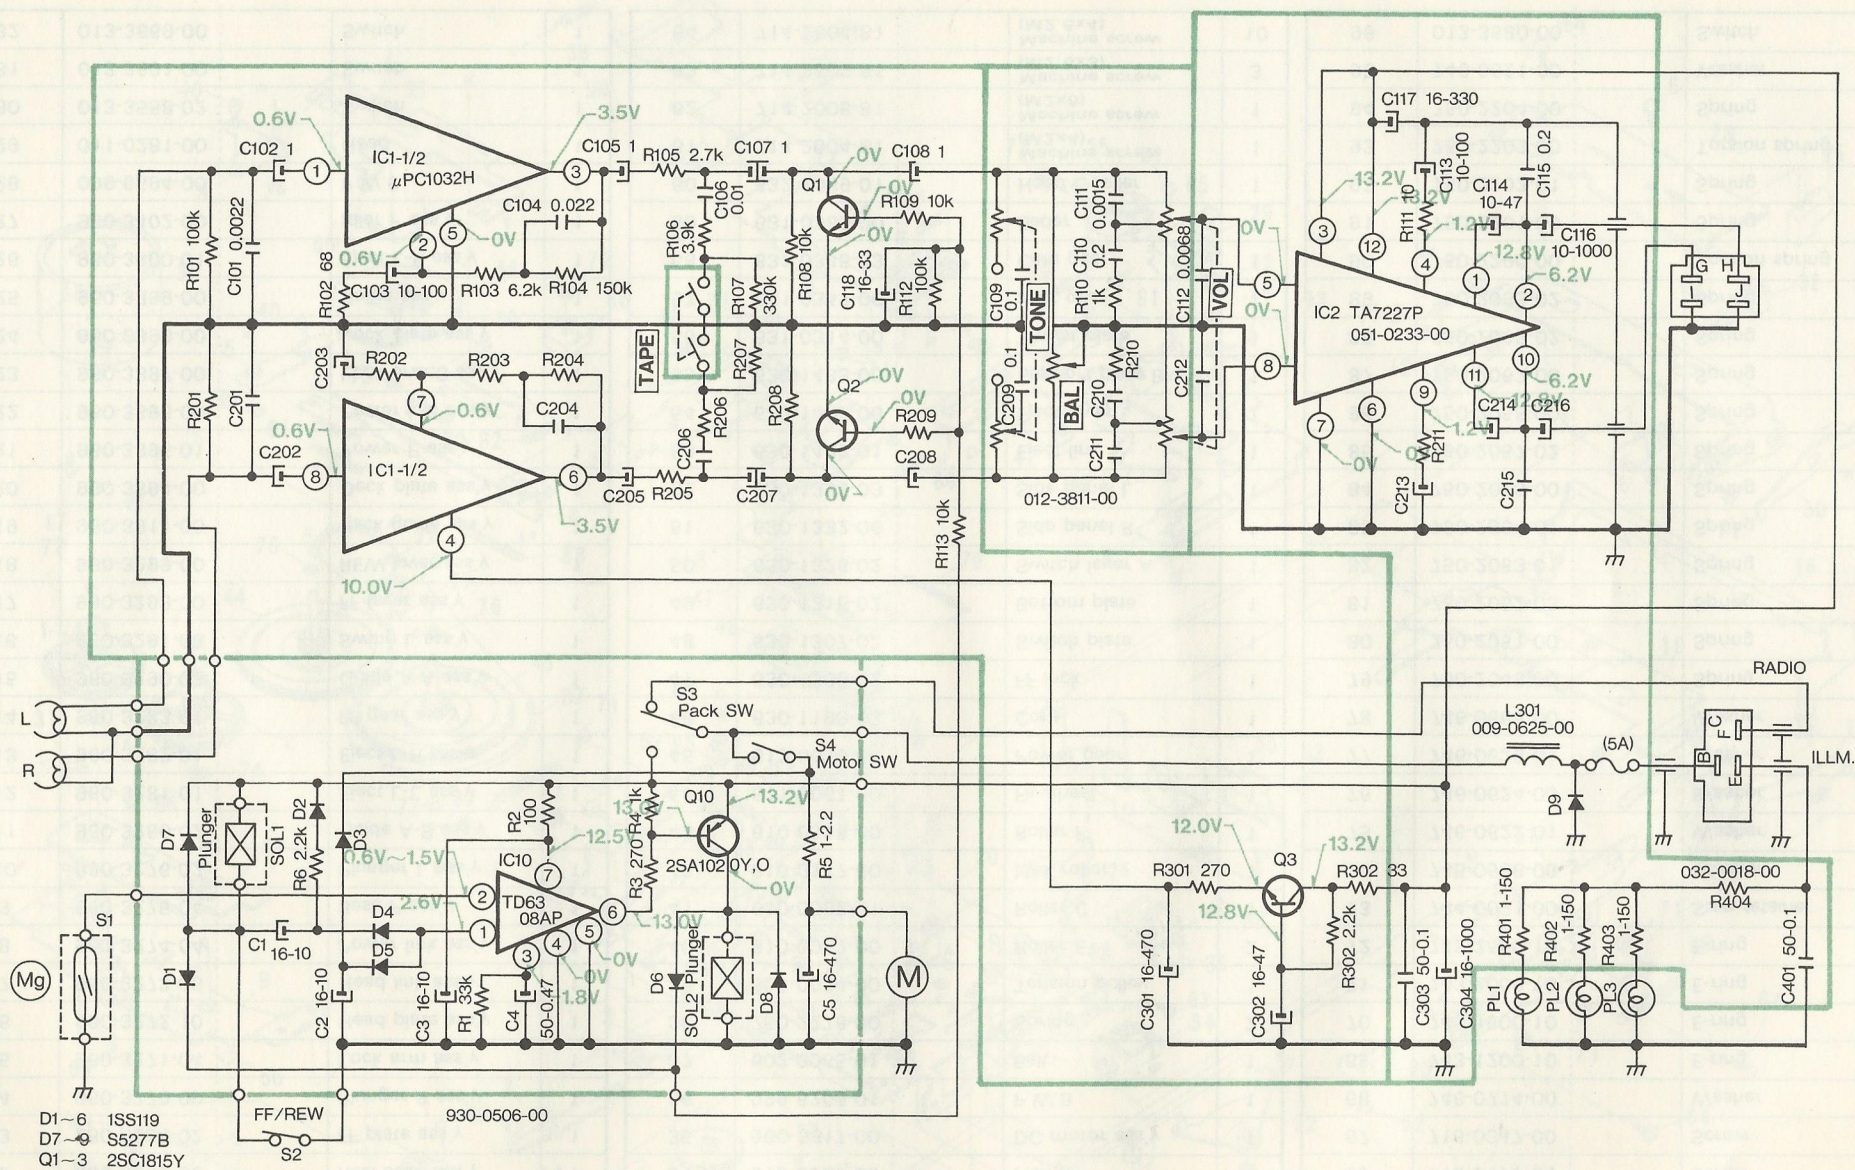

PRINTED WIRING BOARD:

A	_____
B	Power supply
C	_____
D	_____
E	Illumination
F	Radio power supply

G	Speaker R ⊕
H	Speaker L ⊕
I	Speaker R ⊖
J	Speaker L ⊖

